 



Quick Installation Guide

L2+ Managed PoE Switch



WI-PMS552F

 
1. Package Contents




Switch × 1



Installation Guide × 1

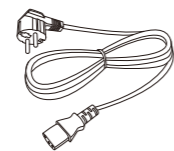

Power Cord × 1

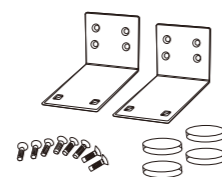

Mounting Accessories
(hook × 2; mat × 4; screw × 8)

2. Appearance Overview


For WI-PMS552F

• Front panel

Reset

1 × Console Port

LED indicator

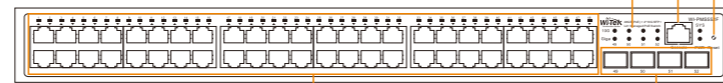

48 × 10/100/1000Mbps PoE+ Ports

4 × 10G SFP+ Slots

• Back panel



Power port


Grounding

• LED indicator



LED	
PWR Indicator	On: the device power on is normal Off: the device is power off or failed
SYS Indicator	Blinking: device initialization On: device on and normal operation
Data indicator	1-48: (Data indicator is green) Off: ports link down On: ports link up Blinking: data on TX/RX
PoE Indicator	1-48 port: (PoE indicator is yellow) Off: PoE not working On: PoE working
10G Indicator	On: The port negotiated rate is 10 Gbps
Giga Indicator	On: The port negotiated rate is 1000 Mbps
Power Supply	
Power Supply	AC 100-240V 50/60HZ

3. Installation

• Desktop installation

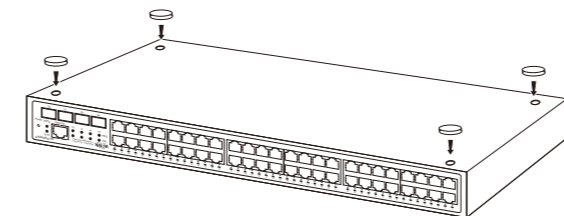

• Rack-mount Installation

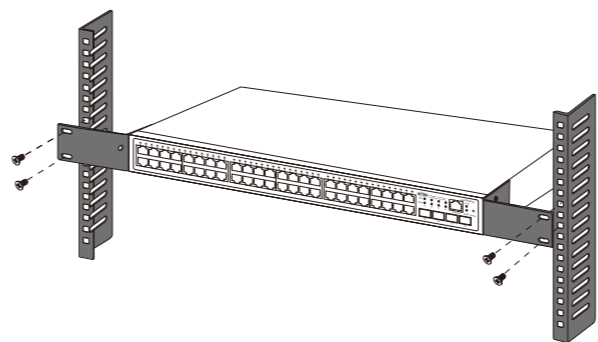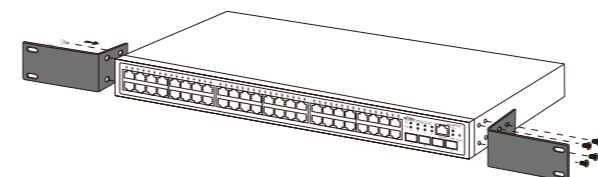

4. Login WEB UI

For more L2+ management functions, please login the Web-Based UI as the following steps:

Step 1. Find the IP address of the switch.

- The default login IP address of this series switches is 192.168.0.1, with a subnet mask of 255.255.255.0.

- If the switch receives an IP address from a DHCP server in your network. You can find this IP address on the DHCP server.

Step 2. Configure IP address on your PC to ensure that the switch and PC are in the same subnet

- If the switch uses the static IP address of 192.168.0.1, configure your PC's IP address as 192.168.0.x ("x" ranges from 2 to 254), and set the subnet mask as 255.255.255.0.

- If the switch uses an IP address assigned by a DHCP server, set your PC to obtain an IP address automatically from the DHCP server.

Step 3. Launch a web browser on your PC. Enter the IP address of the switch in the address bar and provide the username and password.

- The default login username and password are both "admin".

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Technical Support



Company Website



Cloud Management

Wireless-Tek Technology Limited
Address: Biaofan Technology Building 402, Bao'an street,
Baoan District, Shenzhen City, Guangdong, China
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com