



Wall Mount Bracket Quick Installation Guide



1. Package Contents

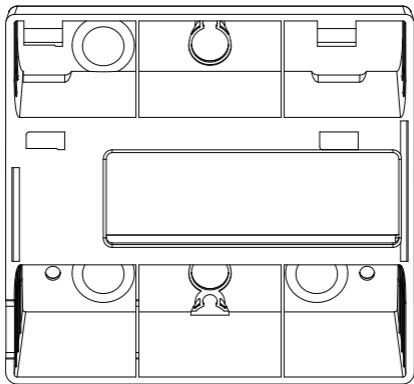

Wall Mount Bracket



Quick Installation Guide




Screw

2. Physical specification

| Model | Size |
|--------------------|---------------------------|
| Wall Mount Bracket | 137.9 x 117.5 x 59.3 (mm) |

3. Installation Diagram

- 1) Place the bracket in the position to be installed and mark the position of the screw hole;
- 2) After removing the bracket, use an electric drill to drill the 2 holes at the marked;
- 3) Push or hammer screw anchors into the drilled holes, then insert 2 screws, as shown below:

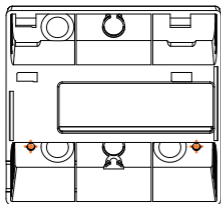


+ Screw position

 x2  x2


TA4*25mm



4) Insert the tabs on the wall mount bracket into the slots on the back of IP phone. And then slide the wall mount bracket to right, as shown below:

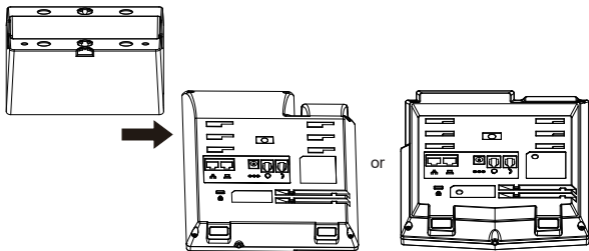

5) Pull the hookswitch tab in the handset cradle and rotate the hookswitch tab 180 degrees, then reinsert the hookswitch tab, as shown below:

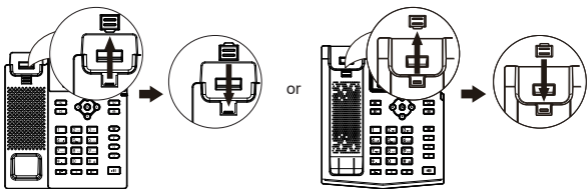

6) Finally, mount the IP phone to the wall, as shown below:

