




Wi-Tek L2 Managed Switches

CLI User Manual

www.wireless-tek.com

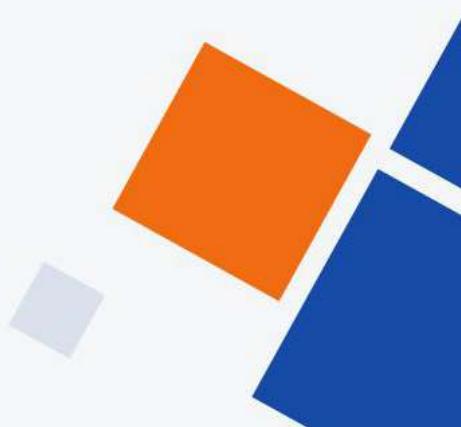

Command Line Interface

User Guide

1. AAA.....	9
aaa authentication.....	9
login authentication.....	10
ip http login authentication.....	11
enable authentication.....	12
show aaa authentication.....	13
show line lists.....	14
tacacs default-config.....	14
tacacs host.....	15
show tacacs default-config.....	16
show tacacs.....	17
show default-config.....	17
radius host.....	18
show radius default-config.....	19
show radius.....	20
2. ACL.....	20
mac acl.....	20
permit (MAC).....	21
deny (MAC).....	22
ip acl.....	24
permit (IP).....	24
deny (IP).....	26
ipv6 acl.....	28
permit (IPv6).....	28
deny (IPv6).....	30
bind acl.....	32
show acl.....	32
show acl utilization.....	33
3. Administration.....	33
configure.....	33
clear arp.....	34
clear service.....	34
enable.....	35
end.....	35
exit.....	36
history.....	37
hostname.....	38
interface.....	38
ip address.....	39
ip default-gateway.....	40
ip dhcp.....	40
ip dns.....	41
ip dns lookup.....	41
ipv6 autoconfig.....	42
ipv6 address.....	43
ipv6 default-gateway.....	43
ipv6 dhcp.....	44
ip service.....	45
ip session-timeout.....	46
ip ssh.....	46
line.....	47
reboot.....	48
enable password.....	48
exec-timeout.....	49
password-thresh.....	50
ping.....	51
traceroute.....	52
show arp.....	52
show cpu utilization.....	53
show history.....	53
show info.....	54
show ip.....	55
show ip dhcp.....	55
show ip dns.....	56
show ip http.....	56
show ipv6.....	57
show ipv6 dhcp.....	57
show line.....	58
show memory statistics.....	58
show privilege.....	59
show username.....	59
show users.....	60
show version.....	60
silent-time.....	61
system name.....	62
system contact.....	62

Command Line Interface

User Guide

system location.....	63
terminal length.....	64
username.....	64
4. Authentication Manager.....	65
authentication.....	65
authentication (Interface).....	66
authentication mac radius.....	67
authentication mac local.....	67
authentication guest-vlan.....	68
authentication guest-vlan (Interface).....	69
authentication host-mode.....	69
authentication max-hosts.....	70
authentication method.....	71
authentication order.....	71
authentication port-control.....	72
authentication radius-attributes vlan.....	73
authentication reauth.....	73
authentication timer inactive.....	74
authentication timer quiet.....	75
authentication timer reauth.....	76
authentication web max-login-attempts.....	77
clear authentication sessions.....	77
dot1x.....	78
dot1x guest-vlan.....	79
dot1x max-req.....	79
dot1x port-control.....	80
dot1x reauth.....	81
dot1x timeout reauth-period.....	81
dot1x timeout quiet-period.....	82
dot1x timeout server-timeout.....	83
dot1x timeout supp-timeout.....	84
dot1x timeout tx-period.....	85
show authentication.....	85
show authentication sessions.....	87
5. Diagnostic.....	88
show cable-diag.....	88
show fiber-transceiver.....	89
6. DHCP Snooping.....	90
ip dhcp snooping.....	90
ip dhcp snooping vlan.....	90
ip dhcp snooping trust.....	91
ip dhcp snooping verify.....	92
ip dhcp snooping rate-limit.....	92
clear ip dhcp snooping statistics.....	93
show ip dhcp snooping.....	94
show ip dhcp snooping interface.....	94
show ip dhcp snooping binding.....	95
ip dhcp snooping option.....	95
ip dhcp snooping option action.....	96
ip dhcp snooping option circuit-id.....	96
ip dhcp snooping option remote-id.....	97
show ip dhcp snooping option.....	97
ip dhcp snooping database.....	98
ip dhcp snooping database write-delay.....	99
ip dhcp snooping database timeout.....	100
clear ip dhcp snooping database statistics.....	101
renew ip dhcp snooping database.....	101
show ip dhcp snooping database.....	102
7. DoS.....	103
dos.....	103
dos (interface).....	168
show dos.....	168
8. Dynamic ARP Inspection.....	169
ip arp inspection.....	169
ip arp inspection vlan.....	170
ip arp inspection trust.....	170
ip arp inspection validate.....	171
ip arp inspection rate-limit.....	172
clear ip arp inspection statistics.....	172
show ip arp inspection.....	173
show ip arp inspection interface.....	173
9. GVRP.....	174
gvrp (Global).....	174
gvrp (Interface).....	174
gvrp registration-mode.....	175
gvrp vlan-create-forbid.....	175

Command Line Interface

User Guide

clear gvrp statistics.....	176
show gvrp statistics.....	176
show gvrp configuration.....	178
10. IGMP Snooping.....	179
ip igmp snooping.....	179
ip igmp snooping report-suppression.....	179
ip igmp snooping version.....	180
ip igmp snooping unknown-multicast action.....	181
ip igmp snooping querier.....	181
ip igmp snooping vlan.....	182
ip igmp snooping vlan fastleave.....	183
ip igmp snooping vlan last-member-query-count.....	183
ip igmp snooping vlan last-member-query-interval.....	184
ip igmp snooping vlan query-interval.....	184
ip igmp snooping vlan response-time.....	185
ip igmp snooping vlan robustness-variable.....	185
ip igmp snooping vlan router.....	186
ip igmp snooping vlan forbidden-port.....	186
ip igmp snooping vlan static-port.....	187
ip igmp snooping vlan forbidden-router-port.....	188
ip igmp snooping vlan static-router-port.....	188
ip igmp snooping vlan static-group.....	189
ip igmp snooping vlan group.....	189
profile range.....	190
ip igmp profile.....	190
ip igmp filter.....	191
ip igmp max-groups.....	191
ip igmp max-groups action.....	192
clear ip igmp snooping groups.....	192
clear ip igmp snooping statistics.....	193
show ip igmp snooping groups counters.....	194
show ip igmp snooping groups.....	194
show ip igmp snooping router.....	195
show ip igmp snooping querier.....	196
show ip igmp snooping.....	196
show ip igmp snooping vlan.....	197
show ip igmp snooping forward-all.....	198
show ip igmp profile.....	198
show ip igmp filter.....	199
show ip igmp max-group.....	200
show ip igmp max-group action.....	200
11. IP Source Guard.....	201
ip source verify.....	201
ip source binding.....	202
show ip source interface.....	202
show ip source binding.....	203
12. Link Aggregation.....	203
lag.....	203
lag load-balance.....	204
lacp port-priority.....	205
lacp system-priority.....	206
lacp timeout.....	206
show lacp.....	207
13. LLDP.....	209
clear lldp statistics.....	209
lldp.....	210
lldp rx.....	210
lldp tx-interval.....	211
lldp reinit-delay.....	212
lldp holdtime-multiplier.....	212
lldp lldpdu.....	213
lldp med.....	214
lldp med fast-start-repeat-count.....	215
lldp med location.....	215
lldp med network-policy.....	216
lldp med network-policy (Interface).....	217
lldp med network-policy voice auto.....	218
lldp med tlv-select.....	219
lldp tlv-select.....	221
lldp tlv-select pvid.....	222
lldp tlv-select vlan-name.....	223
lldp tx.....	223
lldp tx-delay.....	224
show lldp.....	225
show lldp local-device.....	226
show lldp med.....	227

Command Line Interface

User Guide

show lldp neighbor.....	229
show lldp statistics.....	231
show lldp tlv-overloading.....	233
14. Logging.....	235
clear logging.....	235
logging.....	235
logging host.....	236
logging severity.....	236
show logging.....	237
15. MAC Address Table.....	239
clear mac address-table.....	239
mac address-table aging-time.....	239
mac address-table static.....	240
show mac address-table.....	241
show mac address-table counters.....	190
show mac address-table aging-time.....	190
16. MAC VLAN.....	191
vlan mac-vlan group (Global).....	191
vlan mac-vlan group (Interface).....	191
show vlan mac-vlan groups.....	192
show vlan mac-vlan interfaces.....	193
17. Management ACL.....	193
management access-list.....	193
management access-class.....	194
deny.....	194
permit.....	195
no sequence.....	196
show management access-class.....	196
show management access-list.....	197
18. Mirror.....	197
mirror session destination interface.....	197
mirror session source interface.....	198
show mirror.....	199
19. MLD Snooping.....	200
ipv6 mld snooping.....	200
ipv6 mld snooping report-suppression.....	200
ipv6 mld snooping version.....	201
ipv6 mld snooping unknown-multicast action.....	201
ipv6 mld snooping vlan.....	202
ipv6 mld snooping vlan parameters.....	202
ipv6 mld snooping vlan last-member-query-count.....	204
ipv6 mld snooping vlan last-member-query-interval.....	204
ipv6 mld snooping vlan query-interval.....	205
ipv6 mld snooping vlan response-time.....	206
ipv6 mld snooping vlan robustness-variable.....	206
ipv6 mld snooping vlan router.....	207
ipv6 mld snooping vlan static-port.....	207
ipv6 mld snooping vlan forbidden-router-port.....	208
ipv6 mld snooping vlan forbidden-router-port.....	208
ipv6 mld snooping vlan static router port.....	209
ipv6 mld snooping vlan static-group.....	209
ipv6 mld snooping vlan group.....	210
profile range.....	211
ipv6 mld profile.....	211
ipv6 mld filter.....	212
ipv6 mld max-groups.....	212
ip igmp max-groups action.....	213
clear ipv6 mld snooping groups.....	213
clear ipv6 mld snooping statistics.....	214
show ipv6 mld snooping groups counters.....	214
show ipv6 mld snooping groups.....	215
show ipv6 mld snooping router.....	216
show ipv6 mld snooping.....	217
show ipv6 mld snooping vlan.....	218
show ipv6 mld snooping forward-all.....	218
show ipv6 mld profile.....	219
show ipv6 mld filter.....	219
show ipv6 mld max-group.....	220
show ipv6 mld port max-group action.....	221
20. MVR.....	221
Mvr.....	221
mvr vlan.....	222
mvr group.....	223
mvr mode.....	223
mvr query-time.....	224
mvr port type.....	225

Command Line Interface

User Guide

mvr port immediate.....	226
mvr static group.....	226
clear mvr members.....	227
show mvr members.....	228
show mvr interface.....	228
show mvr.....	229
21. Port.....	229
back-pressure.....	229
clear interface.....	230
description.....	231
duplex.....	231
eee.....	232
flowcontrol.....	233
jumbo-frame.....	234
protected.....	234
show interface.....	235
speed.....	236
shutdown.....	237
22. Port Error Disable.....	237
errdisable recovery cause.....	237
errdisable recovery interval.....	238
show errdisable recovery.....	239
23. Port Security.....	239
port-security (Global).....	239
port-security (Interface).....	240
port-security address-limit.....	241
show port-security.....	241
show port-security interface.....	242
24. Protocol VLAN.....	242
vlan protocol-vlan group (Global).....	242
vlan protocol-vlan group (Interface).....	243
show vlan protocol-vlan.....	244
show vlan protocol-vlan interfaces.....	245
25. QoS.....	246
qos.....	246
qos cos.....	246
qos map.....	247
qos queue.....	249
qos remark.....	250
qos trust.....	251
qos trust (Interface).....	252
show qos.....	252
show qos interface.....	253
show qos map.....	253
show qos queueing.....	254
26. Rate Limit.....	255
rate limit egress.....	255
rate limit egress queue.....	256
rate limit ingress.....	256
27. RMON.....	257
rmon event.....	257
rmon alarm.....	258
rmon history.....	259
clear rmon interfaces statistics.....	260
show rmon interfaces statistics.....	261
show rmon event.....	262
show rmon event log.....	263
show rmon alarm.....	263
show rmon history.....	264
show rmon history statistic.....	265
28. SNMP.....	266
show snmp.....	266
show snmp community.....	266
show snmp engineid.....	267
show snmp group.....	267
show snmp host.....	268
show snmp trap.....	269
show snmp view.....	269
show snmp user.....	270
snmp.....	270
snmp community.....	271
snmp engineid.....	271
snmp engineid rmote.....	272
snmp group.....	272
snmp host.....	273
snmp trap.....	274

Command Line Interface

User Guide

snmp user.....	275
snmp view.....	275
29. Spanning Tree.....	276
instance (MST).....	276
revision (MST).....	277
show spanning-tree.....	277
show spanning-tree interface.....	278
show spanning-tree mst.....	279
show spanning-tree mst configuration.....	280
show spanning-tree mst interface.....	281
spanning-tree.....	282
spanning-tree bpdu.....	283
spanning-tree bpdu-filter.....	283
spanning-tree bpdu-guard.....	284
spanning-tree cost.....	284
spanning-tree forward-time.....	285
spanning-tree hello-time.....	285
spanning-tree edge.....	286
spanning-tree link-type.....	286
spanning-tree max-hops.....	287
spanning-tree maximum-age.....	287
spanning-tree mcheck.....	288
spanning-tree mode.....	288
spanning-tree mst configuration.....	289
spanning-tree mst cost.....	290
spanning-tree mst port-priority.....	290
spanning-tree mst priority.....	291
spanning-tree pathcost method.....	292
spanning-tree pathcost method.....	292
spanning-tree port-priority.....	301
spanning-tree priority.....	301
spanning-tree tx-hold-count.....	302
30. Storm Control.....	302
show storm-control.....	302
storm-control.....	303
storm-control action.....	304
storm-control ifg.....	305
storm-control level.....	305
storm-control unit.....	306
31. System File.....	307
boot system.....	307
delete.....	309
restore-defaults.....	310
save.....	310
show bootvar.....	311
show config.....	311
show flash.....	313
32. Surveillance VLAN.....	313
surveillance-vlan (Global).....	313
surveillance-vlan (Interface).....	314
surveillance-vlan vlan.....	314
surveillance-vlan oui-table.....	315
surveillance-vlan cos (Global).....	316
surveillance-vlan cos (Interface).....	317
surveillance-vlan mode.....	317
surveillance-vlan aging-time.....	318
show surveillance-vlan.....	319
33. Time.....	320
clock set.....	320
clock timezone.....	320
clock source.....	321
clock summer-time.....	322
show clock.....	323
ntp.....	324
show ntp.....	325
34. UDLD.....	325
errdisable recovery cause udld.....	325
udld.....	326
udld aggressive.....	327
udld message time.....	328
udld reset.....	328
show udld.....	329

Command Line Interface

User Guide

35. VLAN.....	330
vlan.....	330
Name (vlan).....	330
switchport mode.....	331
switchport hybrid pvid.....	332
switchport hybrid ingress-filtering.....	333
switchport hybrid acceptable-frame-type.....	334
switchport hybrid allowed vlan.....	335
switchport access vlan.....	336
switchport tunnel vlan.....	336
switchport trunk native vlan.....	337
switchport trunk allowed vlan.....	338
switchport default-vlan tagged.....	339
switchport default-vlan tagged.....	340
switchport forbidden default-vlan.....	341
switchport forbidden vlan.....	342
switchport vlan tpid.....	342
management-vlan.....	343
show vlan.....	344
show vlan interface membership.....	344
show interface switchport.....	345
show management-vlan.....	346
36. Voice VLAN.....	346
voice-vlan (Global).....	346
voice-vlan (Interface).....	347
voice-vlan vlan.....	348
voice-vlan oui-table.....	348
voice-vlan cos (Global).....	349
voice-vlan cos (Interface).....	350
voice-vlan mode.....	351
voice-vlan aging-time.....	352
show voice-vlan.....	353
37. PoE.....	354
PoE Status Informatin.....	354
PoE powersupply.....	355
PoE port.....	356
38. Onvif.....	357
Onvif server.....	357
Onvif detect.....	357

1. AAA

aaa authentication

Syntax	aaa authentication (login enable) (default LISTNAME) METHODLIST [METHODLIST] [METHODLIST] [METHODLIST] no aaa authentication (login enable) LISTNAME
--------	--

Parameter	<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">login</td><td>Add/Edit login authentication list</td></tr> <tr> <td>enable</td><td>Add/Edit enable authentication list</td></tr> </table>	login	Add/Edit login authentication list	enable	Add/Edit enable authentication list
login	Add/Edit login authentication list				
enable	Add/Edit enable authentication list				

Default	<p>Default authentication list name for type login is “default” and default method is “local”.</p> <p>Default authentication list name for type enable is “default” and default method is “enable”</p>
---------	--

Mode	Global Configuration
------	----------------------

Usage	<p>Login authentication is used when user try to login into the switch. Such as CLI login dialog and WEBUI login web page.</p> <p>Enable authentication is used only on CLI for user trying to switch from User EXEC mode to Privileged EXEC mode.</p>
-------	--

Both of them support following authenticate methods.

Local: Use local user account database to authenticate. (This method is not supported for enable authentication)

Enable: Use local enable password database to authenticate.

Tacacs+: Use remote Tacacs+ server to authenticate.

Radius: Use remote Radius server to authenticate.

None: Do nothing and just make user to be authenticated.

Each list allows you to combine these methods with different orders. For example, we want to authenticate login user with remote Tacacs+ server, but server may be crashed. Therefore, we need a backup plan, such as another Radius server. So we can configure the list with Tacacs+ server as first authentication method and Radius server as second one.

Use no form to delete the existing list. However, “default” list is not allowed to remove.

Example

This example shows how to add a login authentication list to authenticate with order tacacs+, radius, local.

```
Switch(config)# aaa authentication login test1  
tacacs+ radius local
```

This example shows how to show existing login authentication lists

```
Switch# show aaa authentication login lists  
Login List Name | Authentication Method List  
-----+-----  
          default      tacacs+      tacacs+ radius local
```

This example shows how to add an enable authentication list to authenticate with order tacacs+, radius, enable.

```
Switch(config)# aaa authentication enable test2  
tacacs+ radius enable
```

This example shows how to show existing enable authentication lists

```
Switch# show aaa authentication enable lists  
Enable List Name | Authentication Method List  
-----+-----  
          default | enable  
          test2   | tacacs+   radius   enable
```

login authentication

Syntax

```
login authentication LISTNAME  
no login authentication
```

Parameter

<i>LISTNAME</i>	Auth Method List Name.
default	Default Auth Method List

Default

Default login authentication list for each line is “default”.

Mode

Line Configuration

Usage

Different access methods are allowed to bind different login authentication lists. Use “**login authentication**” command to bind the list to specific line (console, telnet, ssh).

Use no form to bind the “default” list back.

Example

This example shows how to create a new login authentication list and bind to telnet line.

```
Switch(config)# aaa authentication login test1
```

```
tacacs+ radius local
Switch(config)# line telnet
Switch(config-line)# login authentication test1
```

This example shows how to show line binding lists.

```
Switch# show line lists
```

Line Type	AAA Type	List Name
console	login	default
	enable	default
telnet	login	test1
	enable	default
ssh	login	default
	enable	default
http	login	default
https	login	default

ip http login authentication

Syntax

```
ip (http | https) login authentication LISTNAME
no ip (http | https) login authentication
```

http	Bind login authentication list to user access WEBUI with http protocol
https	Bind login authentication list to user access WEBUI with https protocol
<i>LISTNAME</i>	Specify the login authentication list name to use.

Default

Default login authentication list for each line is “default”.

Mode

Global Configuration

Usage

Different access methods are allowed to bind different login authentication lists. Use “**ip (http | https) login authentication**” command to bind the list to WEBUI access from http or https.

Use no form to bind the “default” list back.

Example

This example shows how to create two new login authentication lists and bind to http and https.

```
Switch(config)# aaa authentication login test1
tacacs+ radius local
Switch(config)# aaa authentication login test2
```

radius local

```
Switch(config)# ip http login authentication test1
Switch(config)# ip https login authentication test2
```

This example shows how to show line binding lists.

```
Switch# show line lists
```

Line Type	AAA Type	List Name
console	login	default
	enable	default
telnet	login	default
	enable	default
ssh	login	default
	enable	default
http	login	test1
https	login	test2

enable authentication

Syntax

```
enable authentication LISTNAME
no enable authentication
```

Parameter

<i>LISTNAME</i>	Auth Method List Name.
default	Default Auth Method List

Default

Default enable authentication list for each line is “default”.

Mode

Line Configuration

Usage

Different access methods are allowed to bind different enable authentication lists. Use “**enable authentication**” command to bind the list to specific line (console, telnet, ssh).

Use no form to bind the “default” list back.

Example

This example shows how to create a new enable authentication list and bind to telnet line.

```
Switch(config)# aaa authentication enable test1
tacacs+ radius enable
Switch(config)# line telnet
Switch(config-line)# enable authentication test1
```

This example shows how to show line binding lists.

```
Switch# show line lists
```

Line Type	AAA Type	List Name
-----------	----------	-----------

```

-----+-----+
  console |           login   | default
          |           enable   | default
  telnet  |           login   | default
          |           enable   | test1
  ssh    |           login   | default
          |           enable   | default
  http   |           login   | default
  https  |           login   | default
-----+

```

show aaa authentication

Syntax

show aaa authentication (login | enable) lists

Parameter

login	Show login authentication list
enable	Show enable authentication list

Default

No default value for this command

Mode

Privileged EXEC

Usage

Use “**show aaa authentication**” command to show login authentication or enable authentication method lists.

Example

This example shows how to show existing login authentication lists

```

Switch# show aaa authentication login lists
Login List Name | Authentication Method List
-----+
      default | local
      test1   | tacacs+  radius  local
-----+

```

This example shows how to show existing enable authentication lists

```

Switch# show aaa authentication login lists
Enable List Name | Authentication Method List
-----+
      default | enable
      test2   | tacacs+  radius  enable
-----+

```

show line lists

Syntax	show line lists
Parameter	
Default	No default value for this command
Mode	Privileged EXEC
Usage	Use “ show line lists ” command to show all lines’ binding list of all authentication, authorization, and accounting function.

This example shows how to show line binding lists.

Switch# **show line lists**

Line Type	AAA Type	List Name
console	login	default
	enable	default
	exec	default
	commands	default
	accounting-exec	default
telnet	login	default
	enable	default
	exec	default
	commands	default
	accounting-exec	default
ssh	login	default
	enable	default
	exec	default
	commands	default
	accounting-exec	default
http	login	default
https	login	default

tacacs default-config

Syntax	tacacs default-config [key TACACSKEY] [timeout <1-30>]
Parameter	

key	TACACS+ key
timeout	TACACS+ timeout

Default	Default tacacs+ key is “”. Default tacacs+ timeout is 5 seconds.
Mode	Global Configuration
Usage	Use “ tacacs default-config ” command to modify default values of tacacs+ server. These default values will be used when user try to create a new tacacs+ server and not assigned these values.
Example	<p>This example shows how modify default tacacs+ configuration</p> <pre>Switch(config)# tacacs default-config timeout 20 Switch(config)# tacacs default-config key tackey</pre> <p>This example shows how to show default tacacs+ configurations.</p> <pre>Switch# show tacacs default-config Timeout Key -----+----- 20 tackey</pre> <p>This example shows how to create a new tacacs+ server with above default config and show results.</p> <pre>Switch(config)# tacacs host 192.168.1.111 Switch# show tacacs Prio Timeout IP Address Port Key -----+-----+-----+-----+-----+ --- --- --- --- --- 1 20 192.168.1.111 49 tackey</pre>

tacacs host

Syntax	tacacs host <i>HOSTNAME</i> [port <0-65535>] [key <i>TACPLUSKEY</i>] [priority <0-65535>] [timeout <1-30>] no tacacs [<i>host HOSTNAME</i>]										
Parameter	<table border="0"> <tr> <td>host</td> <td>Host name</td> </tr> <tr> <td>port <0-65535></td> <td>TCP/UDP port</td> </tr> <tr> <td>key</td> <td>TACACS+ key</td> </tr> <tr> <td>priority <0-65535></td> <td>Server priority</td> </tr> <tr> <td>timeout <1-30></td> <td>TACACS+ timeout</td> </tr> </table>	host	Host name	port <0-65535>	TCP/UDP port	key	TACACS+ key	priority <0-65535>	Server priority	timeout <1-30>	TACACS+ timeout
host	Host name										
port <0-65535>	TCP/UDP port										
key	TACACS+ key										
priority <0-65535>	Server priority										
timeout <1-30>	TACACS+ timeout										

Default	Default tacacs+ key is “”. Default tacacs+ timeout is 5 seconds.
----------------	---

Mode	Global Configuration										
Usage	<p>Use “tacacs host” command to add or edit tacacs+ server for authentication, authorization or accounting.</p> <p>Use no form to delete one or all tacacs+ servers from database.</p>										
Example	<p>This example shows how to create a new tacacs+ server</p> <pre>Switch(config)# tacacs host 192.168.1.111 port 12345 key tacacs+ priority 100 timeout 10</pre> <p>This example shows how to show existing tacacs+ server.</p> <pre>Switch# show tacacs</pre> <table><thead><tr><th>Prio</th><th>Timeout</th><th>IP Address</th><th>Port</th><th>Key</th></tr></thead><tbody><tr><td>100</td><td>10</td><td>192.168.1.111</td><td>12345</td><td>tacacs+</td></tr></tbody></table>	Prio	Timeout	IP Address	Port	Key	100	10	192.168.1.111	12345	tacacs+
Prio	Timeout	IP Address	Port	Key							
100	10	192.168.1.111	12345	tacacs+							

show tacacs default-config

Syntax	show tacacs default-config				
Parameter					
Default	No default value for this command				
Mode	Privileged EXEC				
Usage	<p>Use “show tacacs default-config” command to show tacacs+ default configurations.</p>				
Example	<p>This example shows how to show default tacacs+ configurations.</p> <pre>Switch# show tacacs default-config</pre> <table><thead><tr><th>Timeout</th><th>Key</th></tr></thead><tbody><tr><td>20</td><td>tackey</td></tr></tbody></table>	Timeout	Key	20	tackey
Timeout	Key				
20	tackey				

show tacacs

Syntax **show tacacs**

Parameter

Default No default value for this command

Mode Privileged EXEC

Usage Use “**show tacacs**” command to show existing tacacs+ servers.

Example This example shows how to show existing tacacs+ server.

```
Switch# show tacacs
Prio | Timeout | IP Address | Port | Key
-----+-----+-----+-----+-----+
---+
100 | 10 | 192.168.1.111 | 12345 |
tacacs+
```

show default-config

Syntax **radius default-config [key RADIUSKEY] [retransmit <1-10>] [timeout <1-30>]**

Parameter **key** RADIUS key

retransmit Specify the number of retransmit to active server

timeout Specify default radius server timeout value

Default Default radius key is “”.

Default radius retransmit is 3 times.

Default radius timeout is 3 seconds.

Mode Global Configuration

Usage Use “**radius default-config**” command to modify default values of radius server. These default values will be used when user try to create a new radius server and not assigned these values.

Example This example shows how modify default radius configuration

```
Switch(config)# radius default-config timeout 20
Switch(config)# radius default-config key radiuskey
Switch(config)# radius default-config retransmit 5
```

This example shows how to show default radius configurations.

```
Switch# show radius default-config
Retries| Timeout| Key
-----+-----+-----
5 | 20 | radiuskey
```

This example shows how to create a new radius server with above default config and show results.

```
Switch(config)# radius host 192.168.1.111
Switch# show radius
Prio | IP Address | Auth-Port| Retries| Timeout| Usage-Type| Key
-----+-----+-----+-----+-----+-----+-----+
1 | 192.168.1.111 | 1812| 5 |20 | All | radiuskey
```

radius host

Syntax

```
radius host HOSTNAME [auth-port <0-65535>] [key RADIUSKEY]
[priority <0-65535>] [retransmit <1-10>] [timeout <1-30>] [type
(login|802.1x|all)]
no radius [host HOSTNAME]
```

Parameter

host <i>HOSTNAME</i>	Specify radius server host name, both IP address and domain name are available.
auth-port <0-65535>	UDP port for RADIUS authentication server (default is 1812)
key <i>RADIUSKEY</i>	RADIUS key

priority <0-65535>	Server priority
retransmit <1-10>	Specify the number of retransmit to active server
timeout	Time to wait for this RADIUS server to reply(default is 3)
type	Usage type of this server
802.1X	
login	Usage type (login, 802.1X, all)
all	

Default

Default radius key is “”.
Default radius timeout is 3 seconds.

Mode

Global Configuration

Usage

Use “**radius host**” command to add or edit an existing radius server.

Use no form to delete one or all radius servers from database.

Example

This example shows how to create a new radius server

```
Switch(config)# radius host 192.168.1.111 auth-port 12345 key
radiuskey priority 100 retransmit 5 timeout 10 type all
```

This example shows how to show existing radius server.

```
Switch# show radius
Prio | IP Address | Auth-Port| Retries| Timeout| Usage-Type| Key
-----+-----+-----+-----+-----+-----+
      +-----+
100 |       192.168.1.111 |       12345 |       5 |       10
|       All |radiuskey
```

show radius default-config

Syntax

show radius default-config

Parameter

Default

No default value for this command

Mode

Privileged EXEC

Usage

Use “**show radius default-config**” command to show radius default configurations.

Example

This example shows how to show default radius configurations.

```
Switch# show radius default-config
Retries| Timeout| Key
-----+-----+-----
5      |    20   | radiuskey
```

show radius

Syntax

show radius

Parameter

Default

No default value for this command

Mode

Privileged EXEC

Usage

Use “**show radius**” command to show existing radius servers.

Example

This example shows how to show existing radius server.

```
Switch# show radius
Prio | IP Address | Auth-Port| Retries| Timeout| Usage-Type| Key
-----+-----+-----+-----+-----+-----+
+-----+-----+
100 | 192.168.1.111 | 12345 | 5 | 10 | All | radiuskey
```

2. ACL

mac acl

Syntax

mac acl NAME
no mac acl NAME

Parameter

NAME Specify the name of MAC ACL

Default

No default is defined

Mode	Global Configuration
Usage	Use the mac acl command to create a MAC access list and to enter mac-acl configuration mode. The name of ACL must be unique that can not have same name with other ACL or QoS policy. Once an ACL is created, an implicit “deny any” ACE created at the end of the ACL. That is, if there are no matches, the packets are denied. Use the no form of this command to delete.
Example	The example shows how to create a mac acl. You can verify settings by the following show acl command

```
Switch(config)# mac acl test
Switch(config-mac-al)# show acl
MAC access list test
```

permit (MAC)

Syntax	<code>[sequence <1-2147483647>] permit (A:B:C:D:E:F/A:B:C:D:E:F any) (A:B:C:D:E:F/A:B:C:D:E:F any) [vlan <1-4094>] [cos <0-7> <0-7>] [ethertype <0x0600-0xFFFF>]</code> <code>no sequence <1-2147483647></code>	
Parameter	<1-2147483647>	(Optional) Specify sequence index of ACE, the sequence index represent the priority of an ACE in ACL.
	(A:B:C:D:E:F/A:B:C:D:E:F any)	Specify the source MAC address and mask of packet or any MAC address.
	(A:B:C:D:E:F/A:B:C:D:E:F any)	Specify the destination MAC address and mask of packet or any MAC address
	[vlan <1-4094>]	(Optional) Specify the vlan ID of packet.
	[cos <0-7> <0-7>]	(Optional) Specify the Class of Service value and mask of packet.
	[ethertype <0x0600-0xFFFF>]	(Optional) Specify Ethernet protocol number of packet

Default No default is defined.

Mode	MAC ACL Configuration
Usage	Use the permit command to add permit conditions for a mac ACE that bypass those packets hit the ACE. The “sequence” also represents hit priority when ACL bind to an interface. An ACE not specifies “sequence” index would assign a sequence index which is the largest existed index plus 20. If packet content can match more than one ACE, the lowest sequence ACE is hit. An ACE can not be added if has the same conditions as existed ACE.
Example	The example shows how to add an ACE that permit packets with source

MAC address 22:33:44:55:66:77 , VLAN 3 and Ethernet type 1999. You can verify settings by the following **show acl** command

```
Switch(config)# mac acl test
Switch(config-mac-al)# sequence 999 permit
22:33:44:55:66:77/FF:FF:FF:FF:FF:FF any vlan 3 ethtype
0x2800
Switch(config-mac-al)# show acl
MAC access list test
sequence 999 permit 22:33:44:55:66:77/FF:FF:FF:FF:FF:FF any vlan
3 ethtype 0x2800
```

deny (MAC)

Syntax	[sequence <1-2147483647>] deny (A:B:C:D:E:F/A:B:C:D:E:F any) (A:B:C:D:E:F/A:B:C:D:E:F any) [vlan <1-4094>] [cos <0-7> <0-7>] [ethertype <0x0600-0xFFFF>] [shutdown] no sequence <1-2147483647>	
Parameter	<1-2147483647>	(Optional) Specify sequence index of ACE, the sequence index represent the priority of an ACE in ACL.
	(A:B:C:D:E:F/A:B:C:D:E:F any)	Specify the source MAC address and mask of packet or any MAC address.
	(A:B:C:D:E:F/A:B:C:D:E:F any)	Specify the destination MAC address and mask of packet or any MAC address.
	[vlan <1-4094>]	(Optional) Specify the vlan ID of packet.
	[cos <0-7> <0-7>]	(Optional) Specify the Class of Service value and mask of packet.
	[ethertype <0x0600-0xFFFF>]	(Optional) Specify Ethernet protocol number of packet
	[shutdown]	(Optional) Shutdown interface while ACE hit
Default	No default is defined.	
Mode	MAC ACL Configuration	
Usage	Use the deny command to add deny conditions for a mac ACE that drop those packets hit the ACE. The “sequence” also represents hit priority when ACL bind to an interface. An ACE not specifies “sequence” index would assign a sequence index which is the largest existed index plus 20. If packet content can match more than one ACE, the lowest sequence ACE is hit. An ACE	

cannot be added if has the same conditions as existed ACE. Use “**shutdown**” to shutdown interface while ACE hit.

Example

The example shows how to add an ACE that denies packets with destination MAC address aa:bb:cc:xx:xx:xx and VLAN 9. You can verify settings by the following **show acl** command

```
Switch(config)# mac acl test
Switch(config-mac-al)# sequence 30 permit any any
Switch(config-mac-al)# deny any aa:bb:cc:00:00:FF:FF:FF:00:00:00
vlan 9 shutdown
Switch(config-mac-al)# show acl
MAC access list test
    sequence 30 permit any any
    sequence 50 deny any AA:BB:CC:00:00:00/FF:FF:FF:00:00:00 vlan 9
    shutdown
```

ip acl

Syntax	ip acl NAME no ip acl NAME
Parameter	NAME Specify the name of IPv4 ACL
Default	No default is defined
Mode	Global Configuration
Usage	Use the ip acl command to create an IPv4 access list and to enter ip-acl configuration mode. The name of ACL must be unique that can not have same name with other ACL or QoS policy. Once an ACL is created, an implicit “deny any” ACE created at the end of the ACL. That is, if there are no matches, the packets are denied. Use the no form of this command to delete.
Example	The example shows how to create an IP ACL. You can verify settings by the following show acl command
	<pre>Switch(config)#ip acl iptest Switch(config-ip-al)# show acl IP access list iptest</pre>

permit (IP)

Syntax	<pre>[sequence <1-2147483647>] permit (<0-255> ipinip egp igp hmp rdp ipv6 ipv6:rout ipv6:frag rsvp ipv6:icmp ospf pim l2tp ip)(A.B.C.D/A.B.C.D any) (A.B.C.D/A.B.C.D any)[(dscp precedence) VALUE]</pre> <pre>[sequence <1-2147483647>] permit icmp (A.B.C.D/A.B.C.D any) (A.B.C.D/A.B.C.D any) (<0-255> echo-reply destination-unreachable source-quench echo-request router-advertisement router-solicitation time-exceeded timestamp timestamp-reply traceroute any) (<0-255> any) [(dscp precedence) VALUE]</pre> <pre>[sequence <1-2147483647>] permit tcp (A.B.C.D/A.B.C.D any) (<0-65535> echo discard daytime ftp-data ftp telnet smtp time hostname whois tacacs ds domain www pop2 pop3 syslog talk klogin kshell sunrpc drip PORT_RANGE any) (A.B.C.D/A.B.C.D any) (<0-</pre>
--------	---

```
65535>|echo|discard|daytime|ftp-
data|ftp|telnet|smtp|time|hostname|whois|
tacacs-
ds|domain|www|pop2|pop3|syslog|talk|klogin|kshell|sunrpc|dri
p|PORT_RANGE|any)
[match-all TCP_FLAG] [(dscp|precedence) VALUE]
```

```
[sequence <1-2147483647>] permit udp
(A.B.C.D/A.B.C.D|any) (<0-65535>|echo|discard|
time|nameserver|tacacs-
ds|domain|bootps|bootpc|tftp|sunrpc|ntp|netbios-ns|snmp|
snmptrap|who|syslog|talk|rip|PORT_RANGE|any)
(A.B.C.D/A.B.C.D|any) (<0-65535>|echo|
discard|time|nameserver|tacacs-
ds|domain|bootps|bootpc|tftp|sunrpc|ntp|netbios-ns|
snmp|snmptrap|who|syslog|PORT_RANGE|any)
[(dscp|precedence) VALUE]
```

no sequence <1-2147483647>

Parameter	
<0-255>	Specify the IP protocol number.
egp	Exterior Gateway Protocol (8).
hmp	Host Monitoring Protocol (20).
icmp	Internet Control Message Protocol (1).
igp	interior Gateway Protocol (9).
ipinip	IP in IP (encapsulation) Protocol (4).
l2tp	Layer Two Tunneling Protocol (115).
ospf	Open Shortest Path Protocol (89).
pim	Protocol Independent Multicast (103).
rdp	reliable Data Protocol (27).
rsvp	reservation Protocol (46).
tcp	transmission Control Protocol (6).
udp	user Datagram Protocol (17).

Default No default is defined.

Mode IP ACL Configuration

Usage Use the permit command to add permit conditions for an IP ACE that bypasses those packets hit the ACE. The “**sequence**” also represents hit priority when ACL bind to an interface. An ACE not specifies “**sequence**” index would assign a sequence index which is the largest existed index plus 20. If packet content can match more than one ACE, the lowest sequence ACE is hit. An ACE can not be added if has the same conditions as existed ACE.

Example The example shows how to add a set of ACEs. You can verify settings by the following **show acl** command.
This command shows how to permit a source IP address subnet.

**Switch(config-ip-al)# permit ip 192.168.1.0/255.255.255.0
192.168.1.111/255.255.255.0**

This command shows how to permit ICMP echo-request packet with any IP address.

Switch(config-ip-al)# permit icmp any any echo-request any

This command shows how to permit any IP address HTTP packets with DSCP 5.

Switch(config-ip-al)# permit tcp any any www dscp 5

This command shows how to permit any source IP address SNMP packet connect to destination IP address 192.168.1.1.

**Switch(config-ip-al)# permit udp any any 192.168.1.1/255.255.255.255
snmp**

Switch(config-ip-al)# show acl

IP access list iptest

sequence 1 permit ip 192.168.1.0/255.255.255.0 any

sequence 21 permit icmp any any echo-request any

sequence 41 permit tcp any any www dscp 5

sequence 61 permit udp any any 192.168.1.1/255.255.255 snmp

deny (IP)

Syntax

[sequence <1-2147483647>] deny (<0-
255>|ipinip|egp|igp|hmp|rdp|ipv6|
ipv6:rout|ipv6:frag|rsvp|ipv6:icmp|ospf|pim|l2tp|ip)
(A.B.C.D/A.B.C.D|any) (A.B.C.D/A.B.C.D|any)
[(dscp|precedence) VALUE]] [shutdown]

[sequence <1-2147483647>] deny icmp
(A.B.C.D/A.B.C.D|any) (A.B.C.D/A.B.C.D|any) (<0-
255>|echo-reply|destination-unreachable|
source-quench|echo-request|router-advertisement|router-
solicitation|
time-exceeded|timestamp| timestamp-reply|traceroute|any)
(<0-255>|any) [(dscp|precedence) VALUE] [shutdown]

[sequence <1-2147483647>] deny tcp (A.B.C.D/A.B.C.D|any)
(<0-65535>|echo|
discard|daytime|ftp-
data|ftp|telnet|smtp|time|hostname|whois|tacacs-ds|
domain|www|pop2|pop3|syslog|talk|klogin|kshell|sunrpc|drip|
PORT_RANGE|any)
(A.B.C.D/A.B.C.D|any) (<0-65535>|echo|discard|daytime|ftp-
data|ftp|telnet|
smtp|time|hostname|whois|tacacs-
ds|domain|www|pop2|pop3|syslog|talk|
klogin|kshell|sunrpc|drip|PORT_RANGE|any)
[match-all TCP_FLAG] [(dscp|precedence) VALUE]
[shutdown]

```
[sequence <1-2147483647>] deny udp (A.B.C.D/A.B.C.D|any)
(<0-65535>|echo|discard|time|nameserver|tacacs-
ds|domain|bootps|
bootpc|tftp|sunrpc|ntp|netbios-ns|snmp|snmptrap|who|syslog|
talk|rip|PORT_RANGE|any) (A.B.C.D/A.B.C.D|any) (<0-
65535>|echo|
discard|time|nameserver|tacacs-ds|domain|bootps|bootpc|tftp|
sunrpc|ntp|netbios-
ns|snmp|snmptrap|who|syslog|PORT_RANGE|any)
[(dscp|precedence) VALUE] [shutdown]
```

no sequence <1-2147483647>

Parameter	<0-255> Specify the IP protocol number. egp Exterior Gateway Protocol (8). hmp Host Monitoring Protocol (20). icmp Internet Control Message Protocol (1). igp interior Gateway Protocol (9). ipinip IP in IP (encapsulation) Protocol (4). l2tp Layer Two Tunneling Protocol (115). ospf Open Shortest Path Protocol (89). pim Protocol Independent Multicast (103). rdp Reliable Data Protocol (27). rsvp Reservation Protocol (46). tcp Transmission Control Protocol (6). udp User Datagram Protocol (17).
Default	No default is defined.
Mode	IP ACL Configuration
Usage	Use the deny command to add deny conditions for an IP ACE that drop those packets hit the ACE. The “sequence” also represents hit priority when ACL bind to an interface. An ACE not specifies “sequence” index would assign a sequence index which is the largest existed index plus 20. If packet content can match more than one ACE, the lowest sequence ACE is hit. An ACE can not be added if has the same conditions as existed ACE. Use “shutdown” to shutdown interface while ACE hit.
Example	The example shows how to add an ACE that denies packets with source IP address 192.168.1.80. You can verify settings by the following show acl command <pre>Switch334455(config)# ip acl iptest Switch334455(ip-al)# deny ip 192.168.1.80/255.255.255.255 any Switch334455(ip-al)# show acl IP access list iptest sequence 1 deny ip 192.168.1.80/255.255.255.255 any</pre>

ipv6 acl

Syntax	ipv6 acl NAME no ipv6 acl NAME
Parameter	NAME Specify the name of IPv6 ACL
Default	No default is defined
Mode	Global Configuration
Usage	Use the ipv6 acl command to create an IPv6 access list and to enter ipv6-acl configuration mode. The name of ACL must be unique that can not have same name with other ACL or QoS policy. Once an ACL is created, an implicit “deny any” ACE created at the end of the ACL. That is, if there are no matches, the packets are denied. Use the no form of this command to delete.
Example	The example shows how to create an IPv6 ACL. You can verify settings by the following show acl command
	<pre>Switch334455(config)#ipv6 acl ipv6test Switch334455(config-ipv6-al)# show acl IPv6 access list iptest</pre>

permit (IPv6)

Syntax	<pre>[sequence <1-2147483647>] permit (<0-255> ipv6 (X:X::X:X/<0-128> any) (X:X::X:X/<0-128> any) (dscp precedence) VALUE]</pre> <pre>[sequence <1-2147483647>] permit icmp (X:X::X:X/<0- 128> any) (X:X::X:X/<0-128> any) (<0-255> destination- unreachable packet-too-big time-exceeded parameter-problem echo-request echo-reply mld-query mld-report mldv2-report mld-done router- solicitation router-advertisement nd-ns nd-na any) (<0- 255> any) [(dscp precedence) VALUE]</pre> <pre>[sequence <1-2147483647>] permit tcp (X:X::X:X/<0- 128> any) (<0-65535> echo discard daytime ftp- data ftp telnet smtp time hostname whois tacacs- ds domain www pop2 pop3 syslog talk klogin kshell sunrpc drip PORT_RANGE any) (X:X::X:X/<0-128> any) (<0-65535> echo discard daytime ftp-</pre>
--------	--

```

data|ftp|telnet|smtp|time|hostname|whois|tacacs-ds|domain|www|pop2|pop3|syslog|talk|klogin|kshell|sunrpc|drip|PORT_RANGE|any) [match-all TCP_FLAG] [(dscp|precedence) VALUE]

[sequence <1-2147483647>] permit udp (X:X::X:X/<0-128>|any) (<0-65535>|echo|discard|time|nameserver|tacacs-ds|domain|bootps|bootpc|tftp|sunrpc|ntp|netbios-ns|snmp|snmptrap|who|syslog|talk|rip|PORT_RANGE|any) (X:X::X:X/<0-128>|any) (<0-65535>|echo|discard|time|nameserver|tacacs-ds|domain|bootps|bootpc|tftp|sunrpc|ntp|netbios-ns|snmp|snmptrap|who|syslog|PORT_RANGE|any) [(dscp|precedence) VALUE]

no sequence <1-2147483647>

```

Parameter	
<1-2147483647>	(Optional) Specify sequence index of ACE, the sequence index represent the priority of an ACE in ACL.
(X:X::X:X/<0-128> any)	Specify the source IPv6 address and prefix of packet or any IPv6 address.
(X:X::X:X/<0-128> any)	Specify the destination IPv6 address and prefix of packet or any IPv6 address.
[dscp VALUE]	(Optional) Specify the DSCP of packet.
[precedence VLAUE]	(Optional) Specify the IP precedence of packet.
icmp-type	Specify ICMP message type for filtering ICMP packet. Enter a type name of list or a number of ICMP message type.
icmp-code	Specify ICMP message code for filtering ICMP packet.
l4-source-port	Specify TCP/UDP source port of for filtering TCP/UDP packet. Enter a port name of list or a number of TCP/UDP port.
l4-destination-port	Specify TCP/UDP destination port of for filtering TCP/UDP packet. Enter a port name of list or a number of TCP/UDP port.
match-all	Specify tcp flag for TCP packet. If a flag should be set it is prefixed by "+" .If a flag should be unset it is prefixed by "-". Available options are +urg, +ack, +psh, +rst, +syn, +fin, -urg, -ack, -psh, -rst, -syn and -fin. To

define more than 1 flag - enter additional flags one after another without a space (example +syn+ack).	
Default	No default is defined.
Mode	IPv6 ACL Configuration
Usage	Use the permit command to add permit conditions for an IPv6 ACE that bypasses those packets hit the ACE. The “sequence” also represents hit priority when ACL bind to an interface. An ACE not specifies “sequence” index would assign a sequence index which is the largest existed index plus 20. If packet content can match more than one ACE, the lowest sequence ACE is hit. An ACE can not be added if has the same conditions as existed ACE.
Example	The example shows how to add a set of ACEs. You can verify settings by the following show acl command. This command shows how to permit a source IP address subnet. Switch334455(ipv6-al)# permit permit ipv6 fe80:1122:3344:5566::1/64 any Switch334455(ipv6-al)# show acl IPv6 access list ipv6test sequence 1 permit ipv6 fe80:1122:3344:5566::1/64 any

deny (IPv6)

Syntax	<pre>[sequence <1-2147483647>] deny (<0-255> ipv6) (X:X::X:X/<0-128> any) (X:X::X:X/<0-128> any) [(dscp precedence) VALUE] [shutdown]</pre> <pre>[sequence <1-2147483647>] deny icmp (X:X::X:X/<0-128> any) (X:X::X:X/<0-128> any) (<0-255> destination-unreachable packet-too-big time-exceeded parameter-problem echo-request echo-reply mld-query mld-report mldv2-report mld-done router-solicitation router-advertisement nd-ns nd-na any) (<0-255> any)[(dscp precedence) VALUE] [shutdown]</pre> <pre>[sequence <1-2147483647>] deny tcp (X:X::X:X/<0-128> any) (<0-65535> echo discard daytime ftp-data ftp telnet smtp time hostname whois tacacs-ds domain www pop2 pop3 syslog talk klogin kshell sunrpc drip PORT_RANGE any) (X:X::X:X/<0-128> any) (<0-65535> echo discard daytime ftp-data ftp </pre>
--------	---

```
telnet|smtp|time|hostname|whois|tacacs-ds|domain|www|pop2|
pop3|syslog|talk|klogin|kshell|sunrpc|drip|PORT_RANGE|any)
[match-all TCP_FLAG] [(dscp|precedence) VALUE]
[shutdown]
```

```
[sequence <1-2147483647>] deny udp (X:X::X:X/<0-128>|any)
(<0-65535>|echo|discard|time|nameserver|tacacs-ds|domain|
bootps|bootpc|tftp|sunrpc|ntp|netbios-
ns|snmp|snmptrap|who|syslog|
talk|rip|PORT_RANGE|any) (X:X::X:X/<0-128>|any) (<0-
65535>|echo|discard|time|nameserver|tacacs-ds|domain|
bootps|bootpc|tftp|sunrpc|ntp|netbios-ns|
snmp|snmptrap|who|syslog|PORT_RANGE|any)
[(dscp|precedence) VALUE] [shutdown]
```

no sequence <1-2147483647

Parameter	<table border="1"> <tr> <td><0-255></td><td>Specify the IPv6 protocol number.</td></tr> <tr> <td>icmp</td><td>Internet Control Message Protocol (1).</td></tr> <tr> <td>ipv6</td><td>Specify for any Internet Protocol.</td></tr> <tr> <td>tcp</td><td>Transmission Control Protocol (6).</td></tr> <tr> <td>udp</td><td>User Datagram Protocol (17).</td></tr> <tr> <td>[shutdown]</td><td>(Optional) Shutdown interface while ACE hit</td></tr> </table>	<0-255>	Specify the IPv6 protocol number.	icmp	Internet Control Message Protocol (1).	ipv6	Specify for any Internet Protocol.	tcp	Transmission Control Protocol (6).	udp	User Datagram Protocol (17).	[shutdown]	(Optional) Shutdown interface while ACE hit
<0-255>	Specify the IPv6 protocol number.												
icmp	Internet Control Message Protocol (1).												
ipv6	Specify for any Internet Protocol.												
tcp	Transmission Control Protocol (6).												
udp	User Datagram Protocol (17).												
[shutdown]	(Optional) Shutdown interface while ACE hit												
Default	No default is defined.												
Mode	IP ACL Configuration												
Usage	Use the deny command to add deny conditions for an IPv6 ACE that drop those packets hit the ACE. The “sequence” also represents hit priority when ACL bind to an interface. An ACE not specifies “sequence” index would assign a sequence index which is the largest existed index plus 20. If packet content can match more than one ACE, the lowest sequence ACE is hit. An ACE can not be added if has the same conditions as existed ACE. Use “shutdown” to shutdown interface while ACE hit.												
Example	The example shows how to add an ACE that denies packets with destination IP address fe80::abcd. You can verify settings by the following show acl command												

```
Switch334455(config)# ipv6 acl ipv6test
Switch334455(ip-al)# deny ipv6 any fe80::abcd/128
Switch334455(ip-al)# show acl
```

```
IPv6 access list ipv6test
sequence 1 deny ipv6 any fe80::abcd/128
```

bind acl

Syntax	(mac ip ipv6) acl NAME [no] (mac ip ipv6) acl NAME
Parameter	(mac ip ipv6) Specify a type of ACL to binding to interface NAME Specify the name of ACL
Default	No default is defined
Mode	Interface Configuration
Usage	Use the (mac ip ipv6) acl NAME command to bind an ACL to interfaces. An interface can bind only one ACL or QoS policy. Use the no form of this command to return to unbind an ACL from interface.
Example	The example shows how to bind an existed ACL to interface. <pre>switch(config)# interface GigabitEthernet 2 switch(config-if)# mac acl test switch(config-if)# do show running-config interfaces GigabitEthernet 2 interface gi2 mac acl test</pre>

show acl

Syntax	show acl show (mac ip ipv6) acl show (mac ip ipv6) acl NAME
Parameter	(mac ip ipv6) Specify a type of ACL to show NAME Specify the name of ACL
Default	No default is defined
Mode	Global Configuration Context Configuration
Usage	Use the show acl command to show created ACLs. You can specify mac, ip or ipv6 to show specific type ACL or specify unique name string to show ACL with the name.

Example	The example shows how to show all IP ACL.
----------------	---

```
Switch# show ip acl

IP access list iptest
sequence 1 deny ip 192.168.1.80/255.255.255.255 any
```

show acl utilization

Syntax	show acl utilization
Parameter	None
Default	No default is defined
Mode	Global Configuration
Usage	Use the show acl utilization command to show the usage of PIE of ASIC. When an ACL bind to interface, it needs ASIC resource to help to filter packet. An ASIC has limited resource. This command help user to know the PIE usage of AISC.
Example	The example shows how to show utilization
	<pre>Switch(config)# do show acl utilization Type: sys usage: 128 Type: mac ACL usage: 128 Type: IPv4 ACL usage: 128 Type: IPv6 ACL usage: 128</pre>

3. Administration

configure

Syntax	configure
Parameter	
Default	No default value for this command.
Mode	Privileged EXEC

Usage	Use “ configure ” command to enter global configuration mode. In global configuration mode, the prompt will show as “ Switch(config)# ”.
--------------	--

Example	This example shows how to enter global configuration mode. Switch# configure Switch(config) #
----------------	--

clear arp

Syntax	clear arp [A.B.C.D]
---------------	----------------------------

Parameter	<i>A.B.C.D</i> Specify specific arp entry to clear.
------------------	---

Default	No default value for this command.
----------------	------------------------------------

Mode	User EXEC Privileged EXEC
-------------	------------------------------

Usage	Use “ clear arp ” command to clear all or specific one arp entry.
--------------	--

Example	This example shows how to clear all arp entries. Switch# clear arp
----------------	--

clear service

Syntax	clear (telnet ssh)
---------------	-----------------------------

Parameter	telnet Clear all telnet sessions. ssh Clear all ssh sessions.
------------------	--

Default	No default value for this command.
----------------	------------------------------------

Mode	Privileged EXEC
-------------	-----------------

Usage	Use “ clear service ” command to kill all existing sessions for the select service.
--------------	--

Example	This example shows how to enable telnet service and show current telnet
----------------	---

service status.

```
Switch# clear line telnet
```

enable

Syntax

```
enable [<1-15>]  
disable [<1-14>]
```

Parameter

<1-15>	Specify privileged level to enable
<1-14>	Specify privileged level to disable

Default

Default privilege level is 15 if no privilege level is specified on enable command.

Default privilege level is 1 if no privilege level is specified on disable command.

Mode

User EXEC

Usage

In User EXEC mode, user only allows to do a few actions. Most of commands are only available in privileged EXEC mode. Use “enable” command to enter the privileged mode to do more actions on switch.

In privileged EXEC mode, use “exit” command is able to go back to user EXEC mode with original user privilege level. If you need to go back to user EXEC mode with different privilege level, use “disable” command to specify the privilege level you need.

In privileged EXEC mode, the prompt will show “Switch#”

Example

This example shows how to enter privileged EXEC mode and show current privilege level.

```
Switch> enable  
Switch# show privilege  
Current CLI Username:  
Current CLI Privilege: 15
```

This example show how to enter user EXEC mode with privilege 3.

```
Switch# disable 3  
Switch> show privilege  
Current CLI Username:  
Current CLI Privilege: 3
```

end

Syntax

end

Parameter

Default	No default value for this command.
Mode	Privileged EXEC Global Configuration Interface Configuration Line Configuration
Usage	Use “end” command to return to privileged EXEC mode directly. Every mode except User EXEC mode has the “end” command.
Example	This example shows how to enter Interface Configuration mode and use end command to go back to privileged EXEC mode Switch# configure Switch(config)# interface GigabitEtherne 1 Switch(config-if)# end Switch#

exit

Syntax	exit
Parameter	
Default	No default value for this command.
Mode	User EXEC Privileged EXEC Global Configuration Interface Configuration Line Configuration
Usage	In User EXEC mode, “exit” command will close current CLI session. In other modes, “exit” command will go to the parent mode. And every mode has the “exit” command.
Example	This example shows how to enter privileged EXEC mode and use exit command to go back to user EXEC mode. Switch> enable Switch# exit Switch>

history

Syntax

```
history <1-256>
no history
```

Parameter

<1-256>	Specify maximum CLI history entry number.
----------------------	---

Default

Default maximum history entry number is 128.

Mode

Line Configuration

Usage

Use “**history**” command to specify the maximum commands history number for CLI running on console, telnet or ssh service. Every command input by user will record in history buffer. If all history commands exceed configured history number, older ones will be deleted from buffer.
Use “**no history**” to disable the history feature. And use “**show history**” to show all history commands.

Example

This example shows how to change console history number to 100, telnet history number to 150 and ssh history number to 200.

```
Switch(config)# line console
Switch(config-line)# history 100
Switch(config-line)# exit
Switch(config)# line telnet
Switch(config-line)# history 150
Switch(config-line)# exit
Switch(config)# line ssh
Switch(config-line)# history 200
Switch(config-line)# exit
```

This example shows how show line information.

```
Switch# show line
Console =====
Session Timeout : 10 (minutes)

History Count   : 100
Password Retry  : 3
Silent Time     : 0 (seconds)
Telnet =====
Telnet Server   : disabled
Session Timeout : 10 (minutes)
History Count   : 150
Password Retry  : 3
Silent Time     : 0 (seconds)
SSH =====
SSH Server      : disabled
Session Timeout : 10 (minutes)
History Count   : 200
Password Retry  : 3
Silent Time     : 0 (seconds)
```

This example shows how show history commands.

```
Switch# show history
Maximun History Count: 100
1.enable
2.configure
3.line console
4.exit
5.show history
6.line
7.exit
8.show history
9.configure
10.line
11.line console
12.exit
13.line console
14.history 100
15.exit
16.show history
17.exit
18.show history
```

hostname

Syntax	hostname <i>WORD</i>
Parameter	<i>WORD</i> Specify the hostname of the switch.
Default	Default name string is “Switch”.
Mode	Global Configuration
Usage	Use “ hostname ” command to modify hostname of the switch. The system name is also used to be CLI prompt.
Example	This example shows how to modify contact information Switch(config)# hostname myname myname(config)#

interface

Syntax	interface <i>IF_PORTS</i> interface range <i>IF_PORTS</i>
Parameter	<i>IF_PORTS</i> Specify the port to select. This parameter allows partial port name and ignore case. For Example: fa1

FastEthernet3

Gigabit4

.....

If port range is specified, the list format is also available. For Example:

gi1,3,5

gi2,gi1-3

.....

Default

No default value for this command.

Mode

Global Configuration

Usage

Some configurations are port based. In order to configure these configurations, we need to enter Interface Configuration mode to configure them. Use “**interface**” command to enter the Interface Configuration mode and select the port to be configured.

In Interface Configuration mode, the prompt will show as “**Switch(config-if)#**”

Example

This example shows how to enter Interface Configuration mode

```
Switch# configure
Switch(config)# interface GigabitEthernet 1
Switch(config-if) #
```

ip address

Syntax

ip address A.B.C.D [mask A.B.C.D]

Parameter

address A.B.C.D Specify IPv4 address for switch

mask A.B.C.D Specify net mask address for switch

Default

Default IP address is 192.168.1.1 and default net mask is 255.255.255.0.

Mode

Global Configuration

Usage

Use “**ip address**” command to modify administration ipv4 address. This address is very important. When we try to use telnet, ssh, http, https, snmp... to connect to the switch, we need to use this ip address to access it.

Example

This example shows how to modify the ipv4 address of the switch.

```
Switch(config)# ip address 192.168.1.200 mask 255.255.255.0
```

This example shows how to show current ipv4 address of the switch.

```
Switch# show ip
IP Address: 192.168.1.200
Subnet Netmask: 255.255.255.0
Default Gateway: 192.168.1.254
```

ip default-gateway

Syntax

ip default-gateway *A.B.C.D*
no ip default-gateway

Parameter

<i>A.B.C.D</i>	Specify default gateway IPv4 address for switch
----------------	---

Default

Default IP address of default gateway is 192.168.1.254.

Mode

Global Configuration

Usage

Use “**ip default-gateway**” command to modify default gateway address. And use “**no ip default-gateway**” to restore default gateway address to factory default.

Example

This example shows how to modify the ipv4 address of the switch.

```
Switch(config)# ip default-gateway 192.168.1.100
```

This example shows how to show current ipv4 default gateway of the switch.

```
Switch# show ip
IP Address: 192.168.1.1
Subnet Netmask: 255.255.255.0
Default Gateway: 192.168.1.100
```

ip dhcp

Syntax

ip dhcp no
ip dhcp

Parameter

Managed Switch Software

Default	Default DHCP client is disabled.
Mode	Global Configuration
Usage	<p>Use “ip dhcp” command to enabled dhcp client to get IP address from remote DHCP server.</p> <p>Use “no ip dhcp” command to disabled dhcp client and use static ip address.</p>
Example	<p>This example shows how to enable dhcp client.</p> <pre>Switch(config)# ip dhcp</pre> <p>This example shows how to show current dhcp client state of the switch.</p> <pre>Switch# show ip dhcp DHCP Status : enabled</pre>

ip dns

Syntax	ip dns <i>A.B.C.D</i> [<i>A.B.C.D</i>] no ip dns [<i>A.B.C.D</i>]
Parameter	<i>A.B.C.D</i> Specify the DNS server ip address.
Default	Default IP address of DNS server is 168.95.1.1 and 168.95.192.1.
Mode	Global Configuration
Usage	Use “ ip dns ” command to modify DNS server address. And use “ no ip dns ” to delete existing DNS server.
Example	<p>This example shows how to modify the DNS server of the switch.</p> <pre>Switch(config)# ip dns 111.111.111.111 222.222.222.222</pre>
	<p>This example shows current DNS server of the switch.</p> <pre>Switch# show ip dns DNS lookup is enabled DNS Server 1 : 111.111.111.111 DNS Server 2 : 222.222.222.222</pre>

ip dns lookup

Syntax	ip dns lookup no ip dns lookup
Parameter	
Default	Default DNS lookup is enabled
Mode	Global Configuration
Usage	Use “ ip dns lookup ” command to enable the Domain Name to IP address service. And use “ no ip dns ” to disable the DNS service.
Example	<p>This example enables the DNS service on the system. Switch(config)# ip dns lookup</p> <p>This example shows the DNS service status. Switch# show ip dns DNS Server 1 : 111.111.111.111 DNS Server 2 : 222.222.222.222</p>

ipv6 autoconfig

Syntax	ipv6 autoconfig no ipv6 autoconfig
Parameter	
Default	Default IPv6 auto config is enabled.
Mode	Global Configuration
Usage	Use “ ipv6 autoconfig ” command to enabled IPv6 auto configuration feature. Use “ no ipv6 autoconfig ” command to disabled IPv6 auto configuration feature.
Example	<p>This example shows how to disable IPv6 auto config. Switch(config)# no ipv6 autoconfig</p> <p>This example shows how to show current IPv6 auto config state. Switch# show ipv6 IPv6 DHCP Configuration : Disabled IPv6 DHCP DUID : :</p>

IPv6 Auto Configuration	: Disabled
IPv6 Link Local Address	: fe80::dcad:beff:feef:102/64
IPv6 static Address	: fe80::20e:2eff:fef1:4b3c/128
IPv6 static Gateway Address	: ::
IPv6 in use Address	: fe80::dcad:beff:feef:102/64
IPv6 in use Gateway Address	: ::

ipv6 address

Syntax	ipv6 address <i>X:X::X:X</i> prefix <0-128>				
Parameter	<table border="0"> <tr> <td>address <i>X:X::X:X</i></td><td>Specify IPv6 address for switch</td></tr> <tr> <td>prefix <0-128></td><td>Specify IPv6 prefix length for switch</td></tr> </table>	address <i>X:X::X:X</i>	Specify IPv6 address for switch	prefix <0-128>	Specify IPv6 prefix length for switch
address <i>X:X::X:X</i>	Specify IPv6 address for switch				
prefix <0-128>	Specify IPv6 prefix length for switch				
Default	No default ipv6 address on the switch.				
Mode	Global Configuration				
Usage	Use “ ipv6 address ” command to specify static IPv6 address.				
Example	<p>This example shows how to add static ipv6 address of the switch.</p> <pre>Switch(config)# ipv6 address fe80::20e:2eff:fef1:4b3c prefix 128</pre> <p>This example shows how to show current ipv6 address of the switch.</p> <pre>Switch# show ipv6 IPv6 DHCP Configuration : Disabled IPv6 DHCP DUID : IPv6 Auto Configuration : Enabled IPv6 Link Local Address : fe80::dcad:beff:feef:102/64 IPv6 static Address : fe80::20e:2eff:fef1:4b3c/128 IPv6 static Gateway Address : ::</pre>				

ipv6 default-gateway

Syntax	ipv6 default-gateway <i>X:X::X:X</i>
Parameter	<i>X:X::X:X</i> IPv6 gateway
Default	No default ipv6 default gateway address on the switch.

Mode	Global Configuration
Usage	Use “ ipv6 default-gateway ” command to modify default gateway IPv6 address.
Example	This example shows how to modify the ipv6 default gateway address of the switch. <pre>Switch(config)# ipv6 default-gateway fe80::dcad:beff:feef:103</pre> <pre>Switch# show ipv6 IPv6 DHCP Configuration : Disabled IPv6 DHCP DUID : IPv6 Auto Configuration : Enabled IPv6 Link Local Address : fe80::dcad:beff:feef:102/64 IPv6 static Address : fe80::20e:2eff:fef1:4b3c/128 IPv6 static Gateway Address : ::: IPv6 in use Address : fe80::dcad:beff:feef:102/64 IPv6 in use Gateway Address : :::</pre>

ipv6 dhcp

Syntax	ipv6 dhcp no ipv6 dhcp
Parameter	
Default	Default DHCPv6 client is disabled.
Mode	Global Configuration
Usage	Use “ ipv6 dhcp ” command to enabled dhcpcv6 client to get IP address from remote DHCPv6 server. Use “ no ipv6 dhcp ” command to disabled dhcpcv6 client and use static ipv6 address or ipv6 auto config address.
Example	This example shows how to enable dhcp client. <pre>Switch(config)# ipv6 dhcp</pre> This example shows how to show current dhcpcv6 client state of the switch. <pre>Switch# show ipv6 dhcp DHCPv6 Status : enabled</pre>

ip service

Syntax

```
ip (telnet | ssh | http | https)
no ip (telnet | ssh | http | https)
```

Parameter

telnet	Telnet daemon configuration
ssh	SSH (Secure Shell) configuration
http	HTTP server configuration
https	HTTPS server configuration

Default

Default telnet service is disabled.
Default ssh service is disabled.
Default http service is enabled.
Default https service is disabled.

Mode

Global Configuration

Usage

Use “ip service” command to enable all kinds of ip services. Such as telnet, ssh, http and https.
Use no form to disable service.

Example

This example shows how to enable telnet service and show current telnet service status.

```
Switch(config)# ip telnet
Telnetd daemon enabled.
Switch(config)# exit
Switch# show line telnet
Telnet =====
    Telnet Server      : enabled
    Session Timeout   : 10 (minutes)
    History Count     : 128
    Password Retry    : 3
    Silent Time       : 0 (seconds)
```

This example shows how to enable https service and show current https service status.

```
Switch(config)# ip https
Switch(config)# exit
Switch# show ip https
    HTTPS daemon : enabled
    Session Timeout : 10 (minutes)
```

ip session-timeout

Syntax

ip (http | https) session-timeout <0-86400>

Parameter

http	Specify session timeout for http service.
https	Specify session timeout for https service.
<0-86400>	Specify session timeout minutes. 0 means never timeout.

Default

Default session timeout for http and https is 10 minutes.

Mode

Global Configuration

Usage

Use “**ip session-timeout**” command to specify the session timeout value for http or https service. When user login into WEBUI and do not do any action after session timeout will be logged out.

Example

This example shows how to change http session timeout to 15min and https session timeout to 20min

```
Switch(config)# ip http session-timeout 15
Switch(config)# ip https session-timeout 20
```

This example shows how to enable https service and show current https service status.

```
Switch# show ip http
    HTTPS daemon : enabled
Session Timeout : 15 (minutes)
Switch# show ip https
    HTTPS daemon : disabled
Session Timeout : 20 (minutes)
```

ip ssh

Syntax

ip ssh (v1|v2|all)
no ip ssh (v1|v2|all)

Parameter

v1	SSH v1 host keys
v2	SSH v2 host keys
all	Both SSH v1 and v2 host keys

Default	Version 2 key files will be generated by default
----------------	--

Mode	Global Configuration
-------------	----------------------

Usage	Use “ip ssh” command to generate the key files for ssh connection. Use no form to delete key files. SSH connection may not connect if no any v1 or v2 ssh key files exist.
--------------	---

Example	This example shows how to delete and re-generate ssh version 2 key files. Switch(config)# no ip ssh v2 Switch(config)# do show flash <table border="1"><thead><tr><th>File Name</th><th>File Size</th><th>Modified</th></tr></thead><tbody><tr><td>startup-config</td><td>1913</td><td>2000-01-01 08:29:10</td></tr><tr><td>rsa1</td><td>976</td><td>2000-01-05 23:28:38</td></tr><tr><td>ssl_cert</td><td>875</td><td>2000-01-05 23:03:20</td></tr><tr><td>image0 (active)</td><td>4856825</td><td>2014-04-02 15:17:34</td></tr></tbody></table> Switch(config)# ip ssh v2 Generating a SSHv2 default RSA Key. This may take a few minutes, depending on the key size. Generating a SSHv2 default DSA Key. This may take a few minutes, depending on the key size. Switch(config)# do show flash <table border="1"><thead><tr><th>File Name</th><th>File Size</th><th>Modified</th></tr></thead><tbody><tr><td>startup-config</td><td>1913</td><td>2000-01-01 08:29:10</td></tr><tr><td>rsa1</td><td>976</td><td>2000-01-05 23:28:38</td></tr><tr><td>rsa2</td><td>1675</td><td>2000-01-05 23:34:43</td></tr><tr><td>dsa2</td><td>668</td><td>2000-01-05 23:34:58</td></tr><tr><td>ssl cert</td><td>875</td><td>2000-01-05 23:03:20</td></tr><tr><td>image0 (active)</td><td>4856825</td><td>2014-04-02 15:17:34</td></tr></tbody></table>	File Name	File Size	Modified	startup-config	1913	2000-01-01 08:29:10	rsa1	976	2000-01-05 23:28:38	ssl_cert	875	2000-01-05 23:03:20	image0 (active)	4856825	2014-04-02 15:17:34	File Name	File Size	Modified	startup-config	1913	2000-01-01 08:29:10	rsa1	976	2000-01-05 23:28:38	rsa2	1675	2000-01-05 23:34:43	dsa2	668	2000-01-05 23:34:58	ssl cert	875	2000-01-05 23:03:20	image0 (active)	4856825	2014-04-02 15:17:34
File Name	File Size	Modified																																			
startup-config	1913	2000-01-01 08:29:10																																			
rsa1	976	2000-01-05 23:28:38																																			
ssl_cert	875	2000-01-05 23:03:20																																			
image0 (active)	4856825	2014-04-02 15:17:34																																			
File Name	File Size	Modified																																			
startup-config	1913	2000-01-01 08:29:10																																			
rsa1	976	2000-01-05 23:28:38																																			
rsa2	1675	2000-01-05 23:34:43																																			
dsa2	668	2000-01-05 23:34:58																																			
ssl cert	875	2000-01-05 23:03:20																																			
image0 (active)	4856825	2014-04-02 15:17:34																																			

line

Syntax	line (console telnet ssh)
---------------	--

Parameter	Console terminal line.
telnet	Virtual terminal for remote console access (Telnet).
ssh	Virtual terminal for secured remote console access (SSH)

Default	No default value for this command.
----------------	------------------------------------

Mode	Global Configuration
Usage	<p>Some configurations are line based. In order to configure these configurations, we need to enter Line Configuration mode to configure them. Use “line” command to enter the Line Configuration mode and select the line to be configured.</p> <p>In Line Configuration mode, the prompt will show as “Switch(config-line)#”</p>
Example	<p>This example shows how to enter Interface Configuration mode</p> <pre>Switch# configure Switch(config)# line console Switch(config-line) #</pre>

reboot

Syntax	reboot
Parameter	
Default	No default value for this command.
Mode	Privileged EXEC
Usage	Use “ reboot ” command to make system hot restart.
Example	<p>This example shows how to restart the system</p> <pre>Switch# reboot</pre>

enable password

Syntax	enable [privilege <1-15>] (password UNENCRYPY-PASSWORD secret UNENCRYPY-PASSWORD secret encrypted ENCRYPT-PASSWORD) no enable [privilege <0-15>]				
Parameter	<table border="0"> <tr> <td>privilege <0-15></td> <td>Use clear text password.</td> </tr> <tr> <td>password</td> <td>Privilege level.</td> </tr> </table>	privilege <0-15>	Use clear text password.	password	Privilege level.
privilege <0-15>	Use clear text password.				
password	Privilege level.				
secret	Privilege level				

Default	Default enable password for all privilege levels are “”.
Mode	Global Configuration
Usage	<p>Use “enable password” command to edit password for each privilege level for enable authentication. And use “no enable” command to restore enable password to default empty value.</p> <p>The only way to show this configuration is using “show running-config” command.</p>
Example	<pre>Switch(config)# enable secret enblpasswd</pre>

exec-timeout

Syntax	exec-timeout <0-65535>		
Parameter	<table border="0"> <tr> <td style="vertical-align: top;"><0-65535></td><td>Specify session timeout minutes. 0 means never timeout</td></tr> </table>	<0-65535>	Specify session timeout minutes. 0 means never timeout
<0-65535>	Specify session timeout minutes. 0 means never timeout		
Default	Default session timeout for all lines are 10 minutes.		
Mode	Line Configuration		
Usage	<p>Use “exec-timeout” command to specify the session timeout value for CLI running on console, telnet or ssh service. When user login into CLI and do not do any action after session timeout will be logged out from the CLI session.</p>		
Example	<p>This example shows how to change console session timeout to 15min ,telnet session timeout to 20min and ssh session timeout to 25min.</p> <pre>Switch(config)# line console Switch(config-line)# exec-timeout 15 Switch(config-line)# exit Switch(config)# line telnet Switch(config-line)# exec-timeout 20 Switch(config-line)# exit Switch(config)# line ssh Switch(config-line)# exec-timeout 25 Switch(config-line)# exit</pre> <p>This example shows how show line information.</p> <pre>Switch# show line</pre>		

```
Console =====
Session Timeout : 15 (minutes)
History Count   : 128
Password Retry  : 3
Silent Time     : 0 (seconds)

Telnet =====
Telnet Server   : disabled
Session Timeout : 20 (minutes)
History Count   : 128
Password Retry  : 3
Silent Time     : 0 (seconds)

SSH =====
SSH Server      : disabled
Session Timeout : 25 (minutes)
History Count   : 128
Password Retry  : 3
Silent Time     : 0 (seconds)
```

password-thresh

Syntax	password-thresh <0-120>
--------	--------------------------------------

Parameter	<0-120>	CLI login password intrusion threshold
-----------	---------	--

Default	Default password fail retry number is 3.
---------	--

Mode	Line Configuration
------	--------------------

Usage	Use “ password-thresh ” command to specify the password fail retry number for CLI running on console, telnet or ssh service. When user input password to login and authenticate failed, the fail retry number will increase one. After fail retry number exceed configured one, the CLI will block login for the period of silent time which configured by the command “ silent-time ”.
-------	---

Example	This example shows how to change console fail retry number to 4, telnet fail retry number to 5 and ssh fail retry number to 6.
---------	--

```
Switch(config)# line console
Switch(config-line)# password-thresh 4
Switch(config-line)# exit
Switch(config)# line telnet
```

```
Switch(config-line)# password-thresh 5
Switch(config-line)# exit
Switch(config)# line ssh
Switch(config-line)# password-thresh 6
Switch(config-line)# exit
```

This example shows how show line information.

```
Switch# show line
Console =====
Session Timeout : 10 (minutes)
History Count   : 128
Password Retry  : 4
Silent Time     : 0 (seconds)
Telnet =====
Telnet Server   : disabled
Session Timeout : 10 (minutes)
History Count   : 128
Password Retry  : 5
Silent Time     : 0 (seconds)
SSH =====
SSH Server      : disabled
Session Timeout : 10 (minutes)
History Count   : 128
Password Retry  : 6
Silent Time     : 0 (seconds)
```

ping

Syntax

ping *HOSTNAME* [*count <1-99999999>*]

Parameter

<i>HOSTNAME</i>	Host name.
count <<i>1-99999999</i>>	The number of repetitions.

Default

No default value for this command.

Mode

User EXEC
Privileged EXEC

Usage

Use “**ping**” command to do network ping diagnostic.

Example

This example shows how to ping remote host 192.168.1.111.

```
Switch# ping 192.168.1.111
PING 192.168.1.111 (192.168.1.111): 56 data bytes
64 bytes from 192.168.1.111: icmp_seq=0 ttl=128 time=10.0 ms
64 bytes from 192.168.1.111: icmp_seq=1 ttl=128 time=0.0 ms
64 bytes from 192.168.1.111: icmp_seq=2 ttl=128 time=0.0 ms
64 bytes from 192.168.1.111: icmp_seq=3 ttl=128 time=0.0 ms

--- 192.168.1.111 ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max = 0.0/2.5/10.0 ms
```

traceroute

Syntax	traceroute <i>A.B.C.D</i> [max_hop <2-255>]
Parameter	<i>A.B.C.D</i> Specify IPv4 to trace. max_hop <2-255> Specify maximum hop to trace.
Default	No default value for this command.
Mode	User EXEC Privileged EXEC
Usage	Use “traceroute” command to do network trace route diagnostic.
Example	This example shows how to trace route host 192.168.1.111. Switch# traceroute 192.168.1.111 traceroute to 192.168.1.111 (192.168.1.111), 30 hops max, 40 byte packets 1 192.168.1.111 (192.168.1.111) 0 ms 10 ms 0 ms

show arp

Syntax	show arp
Parameter	
Default	No default value for this command.
Mode	User EXEC Privileged EXEC
Usage	Use “show arp” command to show all arp entries.
Example	This example shows how to show arp entries. Switch# show arp Address HWtype HWaddress Flags Mask Iface 192.168.1.111 ether 00:0E:2E:F1:4B:3C C eth0

show cpu utilization

Syntax **show cpu utilization**

Parameter

Default No default value for this command.

Mode Privileged EXEC

Usage Use “**show cpu utilization**” command to show current CPU utilization.

Example This example shows how to show current CPU utilization.

```
Switch# show cpu utilization
CPU utilization
-----
Current: 30%
```

show history

Syntax **show history**

Parameter

Default No default value for this command.

Mode User EXEC
 Privileged EXEC
 Global Configuration

Usage Use “**show history**” to show commands we input before.

Example This example shows how show history commands.

```
Switch# show history
Maximum History Count: 100
-----
```

1. enable
2. configure
3. line console
4. exit
5. show history
6. line
7. exit
8. show history
9. configure
10. line
11. line console
12. exit
13. line console
14. history 100
15. exit
16. show history
17. exit
18. show history

show info

Syntax

show info

Parameter

Default

No default value for this command.

Mode

User EXEC
Privileged EXEC

Usage

Use “**show info**” command to show system summary information.

Example

This example shows how to show system version.

```
Switch# show info
System Name      : Switch
System Location  : Default Location
System Contact   : Default Contact
MAC Address     : DE:AD:BE:EF:01:02
IP Address       : 192.168.1.1
Subnet Mask     : 255.255.255.0
Loader Version   : 1.3.0.26225
Loader Date      : Thu May 17 15:19:42 CST 2012
Firmware Version: 2.5.0-beta.32811
Firmware Date    : Mon Sep 24 19:33:42 CST 2012
System Object ID: 1.3.6.1.4.1.27282.3.2.10
System Up Time   : 0 days, 1 hours, 49 mins, 29 secs
```

show ip

Syntax	show ip
Parameter	
Default	No default value for this command.
Mode	User EXEC Privileged EXEC
Usage	Use “ show ip ” command to show system IPv4 address, net mask and default gateway.
Example	This example shows how to show current ipv4 address of the switch. Switch# show ip IP Address: 192.168.1.200 Subnet Netmask: 255.255.255.0 Default Gateway: 192.168.1.254

show ip dhcp

Syntax	show ip dhcp
Parameter	
Default	No default value for this command.
Mode	User EXEC Privileged EXEC
Usage	Use “ show ip dhcp ” command to show IPv4 dhcp client enable state.
Example	This example shows how to show current dhcp client state of the switch. Switch# show ip dhcp DHCP Status : enabled

show ip dns

Syntax	show ip dns
Parameter	
Default	No default value for this command.
Mode	User EXEC Privileged EXEC
Usage	Use “ show ip dns ” command to show system IPv4 DNS addresses.
Example	This example shows how to show current ipv4 address of the switch. Switch# show ip dns DNS lookup is enabled DNS Server 1 : 168.95.1.1 DNS Server 2 : 168.95.192.1

show ip http

Syntax	show ip (http https)
Parameter	
Default	No default value for this command.
Mode	Privileged EXEC
Usage	Use “ show ip http ” command to show HTTP/HTTPS information.
Example	This example shows how to show current ipv4 address of the switch. Switch# show ip http HTTP daemon : enabled Session Timeout : 10 (minutes) Switch# show ip https HTTPS daemon : enabled Session Timeout : 10 (minutes)

show ipv6

Syntax	show ipv6
Parameter	
Default	No default value for this command.
Mode	User EXEC Privileged EXEC
Usage	Use “ show ipv6 ” command to show system IPv6 address, net mask, default gateway and auto config state.
Example	This example shows how to show current ipv6 address of the switch. <pre>Switch# show ipv6 IPv6 DHCP Configuration : Disabled IPv6 DHCP DUID : IPv6 Auto Configuration : Enabled IPv6 Link Local Address : fe80::dcad:beff:feef:102/64 IPv6 static Address : fe80::20e:2eff:fef1:4b3c/128 IPv6 static Gateway Address : ::: IPv6 in use Address : fe80::dcad:beff:feef:102/64 IPv6 in use Gateway Address : :::</pre>

show ipv6 dhcp

Syntax	show ipv6 dhcp
Parameter	
Default	No default value for this command.
Mode	User EXEC Privileged EXEC
Usage	Use “ show ipv6 dhcp ” command to show system IPv6 dhcp client enable state.
Example	This example shows how to show current dhcpcv6 client state of the switch. <pre>Switch# show ipv6 dhcp DHCPv6 Status : enabled</pre>

show line

Syntax	show line [(console telnet ssh)]						
Parameter	<table border="1"> <tr> <td>console</td><td>Select console line to show.</td></tr> <tr> <td>telnet</td><td>Select telnet line to show.</td></tr> <tr> <td>ssh</td><td>Select ssh line to show.</td></tr> </table>	console	Select console line to show.	telnet	Select telnet line to show.	ssh	Select ssh line to show.
console	Select console line to show.						
telnet	Select telnet line to show.						
ssh	Select ssh line to show.						
Default	No default value for this command.						
Mode	Privileged EXEC						
Usage	Use “ show line ” command to show all line configurations including session timeout, history count, password retry number and silent time. For telnet and ssh, it also shows the service enable/disable state.						
Example	<p>This example shows how show all lines' information.</p> <pre>Switch# show line Console ===== Session Timeout : 15 (minutes) History Count : 128 Password Retry : 3 Silent Time : 0 (seconds) Telnet ===== Telnet Server : disabled Session Timeout : 20 (minutes) History Count : 128 Password Retry : 3 Silent Time : 0 (seconds) SSH ===== SSH Server : disabled Session Timeout : 25 (minutes) History Count : 128 Password Retry : 3 Silent Time : 0 (seconds)</pre>						

show memory statistics

Syntax	show memory statistics
Parameter	
Default	No default value for this command.
Mode	Privileged EXEC

Usage Use “**show memory statistics**” command to show current memory utilization.

Example This example show how to show current system memory statistics.

```
Switch# show memory statistics
      total (KB)     used (KB)     free (KB)    shared (KB)   buffer (KB)   cache (KB)
-----+-----+-----+-----+-----+-----+
Mem:       62408       56424       5984        0       1320      19328
-/+ buffers/cache:  35776      26632
Swap:      0          0          0
```

show privilege

Syntax **show privilege**

Parameter

Default No default value for this command.

Mode User EXEC
Privileged EXEC

Usage Use “**show privilege**” command to show the privilege level of the current user.

Example This example shows how to show arp entries.

```
Switch# show privilege
Current CLI Username: admin
Current CLI Privilege: 15
```

show username

Syntax **show username**

Parameter

Default No default value for this command

Mode Privileged EXEC

Usage Use “**show username**” command show all user accounts in local database.

Example

This example shows how to show existing user accounts.

Switch# **show username**

Priv	Type	User Name	Password
01	secret	dnXencJRwfIV6	
15	secret	admin FzjrGO6vfbERY	
15	secret	test 7p57T9yMkViSUS	

show users

Syntax

show users

Parameter

Default

No default value for this command

Mode

Privileged EXEC

Usage

Use “**show users**” command show information of all active users.

Example

This example shows how to show existing user accounts.

Switch# **show users**

Username	Protocol	Location
admin	console	0.0.0.0
admin	telnet	192.168.1.111
admin	ssh	192.168.1.111

show version

Syntax

show version

Parameter

Default

No default value for this command.

Mode

User EXEC

Privileged EXEC

Usage

Use “**show version**” command to show loader and firmware version and build date.

Example	This example shows how to show system version. Switch# show version Loader Version : 1.3.0.26225 Loader Date : Thu May 17 15:19:42 CST 2012 Firmware Version : 2.5.0-beta.32811 Firmware Date : Mon Sep 24 19:33:42 CST 2012
----------------	---

silent-time

Syntax	silent-time <0-65535>
Parameter	<0-65535> Specify silent time with unit seconds. 0 means do not silent.
Default	Default silent time is 0.
Mode	Line Configuration
Usage	Use “ silent time ” command to specify the silent time for CLI running on console, telnet or ssh service. When user input password to login and authenticate failed, the fail retry number will increase one. After fail retry number exceed configured one, the CLI will block login for the period of silent time which configured by the command “ silent-time ”.
Example	<p>This example shows how to change console silent time to 10, telnet silent time to 15 and ssh silent time to 20.</p> <pre>Switch(config)# line console Switch(config-line)# silent-time 10 Switch(config-line)# exit Switch(config)# line telnet Switch(config-line)# silent-time 15 Switch(config-line)# exit Switch(config)# line ssh Switch(config-line)# silent-time 20 Switch(config-line)# exit</pre> <p>This example shows how show line information.</p> <pre>Switch# show line</pre> <p>Console =====</p> <pre>Session Timeout : 10 (minutes) History Count : 128 Password Retry : 3 Silent Time : 10 (seconds)</pre> <p>Telnet =====</p> <pre>Telnet Server : disabled Session Timeout : 10 (minutes) History Count : 128 Password Retry : 3 Silent Time : 15 (seconds) SSH</pre>

=====

SSH Server : disabled Session
Timeout : 10 (minutes)
History Count : 128
Password Retry : 3
Silent Time : 20 (seconds)

system name

Syntax	system name <i>NAME</i>
Parameter	<i>NAME</i> Specify system name string.
Default	Default name string is “Switch”.
Mode	Global Configuration
Usage	Use “ system name ” command to modify system name information of the switch. The system name is also used to be CLI prompt.
Example	<p>This example shows how to modify contact information</p> <pre>Switch(config) # system name myname myname(config) #</pre> <p>This example shows how to show system name information</p> <pre>Switch# show info System Name : myname System Location : Default Location System Contact : Default Contact MAC Address : DE:AD:BE:EF:01:02 IP Address : 192.168.1.1 Subnet Mask: 255.255.255.0 Loader Version : 1.3.0.26225 Loader Date : Thu May 17 15:19:42 CST 2012 Firmware Version : 2.5.0-beta.32811 Firmware Date : Mon Sep 24 19:33:42 CST 2012 System Object ID : 1.3.6.1.4.1.27282.3.2.10 System Up Time : 0 days, 0 hours, 2 mins, 37 secs</pre>

system contact

Syntax	system contact <i>CONTACT</i>
---------------	--------------------------------------

Parameter	<i>CONTACT</i>	Specify contact string.
Default		Default contact string is “Default Contact”.
Mode		Global Configuration
Usage		Use “ system contact ” command to modify contact information of the switch.
Example		<p>This example shows how to modify contact information</p> <pre>Switch(config)# system contact callme</pre> <p>This example shows how to show system contact information</p> <pre>Switch# show info System Name : Switch System Location : Default Location System Contact : callme MAC Address : DE:AD:BE:EF:01:02 IP Address : 192.168.1.1 Subnet Mask : 255.255.255.0 Loader Version : 1.3.0.26225 Loader Date : Thu May 17 15:19:42 CST 2012 Firmware Version: 2.5.0-beta.32811 Firmware Date : Mon Sep 24 19:33:42 CST 2012 System Object ID: 1.3.6.1.4.1.27282.3.2.10 System Up Time : 0 days, 0 hours, 2 mins, 37 secs</pre>

system location

Syntax	system location <i>LOCATION</i>	
Parameter	<i>CONTACT</i>	Specify location string.
Default		Default location string is “Default Location”.
Mode		Global Configuration
Usage		Use “ system location ” command to modify location information of the switch.
Example	<p>This example shows how to modify contact information</p> <pre>Switch(config)# system location home</pre>	

This example shows how to show system location information

```
Switch# show info
System Name      : SwitchEF0102
System Location  : home
System Contact   : Default Contact
MAC Address      : DE:AD:BE:EF:01:02
IP Address       : 192.168.1.1
Subnet Mask      : 255.255.255.0
Loader Version   : 1.3.0.26225
Loader Date      : Thu May 17 15:19:42 CST 2012
Firmware Version : 2.5.0-beta.32811
Firmware Date    : Mon Sep 24 19:33:42 CST 2012
System Object ID : 1.3.6.1.4.1.27282.3.2.10
System Up Time   : 0 days, 0 hours, 2 mins, 37 secs
```

terminal length

Syntax **terminal length <0-24>**

Parameter	<0-24>	Specify terminal length value. 0 means no limit.
------------------	---------------------	--

Default	Default terminal length is 24.
----------------	--------------------------------

Mode	User EXEC Privileged EXEC
-------------	------------------------------

Usage	Use “ terminal length ” command to specify the maximum line number the terminal is able to print.
--------------	--

Example	This example shows how to change terminal length.
----------------	---

```
Switch# terminal length 3
Switch# show running-config
SYSTEM CONFIG FILE ::= BEGIN
! System Description: RTK RTL8380-24FE-4GEC Switch
! System Version: v3.0.4.46766
--More--
```

username

Syntax **username WORD<0-32> [privilege (admin|user)<0-15>] (nopassword | password UNENCRYPY-PASSWORD | secret UNENCRYPY-PASSWORD | secret encrypted ENCRYPT-PASSWORD)**
no username WORD<0-32>

Parameter	username	Local user name																
	privilege	Local user privilege level																
	password	Use clear text password																
	nopassword	No password for this user.																
	Secret	Use encrypted password.																
Default	Default username “admin” has password “admin” with privilege 15.																	
Mode	Global Configuration																	
Usage	Use “ username ” command to add a new user account or edit an existing user account. And use “ no username ” to delete an existing user account. The user account is a local database for login authentication.																	
Example	<p>This example shows how to add a new user account. Switch(config)# username test secret passwd</p> <p>This example shows how to show existing user accounts. Switch# show username</p> <table border="1"> <thead> <tr> <th>Priv</th> <th>Type</th> <th>User Name</th> <th>Password</th> </tr> </thead> <tbody> <tr> <td>01</td> <td>secret</td> <td></td> <td> dnXencJRWf1V6</td> </tr> <tr> <td>15</td> <td>secret</td> <td>admin</td> <td> FzjrG06vfbERY</td> </tr> <tr> <td>15</td> <td>secret</td> <td>test</td> <td> 7p57T9yMkViSUS</td> </tr> </tbody> </table>		Priv	Type	User Name	Password	01	secret		dnXencJRWf1V6	15	secret	admin	FzjrG06vfbERY	15	secret	test	7p57T9yMkViSUS
Priv	Type	User Name	Password															
01	secret		dnXencJRWf1V6															
15	secret	admin	FzjrG06vfbERY															
15	secret	test	7p57T9yMkViSUS															

4. Authentication Manager

authentication

Syntax	authentication (dot1x mac web) no authentication (dot1x mac web)
Parameter	
Default	Default is disabled for all type
Mode	Global Configuration

Usage	Use “ authentication ” command to enable the global setting of 802.1x/MAC/WEB authentication network access control. Use the no form of this command to disable 802.1x/MAC/WEB authentication.
--------------	---

Example	The following example shows how to enable 802.1x/MAC/WEB authentication. <pre>Switch(config)# authentication dot1x Switch(config)# authentication mac Switch(config)# authentication web Switch# show authentication Autentication dot1x state : enabled Autentication mac state : enabled Autentication web state : enabled Guest VLAN : enabled (3) Mac-auth Radius User ID Format: XXXXXXXXXXXXXXXX</pre>
----------------	--

authentication (Interface)

Syntax	authentication (dot1x mac web) no authentication (dot1x mac web)
---------------	---

Parameter	
------------------	--

Default	Default is disabled for all type
----------------	----------------------------------

Mode	Interface Configuration
-------------	-------------------------

Usage	Use “ authentication ” interface command to enable the port setting of 802.1x/MAC/WEB authentication network access control. Use the no form of this command to disable 802.1x/MAC/WEB authentication.
--------------	---

Example	The following example shows how to enable 802.1x/MAC/WEB authentication. <pre>Switch(config)# interface GigabitEthernet 1 Switch(config-if)# authentication dot1x Switch(config-if)# authentication mac Switch(config-if)# authentication web Switch# show authentication interface GigabitEthernet 1 Interface FastEthernet1 Admin Control : disable Host Mode : multi-auth Type dot1x State : enabled Type mac State : enabled Type web State : enabled</pre>
----------------	---

authentication mac radius

Syntax	authentication mac radius [mac-case (lower upper)] [mac-delimiter (colon dot hyphen none) [gap (2 4 6)]]						
Parameter	<table border="0"> <tr> <td>mac-case (lower upper)</td><td>Select radius user id to be upper case or lower case.</td></tr> <tr> <td>mac-delimiter</td><td>MAC address delimiter used for Radius user ID format</td></tr> <tr> <td>gap (2 4 6)</td><td>The gap of each delimiter</td></tr> </table>	mac-case (lower upper)	Select radius user id to be upper case or lower case.	mac-delimiter	MAC address delimiter used for Radius user ID format	gap (2 4 6)	The gap of each delimiter
mac-case (lower upper)	Select radius user id to be upper case or lower case.						
mac-delimiter	MAC address delimiter used for Radius user ID format						
gap (2 4 6)	The gap of each delimiter						
Default	Default radius id format is upper case with none delimiter.						
Mode	Global Configuration						
Usage	Use “ authentication mac radius ” command to configure the radius user id format used by MAC authentication Radius method.						
Example	<p>The following example shows how to configure MAC authentication radius id format to be upper case with colon delimiter every 2 chars</p> <pre>Switch(config)# authentication mac radius mac-case upper Switch(config)# authentication mac radius mac-delimiter colon Switch# show authentication Autentication dot1x state : enabled Autentication mac state : disabled Autentication web state : disabled Guest VLAN : disabled Mac-auth Radius User ID Format: XX:XX:XX:XX:XX:XX</pre>						

authentication mac local

Syntax	authentication mac local <i>mac-addr</i> control auth [vlan <1-4094>] [reauth-period <300-4294967294>] [inactive-timeout <60-65535>] authentication mac local <i>mac-addr</i> control unauth no authentication mac local <i>mac-addr</i>								
Parameter	<table border="0"> <tr> <td><i>mac-addr</i></td><td>MAC Authentication local MAC address</td></tr> <tr> <td>control auth</td><td>Host will be set to Authorized</td></tr> <tr> <td>control unauth</td><td>Host will be set to UnAuthorized</td></tr> <tr> <td>vlan <1-4094></td><td>Local entry assigned vlan</td></tr> </table>	<i>mac-addr</i>	MAC Authentication local MAC address	control auth	Host will be set to Authorized	control unauth	Host will be set to UnAuthorized	vlan <1-4094>	Local entry assigned vlan
<i>mac-addr</i>	MAC Authentication local MAC address								
control auth	Host will be set to Authorized								
control unauth	Host will be set to UnAuthorized								
vlan <1-4094>	Local entry assigned vlan								

reauth-period
<300-4294967294>

inactive-timeout **Time in seconds after which an automatic re-authentication**
Interval in seconds after which if there is no activity from
the client then it will be unauthorized *<60-65535>*

Default

Default is no local MAC Authentication entry.

Mode

Global Configuration

Usage

Use “**authentication mac local**” command to add local MAC authentication hosts in database. This local host database is used when MAC authentication method is configured as “local”. The MAC authentication module will find host in this local database and authenticated it.

Use the **no** form of this command to delete local host from database.

Example

The following example shows how to add a new local mac authentication host.

```
Switch(config)# authentication mac local 00:11:22:33:00:01
control auth vlan 3 reauth-period 500 inactive-timeout 300
Switch# show authentication
```

.....

Mac-auth Local Entry	:	Reauth	Inactive	
MAC Address	Control	VLAN	Period	Timeout
00:11:22:33:00:01	Authorized	3	500	300

.....

authentication guest-vlan

Syntax

authentication guest-vlan <1-4094>
no authentication guest-vlan

Parameter

<1-4094> VLAN ID

Default

Default guest VLAN is disabled

Mode

Global Configuration

Usage

Use “**authentication guest-vlan**” command to enable the global setting of guest VLAN and specify guest VLAN ID.

Use the **no** form of this command to disable guest VLAN.

Example

The following example shows how to create guest VLAN.

```
Switch(config)# vlan 3
```

```
Switch(config-vlan)# exit
Switch(config)# authentication guest-vlan 3
Switch# show authentication
Autentication dot1x state      : enabled
Autentication mac state       : disabled
Autentication web state       : disabled
Guest VLAN                    : enabled (3)
Mac-auth Radius User ID Format: XXXXXXXXXXXXXXXX
.....
```

authentication guest-vlan (Interface)

Syntax **authentication guest-vlan**
 no authentication guest-vlan

Parameter

Default Default guest VLAN is disabled

Mode Interface Configuration

Usage Use “**authentication guest-vlan**” command to enable the port setting of guest VLAN.
 Use the **no** form of this command to disable guest VLAN.

Example The following example shows how to enable guest VLAN.
Switch(config)# **interface GigabitEthernet 1**
Switch(config-if)# **authentication guest-vlan**

authentication host-mode

Syntax **authentication host-mode (multi-auth|multi-host|single-host)**
 no authentication host-mode

Parameter

multi-auth	Multiple Authentication Mode
multi-host	Multiple Host Mode.
single-host	Single Host Mode

Default Default is multi-auth mode.

Mode	Interface Configuration
Usage	<p>Use “authentication host-mode” command to configure the port authentication host mode.</p> <p>Use the no form of this command to restore default value.</p>
Example	<p>The following example shows how to modify port host mode to multi-host.</p> <pre>Switch(config)# interface GigabitEthernet 1 Switch(config-if)# authentication host-mode multi-host Switch# show authentication interface fa1 Interface FastEthernet1 Admin Control : auto Host Mode : multi-host Type dot1x State : disabled Type mac State : disabled Type web State : disabled</pre>

authentication max-hosts

Syntax	authentication max-hosts <1-256> no authentication max-hosts
Parameter	<1-256> Available max host number in multi-auth mode.
Default	Default max host number is 256
Mode	Interface Configuration
Usage	<p>Use “authentication max-hosts” command to configure the port max hosts number for multi-auth mode. The host exceed the max host number is not allowed to create authentication session and do authenticating.</p> <p>Use no form of this command to restore default value.</p>
Example	<p>The following example shows how to change port max hosts number.</p> <pre>Switch(config)# interface GigabitEthernet 1 Switch(config-if)# authentication max-hosts 100 Switch# show mac-auth interface GigabitEthernet 1 Interface FastEthernet1 Admin Control : disable Host Mode : multi-auth Type dot1x State : disabled Type mac State : disabled Type web State : disabled Type Order : dot1x MAC/WEB Method Order : radius Guest VLAN : disabled Reauthentication : disabled Max Hosts : 100</pre>

authentication method

Syntax	authentication method (local [radius] radius [local]) no authentication order				
Parameter	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%; padding: 2px;">local</td><td style="width: 80%; padding: 2px;">Use local account to authenticate</td></tr> <tr> <td style="padding: 2px;">radius</td><td style="padding: 2px;">Use remote RADIUS server to authenticate</td></tr> </table>	local	Use local account to authenticate	radius	Use remote RADIUS server to authenticate
local	Use local account to authenticate				
radius	Use remote RADIUS server to authenticate				
Default	Default is RADIUS method in first place and no other method.				
Mode	Interface Configuration				
Usage	<p>Use “authentication method” command to configure the port authentication method order.</p> <p>Use the no form of this command to restore default value.</p>				
Example	<p>The following example shows how to modify port authentication order to local and then RADIUS.</p> <pre>Switch(config)# interface GigabitEthernet 1 Switch(config-if)# authentication method local radius Switch# show authentication interface GigabitEthernet 1 Interface FastEthernet1 Admin Control : auto Host Mode : multi-host Type dot1x State : disabled Type mac State : disabled Type web State : disabled Type Order : dot1x mac web MAC/WEB Method Order : local radius</pre>				

authentication order

Syntax	authentication order (dot1x [mac] [web] mac [dot1x] [web] web) no authentication order						
Parameter	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%; padding: 2px;">dot1x</td><td style="width: 80%; padding: 2px;">802.1X authentication</td></tr> <tr> <td style="padding: 2px;">mac</td><td style="padding: 2px;">MAC-Based authentication</td></tr> <tr> <td style="padding: 2px;">web</td><td style="padding: 2px;">Web-Based authentication authentication</td></tr> </table>	dot1x	802.1X authentication	mac	MAC-Based authentication	web	Web-Based authentication authentication
dot1x	802.1X authentication						
mac	MAC-Based authentication						
web	Web-Based authentication authentication						
Default	Default is dot1x type in first place and no other types.						
Mode	Interface Configuration						

Usage	Use “ authentication order ” command to configure the port authentication type order. Use the no form of this command to restore default value.
--------------	--

Example	The following example shows how to modify port authentication order to dot1x, mac and web. Switch(config)# interface GigabitEthernet 1 Switch(config-if)# authentication order dot1x mac web Switch# show authentication interface GigabitEthernet 1 Interface FastEthernet1 Admin Control : auto Host Mode : multi-host Type dot1x State : disabled Type mac State : disabled Type web State : disabled Type Order : dot1x mac web
----------------	---

authentication port-control

Syntax	authentication port-control (auto force-auth force-unauth) no authentication port-control
---------------	--

Parameter	auto PortState will be set to AUTO
	force-auth PortState will be set to Authorized.
	force-unauth PortState will be set to UnAuthorized have no network accessibility.

Default	Default is disabled.
----------------	----------------------

Mode	Interface Configuration
-------------	-------------------------

Usage	Use “ authentication port-control ” command to enable the port authentication control mode. Use the no form of this command to disable authentication port control.
--------------	--

Example	The following example shows how to configure port control to auto mode. Switch(config)# interface GigabitEthernet 1 Switch(config-if)# authentication port-control auto Switch# show authentication interface GigabitEthernet 1 Interface FastEthernet1 Admin Control : auto Host Mode : multi-auth Type dot1x State : disabled Type mac State : disabled Type web State : disabled
----------------	--

authentication radius-attributes vlan

Syntax	authentication radius-attributes vlan (reject static) no authentication radius-attributes vlan				
Parameter	<table border="1"> <tr> <td>reject</td><td>If the Radius server authorized the supplicant, but did not provide a supplicant VLAN, the supplicant is rejected. This option is applied by default.</td></tr> <tr> <td>static</td><td>If the Radius server authorized the supplicant, but did not provide a supplicant VLAN, the supplicant information, keep original VLAN of host.</td></tr> </table>	reject	If the Radius server authorized the supplicant, but did not provide a supplicant VLAN, the supplicant is rejected. This option is applied by default.	static	If the Radius server authorized the supplicant, but did not provide a supplicant VLAN, the supplicant information, keep original VLAN of host.
reject	If the Radius server authorized the supplicant, but did not provide a supplicant VLAN, the supplicant is rejected. This option is applied by default.				
static	If the Radius server authorized the supplicant, but did not provide a supplicant VLAN, the supplicant information, keep original VLAN of host.				
Default	Default radius attributes VLAN assign mode is static.				
Mode	Interface Configuration				
Usage	Use “ authentication radius-attributes vlan ” command to configure the port RADIUS VLAN assign mode. Use the no form of this command to disable the port RADIUS VLAN assign.				

Example	The following example shows how to configure port VLAN assign to reject mode.
	<pre>Switch(config)# interface GigabitEthernet 1 Switch(config-if)# authentication radius-attributes vlan reject Switch# show authentication interface GigabitEthernet 1 Interface FastEthernet1 Admin Control : disable Host Mode : multi-auth Type dot1x State : disabled Type mac State : disabled Type web State : disabled Type Order : dot1x MAC/WEB Method Order : radius Guest VLAN : disabled Reauthentication : disabled Max Hosts : 256 VLAN Assign Mode : reject</pre>

authentication reauth

Syntax	authentication reauth no authentication reauth
---------------	---

Parameter

Default Default is disabled.

Mode Interface Configuration

Usage Use “**authentication reauth**” command to enable the port reauthentication.
Use the **no** form of this command to disable reauthentication.

Example The following example shows how to enable port reauthentication.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# authentication reauth
Switch# show authentication interface GigabitEthernet 1
Interface FastEthernet1
    Admin Control          : disable
    Host Mode              : multi-auth
    Type dot1x State       : disabled
    Type mac State         : disabled
    Type web State         : disabled
    Type Order              : dot1x
    MAC/WEB Method Order   : radius
    Guest VLAN              : disabled
    Reauthentication        : enabled
.....
```

authentication timer inactive

Syntax

authentication timer inactive <60-65535>

no authentication timer inactive

Parameter

<60-65535> Interval in seconds after which if there is no activity from the client then it will be unauthorized

Default

Default inactive timeout is 60 seconds.

Mode Interface Configuration

Usage Use “**authentication timer inactive**” command to configure the port inactive timeout value.

Sometimes, we may assign a long aging time for a host, but in fact, it is not active. This inactive timeout will detect the host is active or not. If the host is inactive exceed this timeout, it should be removed.

Use **no** form of this command to restore default value.

Example

The following example shows how to configure port inactive period.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# authentication timer inactive 300
Switch# show authentication interface GigabitEthernet 1
Interface FastEthernet1
.....
Common Timers
  Reauthenticate Period: 300
  Inactive Timeout : 300
  Quiet Period : 60
802.1x Parameters
  EAP Max Request : 2
  EAP TX Period : 30
  Supplicant Timeout : 30
  Server Timeout : 30
Web-auth Parameters
  Login Attempt : 3
```

authentication timer quiet

Syntax

authentication timer quiet <0-65535>
no authentication timer quiet

Parameter

<0-65535>	Interval in seconds to wait following a failed authentication exchange
------------------------	---

Default

Default quiet period is 60 seconds.

Mode

Interface Configuration

Usage

Use “**authentication timer quiet**” command to configure the port quiet period value.

After authenticating fail many times and the port is guest VLAN disabled, the port/host will enter lock state until quiet period expired. In lock state, the port/host is not allowed to do authenticating.

Use **no** form of this command to restore default value.

Example

The following example shows how to configure port quiet period.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# authentication timer quiet 300
Switch# show authentication interface GigabitEthernet 1
Interface FastEthernet1
.....
Common Timers
  Reauthenticate Period: 300
  Inactive Timeout : 300
  Quiet Period : 300
```

```
802.1x Parameters
  EAP Max Request      : 2
  EAP TX Period        : 30
  Supplicant Timeout   : 30
  Server Timeout       : 30
Web-auth Parameters
  Login Attempt        : 3
```

authentication timer reauth

Syntax	authentication timer reauth <300-4294967294> no authentication timer reauth	
Parameter	<300-4294967294>	Time in seconds after which an automatic re-authentication should be initiated
Default	Default reauthentication period is 3600 seconds.	
Mode	Interface Configuration	
Usage	<p>Use “authentication timer reauth” command to configure the port reauthentication period value with unit second if the reauthentication time is not assigned by local database or remote authentication server. On the other hand, if the reauthentication time is assigned by local database or remote server, this configured reauthentication time will be ignored.</p> <p>Use no form of this command to restore default value.</p>	
Example	<p>The following example shows how to configure port reauthentication period.</p> <pre>Switch(config)# interface GigabitEthernet 1 Switch(config-if)# authentication timer reauth 300 Switch# show authentication interface GigabitEthernet 1 Interface FastEthernet1 Common Timers Reauthenticate Period: 300 Inactive Timeout : 60 Quiet Period : 60 802.1x Parameters EAP Max Request : 2 EAP TX Period : 30 Supplicant Timeout : 30 Server Timeout : 30 Web-auth Parameters Login Attempt : 3</pre>	

authentication web max-login-attempts

Syntax	authentication web max-login-attempts (infinite <3-10>) no authentication web max-login-attempts
Parameter	infinite No limit to login attempt number <3-10> Allow user login fail number
Default	Default max login attempt number is 3.
Mode	Interface Configuration
Usage	Use “ authentication web max-login-attempts ” command to configure the port WEB authentication max login attempt number. After login fail number exceed, the host will enter Lock state and is not able to authenticate until quiet period exceed. Use no form of this command to restore default value.
Example	The following example shows how to configure port max login attempt number. Switch(config)# interface GigabitEthernet 1 Switch(config-if)# authentication web max-login-attempts 5 Switch# show authentication interface GigabitEthernet 1 Interface FastEthernet1 Common Timers Reauthenticate Period: 300 Inactive Timeout : 300 Quiet Period : 300 802.1x Parameters EAP Max Request : 1 EAP TX Period : 10 Supplicant Timeout : 120 Server Timeout : 150 Web-auth Parameters Login Attempt : 5

clear authentication sessions

Syntax	clear authentication sessions clear authentication sessions interfaces IF_PORTS clear authentication sessions mac mac-addr clear authentication sessions session-id WORD clear authentication sessions type (dot1x mac web)
Parameter	interfaces Interface status and configuration

mac	Use MAC address to find specific session
session-id	Use session id to find specific session
type	Use authentication type to find sessions

Default Default is no local authentication entry.

Mode Privileged EXEC

Usage Use “**clear authentication sessions**” command to delete existing authentication sessions. If no parameter is specified, all sessions will be deleted.
After authentication session is deleted, host need to do authentication procedure again.

Example The following example shows how to clear all authentication sessions.

```
Switch# clear authentication sessions
Switch# show authentication sessions
No Auth Manager sessions currently exist
```

dot1x

Syntax **dot1x**
no dot1x

Parameter

Default Default 802.1x is disabled

Mode Global Configuration

Usage Use “**dot1x**” command to enable the global setting of 802.1x. The “**authentication dot1x**” command has the same effect as this one. This command is a backward compatible command.
Use the **no** form of this command to disable 802.1x authentication.

Example The following example shows how to enable 802.1x authentication.

```
Switch(config)# dot1x
Switch# show authentication
Autentication dot1x state      : enabled
Autentication mac state       : disabled
Autentication web state       : disabled
Guest VLAN                      : enabled (3)
```

Mac-auth Radius User ID Format: XXXXXXXXXXXXXXXX

.....

dot1x guest-vlan

Syntax	dot1x guest-vlan <1-4094> no dot1x guest-vlan
Parameter	<1-4094> Guest VLAN configuration
Default	Default guest VLAN is disabled
Mode	Global Configuration
Usage	Use “ dot1x guest-vlan ” command to enable the global setting of guest VLAN and specify guest VLAN ID. Use the no form of this command to disable guest VLAN.
Example	The following example shows how to create guest VLAN. Switch(config)# vlan 3 Switch(config-vlan)# exit Switch(config)# dot1x guest-vlan 3 Switch# show authentication Autentication dot1x state : enabled Autentication mac state : disabled Autentication web state : disabled Guest VLAN : enabled (3) Mac-auth Radius User ID Format: XXXXXXXXXXXXXXXX

dot1x max-req

Syntax	dot1x max-req <1-10> no dot1x max-req
Parameter	<1-10> Maximum request retries (default: 2 times),
Default	Default EAP max request number is 2.

Mode	Interface Configuration
Usage	<p>Use “dot1x max-req” command to configure the port 802.1x max EAP request value. The max request is the maximum number of EAP requests that can be sent. If a response is not received after the defined period (supplicant timeout), the authentication process is restarted.</p> <p>Use no form of this command to restore default value.</p>
Example	<p>The following example shows how to configure port 802.1x EAP TX period.</p> <pre>Switch(config)# interface GigabitEthernet 1 Switch(config-if)# dot1x max-req 1 Switch# show authentication interface GigabitEthernet 1 Interface GigabitEthernet 1 ----- Common Timers Reauthenticate Period: 300 Inactive Timeout : 300 Quiet Period : 300 802.1x Parameters EAP Max Request : 1 EAP TX Period : 10 Supplicant Timeout : 120 Server Timeout : 150 Web-auth Parameters Login Attempt : 3</pre>

dot1x port-control

Syntax	dot1x port-control (auto force-auth force-unauth) no dot1x port-control						
Parameter	<table border="0"> <tr> <td>auto</td> <td>PortState will be set to AUTO</td> </tr> <tr> <td>force-auth</td> <td>PortState will be set to Authorized.</td> </tr> <tr> <td>force-unauth</td> <td>PortState will be set to UnAuthorized have no network accessibility.</td> </tr> </table>	auto	PortState will be set to AUTO	force-auth	PortState will be set to Authorized.	force-unauth	PortState will be set to UnAuthorized have no network accessibility.
auto	PortState will be set to AUTO						
force-auth	PortState will be set to Authorized.						
force-unauth	PortState will be set to UnAuthorized have no network accessibility.						
Default	Default is disabled.						
Mode	Interface Configuration						
Usage	<p>Use “dot1x port-control” command to enable the port authentication control mode. The “authentication port-control” command has the same effect.</p> <p>Use the no form of this command to disable authentication port control.</p>						

Example

The following example shows how to configure port control to auto mode.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# dot1x port-control auto
Switch# show authentication interface GigabitEthernet 1
Interface GigabitEthernet 1
    Admin Control      : auto
    Host Mode          : multi-auth
    Type dot1x State   : enabled
    Type mac State     : disabled
    Type web State     : disabled
....
```

dot1x reauth

Syntax

dot1x reauth
no dot1x reauth

Parameter

Default

Default is disabled.

Mode

Interface Configuration

Usage

Use “**dot1x reauth**” command to enable the port reauthentication. The “**authentication reauth**” command has the same effect, it is a backward compatible command

Use the **no** form of this command to disable reauthentication.

Example

The following example shows how to enable port reauthentication.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# dot1x reauth
Switch# show authentication interface GigabitEthernet 1
Interface GigabitEthernet 1
    Admin Control      : disable
    Host Mode          : multi-auth
    Type dot1x State   : disabled
    Type mac State     : disabled
    Type web State     : disabled
    Type Order         : dot1x
    MAC/WEB Method Order : radius
    Guest VLAN         : disabled
    Reauthentication    : enabled
....
```

dot1x timeout reauth-period

Syntax

dot1x timeout reauth-period <300-4294967294>
no dot1x timeout reauth-period

Parameter	<300-4294967294>	Re-authentication period
Default	Default reauthentication period is 3600 seconds.	
Mode	Interface Configuration	
Usage	<p>Use “dot1x timeout reauth” command to configure the port reauthentication period value with unit second if the reauthentication time is not assigned by local database or remote authentication server. On the other hand, if the reauthentication time is assigned by local database or remote server, this configured reauthentication time will be ignored.</p> <p>The “authentication timer reauth” command has the same effect and it is a backward compatible command.</p>	
	<p>Use no form of this command to restore default value.</p>	
Example	<p>The following example shows how to configure port 802.1x reauthentication period.</p> <pre>Switch(config)# interface GigabitEthernet 1 Switch(config-if)# dot1x timeout reauth-period 300 Switch# show authentication interface GigabitEthernet 1 Interface GigabitEthernet 1 Common Timers Reauthenticate Period: 300 Inactive Timeout : 60 Quiet Period : 60 802.1x Parameters EAP Max Request : 2 EAP TX Period : 30 Supplicant Timeout : 30 Server Timeout : 30 Web-auth Parameters Login Attempt : 3</pre>	

dot1x timeout quiet-period

Syntax	dot1x timeout quiet-period <0-65535>	
	no dot1x timeout quiet-period	
Parameter	<0-65535>	Quiet period

Default	Default quiet period is 60 seconds.
----------------	-------------------------------------

Mode	Interface Configuration
-------------	-------------------------

Usage	<p>Use “dot1x timeout quiet-period” command to configure the port quiet period value. The “authentication timer quiet” command has the same effect and it is backward compatible command.</p> <p>After authenticating fail many times and the port is guest VLAN disabled, the port/host will enter lock state until quiet period expired. In lock state, the port/host is not allowed to do authenticating.</p> <p>Use no form of this command to restore default value.</p>
--------------	--

Example	The following example shows how to configure port 802.1x quiet period.
----------------	--

```

Switch(config)# interface GigabitEthernet 1
Switch(config-if)# dot1x timeout quiet-period 300
Switch# show authentication interface GigabitEthernet 1
Interface GigabitEthernet 1
.....
Common Timers
  Reauthenticate Period: 300
  Inactive Timeout : 300
  Quiet Period : 300
802.1x Parameters
  EAP Max Request : 2
  EAP TX Period : 30
  Supplicant Timeout : 30
  Server Timeout : 30
  Web-auth Parameters
    Login Attempt : 3

```

dot1x timeout server-timeout

Syntax	dot1x timeout server-timeout <1-65535>
---------------	---

no dot1x timeout server-timeout

Parameter	<1-65535>	Supplicant timeout period
------------------	------------------------	---------------------------

Default	Default server timeout is 30 seconds.
----------------	---------------------------------------

Mode	Interface Configuration
-------------	-------------------------

Usage	Use “ dot1x timeout server-timeout ” command to configure the port 802.1x server timeout value. The server timeout is the number of seconds that lapses
--------------	--

before the device resends a request to the authentication server.
Use **no** form of this command to restore default value.

Example

The following example shows how to configure port 802.1x server timeout.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# dot1x timeout supp-timeout 150
Switch# show authentication interface GigabitEthernet 1
Interface GigabitEthernet 1
.....
Common Timers
  Reauthenticate Period: 300
  Inactive Timeout : 300
  Quiet Period : 300
802.1x Parameters
  EAP Max Request : 2
  EAP TX Period : 30
  Supplicant Timeout : 120
  Server Timeout : 150
Web-auth Parameters
  Login Attempt : 3
```

dot1x timeout supp-timeout

Syntax

dot1x timeout supp-timeout <1-65535>
no dot1x timeout supp-timeout

Parameter

<1-65535> Supplicant timeout period

Default

Default supplicant timeout is 30 seconds.

Mode

Interface Configuration

Usage

Use “**dot1x timeout supp-timeout**” command to configure the port supplicant timeout value. The supplicant timeout is the number of seconds that lapses before EAP requests are resent to the supplicant.
Use **no** form of this command to restore default value.

Example

The following example shows how to configure port 802.1x supplicant timeout.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# dot1x timeout supp-timeout 120
Switch# show authentication interface GigabitEthernet 1
Interface GigabitEthernet 1
.....
Common Timers
  Reauthenticate Period: 300
  Inactive Timeout : 300
  Quiet Period : 300
802.1x Parameters
  EAP Max Request : 2
  EAP TX Period : 30
  Supplicant Timeout : 120
```

Server Timeout	: 30
Web-auth Parameters	
Login Attempt	: 3

dot1x timeout tx-period

Syntax	dot1x timeout tx-period <1-65535>
	no dot1x timeout tx-period

Parameter	<1-65535>	Supplicant timeout period
------------------	------------------------	---------------------------

Default	Default EAP TX period is 30 seconds.
----------------	--------------------------------------

Mode	Interface Configuration
-------------	-------------------------

Usage	Use “ dot1x timeout tx-period ” command to configure the port 802.1x EAP TX period value. The TX period is the number of seconds that the device waits for a response to an Extensible Authentication Protocol (EAP) request/identity frame from the supplicant (client) before resending the request. Use no form of this command to restore default value.
--------------	---

Example	The following example shows how to configure port 802.1x EAP TX period.
----------------	---

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# dot1x timeout tx-period 10

Switch# show authentication interface GigabitEthernet 1
Interface GigabitEthernet 1
.....
Common Timers
    Reauthenticate Period: 300
    Inactive Timeout : 300
    Quiet Period : 300
802.1x Parameters
    EAP Max Request : 2
    EAP TX Period : 10
    Supplicant Timeout : 120
    Server Timeout : 150
    Web-auth Parameters
        Login Attempt : 3
```

show authentication

Syntax	show authentication
	show authentication interfaces IF_PORTS

Parameter	interfaces IF_PORTS	Interface status and configuration.
------------------	----------------------------	-------------------------------------

Default No default value for this command.

Mode Privileged EXEC

Usage Use “**show authentication**” command to show all authentication manager configurations.

Use “**show authentication interface**” command to show authentication manager configuration of specific port.

Example This example shows how to show the mac authentication configurations of port fa1.

```
Switch# show authentication
Autentication dot1x state      : enabled
Autentication mac state       : disabled
Autentication web state       : disabled
Guest VLAN                   : disabled
Mac-auth Radius User ID Format: XXXXXXXXXXXX

Mac-auth Local Entry          :
  MAC Address     Control      VLAN   Reauth    Inactive
  00:11:22:33:44:55 Authorized    3      30000   123

Web-auth Local Entry          :
  User Name        VLAN      Reauth    Inactive
  acct1           5        12345   333

Interface Configurations

Interface GigabitEthernet 1
  Admin Control      : disable
  Host Mode         : multi-auth
  Type dot1x State  : disabled
  Type mac State   : disabled
  Type web State   : disabled
  Type Order        : dot1x
  MAC/WEB Method Order : radius
  Guest VLAN        : disabled
  Reauthentication  : disabled
  Max Hosts        : 256
  VLAN Assign Mode: static
  Common Timers
    Reauthenticate Period: 3600
    Inactive Timeout   : 60
    Quiet Period      : 60
  802.1x Parameters
    EAP Max Request  : 2
    EAP TX Period    : 30
    Supplicant Timeout: 30
    Server Timeout   : 30
  Web-auth Parameters
    Login Attempt    : 3
  .....
```

```
Switch# show authentication interface GigabitEthernet 7
Interface Configurations
```

```
Interface GigabitEthernet 7
  Admin Control      : auto
  Host Mode         : multi-auth
  Type dot1x State  : enabled
```

```

mac State      : disabled Type
web State     : disabled Type
Order          : dot1x
MAC/WEB Method Order : radius
Guest VLAN     : disabled
Reauthentication : disabled Max
Hosts          : 256
VLAN Assign Mode : static
Common Timers
Reauthenticate Period: 3600
Inactive Timeout   60
    Quiet Period    60
802.1x Parameters
    EAP Max Request 2
    EAP TX Period    30
    Supplicant Timeout 30
    Server Timeout    : 65535
Web-auth Parameters
    Login Attempt    : 3

```

show authentication sessions

Syntax

show authentication sessions [detail]
show authentication sessions interface *IF_PORTS*
show authentication sessions session-id *WORD*
show authentication session type (dot1x|mac|web)

Parameter

detail	Display session detail information.
interface	Interface status and configuration
<i>IF_PORTS</i>	port
session-id	Use session id to find specific session
type	Use authentication type to find sessions

Default

No default value for this command.

Mode

Privileged EXEC

Usage

Use “**show authentication sessions**” command to show authentication detail session information.

Example

This example shows how to show current authentication session brief and detail information.

```

Switch# show authentication sessions
Interface  MAC Address      Type      Status      Session ID
-----  -----
fa7        00:01:6C:CB:29:4A  dot1x    Authorized  000000010000A028

Switch# show authentication sessions detail
Interface          : FastEthernet7
MAC Address        : 00:01:6C:CB:29:4A
Session ID         : 000000010000A028
Current Type       : dot1x

```

Status	:	Authorized
Authorized Information		
VLAN	:	5 (from RADIUS)
Reauthenticate Period	:	301 (from RADIUS)
Inactive Timeout	:	600 (from RADIUS)
Operational Information		
VLAN	:	5
Session Time	:	1143
Inactive Time	:	168
Quiet Time	:	N/A

5. Diagnostic

show cable-diag

Syntax

show cable-diag interfaces *IF_NMLPORTS*

Parameter interface

IF_NMLPORTS

Interface status and configuration media for an ID or a list of interfaces IDs.

Default

N/A

Mode

Privileged EXEC

Usage

To show the estimated copper cable length attached to a specific interface, use the command **show cable-diag** in the Privileged EXEC mode. For the proper information of the cable length, the interface must be active and linked up.

Example

The following example shows the result of cable diagnostic for the interface gi1 and gi2.

```
Switch# show cable-diag interfaces GigabitEthernet 1-2
  Port    |  Speed | Local pair | Pair length | Pair
  status
-----+-----+-----+-----+-----+
-----+
  gi1   |  auto  |      Pair A  |      0.88  | Open
          |        |      Pair B  |      0.82  | Open
          |        |      Pair C  |      0.80  | Open
          |        |      Pair D  |      0.78  | Open

  gi2   |  auto  |      Pair A  |      0.81  | Open
          |        |      Pair B  |      0.81  | Open
          |        |      Pair C  |      0.77  | Open
          |        |      Pair D  |      0.81  | Open
```

show fiber-transceiver

Syntax

show fiber-transceiver interfaces *IF_NMLPORTS*

Parameter

**interfaces
*IF_NMLPORTS***

Interface status and configuration transceiver for an interface ID or a list of interface IDs.

Default

N/A

Mode

Privileged EXEC

Usage

To show the diagnostic information of the fiber transceiver use the command
show fiber-transceiver in the Privileged EXEC mode.

Example

The following example shows the diagnostic information for the interface gi1 and gi2, wherer the int fiber media ports with the transceiver inserted.

```
Switch# show fiber-transceiver interfaces GigabitEthernet 1-
2
      Port      | Temperature    | Voltage        | Current       | Output power | Input
                           power |
                           | [C]           | [Volt]         | [mA]          | [mWatt]      | [mWatt]
=====
      gi1      | N/S           | N/S            | N/S           | N/S          | N/S          | Insert      |
      gi2      | N/S           | N/S            | N/S           | N/S          | N/S          | Insert      |
```

Temp - Internally measured transceiver
 temperature Voltage - Internally measured supply voltage
 Current - Measured TX bias current
 Output Power - Measured TX output power in milliWatts
 Input Power - Measured RX received power in milliWatts
 OE-Present - SFP Presetn or Not Present
 LOS - Loss of signal
 N/A - Not Available, N/S - Not Supported, W - Warning, E - Error

6. DHCP Snooping

ip dhcp snooping

Syntax	<code>ip dhcp snooping</code> <code>no ip dhcp snooping</code>
Parameter	None
Default	DHCP snooping is disabled
Mode	Global Configuration
Usage	Use the <code>ip dhcp snooping</code> command to enable DHCP Snooping function. Use the <code>no</code> form of this command to disable.
Example	The example shows how to enable DHCP Snooping on VLAN 1. You can verify settings by the following <code>show ip dhcp snooping</code> command. <code>switch(config)# ip dhcp snooping</code> <code>switch(config)# ip dhcp snooping vlan 1</code> <code>switch# show ip dhcp snooping DHCP Snooping :</code> <code>enabled Enable on following Vlans 1</code> <code>circuit-id default format :vlan-port</code> <code>remote-id : 00:11:22:33:44:55 (Switch Mac in Byte Order)</code>

ip dhcp snooping vlan

Syntax	<code>ip dhcp snooping vlan VLAN-LIST</code>	
Parameter	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094
Default	Default is disabled on all VLANs	
Mode	Global Configuration	

Usage

Use the **ip dhcp snooping vlan** command to enable VLANs on DHCP Snooping function. Use the **no** form of this command to disable VLANs on DHCP Snooping function.

Example

The example shows how to enable VLAN 1-100 on DHCP Snooping, and then disable VLAN 30-40 on DHCP Snooping. You can verify settings by the following **show ip dhcp snooping** command.

```
switch(config)# vlan 1-100
switch((config-vlan)# exit
switch(config)# ip dhcp snooping
switch(config)# ip dhcp snooping vlan 1-100
switch# show ip dhcp snooping DHCP
Snooping : enabled
Enable on following Vlans : 1-100
circuit-id default format : vlan-port
remote-id: 00:11:22:33:44:55 (Switch Mac in Byte Order)
```

```
switch(config)# no ip dhcp snooping vlan 30-40
switch(config)# show ip dhcp snooping
DHCP Snooping : enabled
Enable on following Vlans : 1-29,41-100
circuit-id default format : vlan-port
remote-id : 00:11:22:33:44:55 (Switch Mac in Byte Order)
```

ip dhcp snooping trust

Syntax

ip dhcp snooping trust
no ip dhcp snooping trust

Parameter

None

Default

DHCP snooping trust is disabled

Mode

Interface Configuration

Usage

Use the **ip dhcp snooping trust** command to set trusted interface. The switch does not check DHCP packets that are received on the trusted interface; it simply forwards it. Use the **no** form of this command to set untrusted interface.

Example

The example shows how to set interface g1 to trust. You can verify settings by the following **show ip dhcp snooping interface** command.

```
switch(config)# interface GigabitEthernet 1
switch(config-if)# ip dhcp snooping trust
switch(config-if)# do show ip dhcp snooping interface GigabitEthernet 1
```

Interfaces	Trust State	Rate (pps)	hwaddr Check	Insert Option82	
-----+-----+-----+-----+-----+					
gi1	Trusted	None	disabled	disabled	

ip dhcp snooping verify

Syntax

```
ip dhcp snooping verify mac-address [no]
ip dhcp snooping verify mac-address
```

Parameter

None

Default

DHCP snooping verify mac-address is disabled

Mode

Interface Configuration

Usage

Use the **ip dhcp snooping verify** command to verify MAC address function on interface.

The “**mac-address**” drop DHCP packets that chaddr and ethernet-source-mac is not match.

Example

The example shows how to set interface gi1 to validate “**mac-address**”. You can verify settings by the following **show ip dhcp snooping interface** command.

```
switch(config)# interface GigabitEthernet 1
switch(config-if)# ip dhcp snooping verify mac-address
switch(config-if)# do show ip dhcp snooping interface GigabitEthernet 1
Interfaces | Trust State | Rate (pps) | hwaddr Check | Insert Option82 |
-----+-----+-----+-----+-----+
gi1 | Untrusted | None | disabled | disabled |
```

ip dhcp snooping rate-limit

Syntax

```
ip dhcp snooping rate-limit <1-300>
[no] ip dhcp snooping rate-limit
```

Parameter

<1-300>	Value 1-300 pps
---------	-----------------

Default

Default is un-limited of DHCP packet

Mode

Interface Configuration

Usage	Use the ip dhcp snooping rate-limit command to set rate limitation on interface. The switch drop DHCP packets after receives more than configured rate of packets per second. Use the no form of this command to return to default settings.
Example	The example shows how to set rate limit to 30 pps on interface gi1. You can verify settings by the following show ip dhcp snooping interface command.
<pre>switch(config)# interface GigabitEthernet 1 switch(config-if)# ip dhcp snooping rate-limit 30 switch(config-if)# do show ip dhcp snooping interfaces GigabitEthernet 1 Interfaces Trust State Rate (pps) hwaddr Check Insert Option82 -----+-----+-----+-----+ gi1 Untrusted 30 disabled disabled </pre>	

clear ip dhcp snooping statistics

Syntax **clear ip dhcp snooping interfaces IF_PORTS statistics**

Parameter	GigabitEthernet Gigabit ethernet interface to configure
	LAG IEEE 802.3 Link Aggregateion interface

Default No default is defined

Mode Privileged EXEC

Usage Use the **clear ip dhcp snooping interfaces statistics** command to clear statistics that are recorded on interface.

Example The example shows how to clear statistics on interface gi1. You can verify settings by the following **show ip dhcp snooping interface statistics** command.

switch# clear ip dhcp snooping interfaces GigabitEthernet 1 statistics
switch# show ip dhcp snooping interfaces GigabitEthernet 1 statistics
Interfaces Forwarded Chaddr Check Dropped Untrust Port Dropped
Untrust Port With Option82 Dropped Invalid Drop
-----+-----+-----+-----+
gi1 0 0 0 0 0

show ip dhcp snooping

Syntax	show ip dhcp snooping
Parameter	None
Default	No default is defined
Mode	Privileged EXEC
Usage	Use the show ip dhcp snooping command to show settings of DHCP Snooping.
Example	The example shows how to show settings of DHCP Snooping
	<pre>switch# show ip dhcp snooping DHCP Snooping : enabled Enable on following Vlans : 1 circuit-id default format: vlan-port remote-id: : 00:11:22:33:44:55 (Switch Mac in Byte Order)</pre>

show ip dhcp snooping interface

Syntax	show ip dhcp snooping interfaces IF_PORTS show ip dhcp snooping interfaces IF_PORTS statistics				
Parameter	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">GigabitEthernet</td> <td style="padding: 2px;">Gigabit ethernet interface to configure</td> </tr> <tr> <td style="padding: 2px;">LAG</td> <td style="padding: 2px;">IEEE 802.3 Link Aggregateion interface</td> </tr> </table>	GigabitEthernet	Gigabit ethernet interface to configure	LAG	IEEE 802.3 Link Aggregateion interface
GigabitEthernet	Gigabit ethernet interface to configure				
LAG	IEEE 802.3 Link Aggregateion interface				
Default	No default is defined				
Mode	Privileged EXEC				
Usage	Use the show ip dhcp snooping interfaces command to show settings or statistics of interface.				
Example	The example shows how to show settings of interface gi1.				
	<pre>switch# show ip dhcp snooping interface GigabitEthernet 1 Interfaces Trust State Rate (pps) hwaddr Check Insert Option82 -----+-----+-----+-----+ gi1 Untrusted None enabled disabled </pre>				

The example shows how to show statistics of interface gi1.

```
switch# show ip dhcp snooping interfaces GigabitEthernet 1 statistics
Interfaces | Forwarded | Chaddr Check Dropped | Untrust Port Dropped | Untrust Port With
Option82 Dropped | Invalid Drop
-----+-----+-----+-----+-----+
gi1 | 0 | 0 | 0 | 0 | 0
```

show ip dhcp snooping binding

Syntax **show ip dhcp snooping binding**

Parameter **None**

Default No default is defined

Mode Privileged EXEC

Usage Use the **show ip dhcp snooping binding** command to show binding entries that learned by DHCP Snooping.

Example The example shows how to show binding entries that learned by DHCP Snooping.

```
switch# show ip dhcp snooping binding
Bind Table: Maximum Binding Entry Number 192
Port | VID | MAC Address | IP | Type | Lease Time
-----+-----+-----+-----+-----+
fa1 | 1 | 48:5B:39:C7:12:62 | 192.168.1.100(255.255.255.255)|DHCP Snooping | 86400
```

ip dhcp snooping option

Syntax **ip dhcp snooping option**
no ip dhcp snooping option

Parameter None

Default DHCP snooping option82 is disabled

Mode Interface Configuration

Usage Use the **ip dhcp snooping option** command to enable that insert option82 content into packet. Use the **no** form of this command to disable.

Example	The example shows how to enable option82 insertion. You can verify settings by the following show ip dhcp snooping interface command.
----------------	--

```
switch(config)# interface GigabitEthernet 1
switch(config-if)# ip dhcp snooping option
switch(config-if)# do show ip dhcp snooping interfaces GigabitEthernet 1
Interfaces | Trust State | Rate (pps) | hwaddr Check | Insert Option82 |
-----+-----+-----+-----+
gi1   | Untrusted | None    | disabled   | enabled   |
```

ip dhcp snooping option action

Syntax	ip dhcp snooping option action (drop keep replace) no ip dhcp snooping option action
---------------	---

Parameter	Drop Drop packets with option82 Keep Keep original option82 Replace Replace option82 content by switch setting
------------------	---

Default	DHCP snooping option82 is drop
----------------	--------------------------------

Mode	Interface Configuration
-------------	-------------------------

Usage	Use the ip dhcp snooping option action command to set the action when receive packets that with option82 content. Use the no form of this command to default setting.
--------------	---

Example	The example shows how to set action to replace option82 content. You can verify settings by the following show running-config command. switch(config)# interface GigabitEthernet 1 switch(config-if)# ip dhcp snooping option action replace
----------------	---

ip dhcp snooping option circuit-id

Syntax	ip dhcp snooping [vlan <1-4094>] option circuit-id STRING no ip dhcp snooping [vlan <1-4094>] option circuit-id
---------------	--

Parameter	Vlan <1-4094> VLAN configuration STRING ID string (1~63).
------------------	--

Default	Default circuit-id is port id + vlan id in byte format.
----------------	---

Mode	Interface Configuration
-------------	-------------------------

Usage

Use the **ip dhcp snooping option circuit-id** command to set user-defined circuit-id string. Circuit-id is per port per VLAN setting. If a VLAN is not found user-defined circuit-id then use per port circuit-id string. Use the **no** form of this command to default setting.

Example

The example shows how to set a user-defined circuit-id string on interface GigabitEthernet 1 and VLAN 1. You can verify settings by the following **show running-config** command

```
switch(config)# interface GigabitEthernet 1
switch(config-if)# ip dhcp snooping vlan 1 option circuit-id test
```

ip dhcp snooping option remote-id

Syntax

ip dhcp snooping option remote-id STRING
no ip dhcp snooping option remote-id

Parameter

STRING ID string (1~63).

Default

Default remote-id is the switch MAC address in byte order

Mode

Global Configuration

Usage

Use the **ip dhcp snooping option remote-id** command to set user-defined remote-id string. Remote-id is a global and unique string. Use the **no** form of this command to default setting.

Example

The example shows how to set a user-defined remote-id string on switch. You can verify settings by the following **show ip dhcp snooping option remote-id**

```
switch(config)# ip dhcp snooping option remote-id test_remote
switch(config)# do show ip dhcp snooping option remote-id
Remote ID: test_remote
```

show ip dhcp snooping option

Syntax

show ip dhcp snooping option remote-id

Parameter

None

Default

No default is defined

Mode	Privileged EXEC
Usage	Use the show ip dhcp snooping option remote-id command to show remote-id string.
Example	The example shows how to show remote-id string switch(config)# do show ip dhcp snooping option remote-id Remote ID: test_remote

ip dhcp snooping database

Syntax	ip dhcp snooping database flash ip dhcp snooping database tftp (A.B.C.D HOSTNAME) NAME no ip dhcp snooping database
Parameter	(A.B.C.D HOSTNAME) IP Address of remote tftp server HOSTNAME Hostname of remote tftp server
Default	DHCP snooping database is disabled
Mode	Global Configuration
Usage	Use the ip dhcp snooping database command to enable DHCP Snooping database agent. The “ flash ” means that write backup file to switch local drive. The “ tftp ” means that write backup file to remote TFTP server. Use the no form of this command to disable.
Example	The example shows how to enable DHCP Snooping database agent and write backup file to remote TFTP server with file name “ backup_file ”. You can verify settings by the following show ip dhcp snooping database command. switch(config)# ip dhcp snooping database tftp 192.168.1.50 backup_file switch(config)# do show ip dhcp snooping database Type : tftp: 192.168.1.50 FileName : backup_file Write delay Timer : 300 seconds Abort Timer : 300 seconds Agent Running : Running Delay Timer Expiry : 300 seconds Abort Timer Expiry : 299

Last Succeeded Time : None
 Last Failed Time : None
 Last Failed Reason : No failure recorded.

Total Attempts : 1
 Successful Transfers : 0 Failed Transfers : 0
 Successful Reads : 0 Failed Reads : 0
 Successful Writes : 0 Failed Writes : 0

ip dhcp snooping database write-delay

Syntax

ip dhcp snooping database write-delay <15-86400>
no ip dhcp snooping database write-delay

Parameter

<15-86400> 15 ~ 86400 seconds

Default

DHCP snooping database write-delay is 300 seconds

Mode

Global Configuration

Usage

Use the **ip dhcp snooping database write-delay** command to modify the write-delay timer. Use the **no** form of this command to default setting.

Example

The example shows how to set write-delay timer to 60 seconds. You can verify settings by the following **show ip dhcp snooping database** command.

```
switch(config)# ip dhcp snooping database write-delay 60
switch(config)# do show ip dhcp snooping database
Type : tftp: 192.168.1.50
FileName : backup_file
Write delay Timer : 60 seconds
Abort Timer : 300 seconds
```

Agent Running : Running
 Delay Timer Expiry : 300 seconds
 Abort Timer Expiry : 299

Last Succeeded Time : None
 Last Failed Time : None
 Last Failed Reason : No failure recorded.

Total Attempts : 1

Successful Transfers : 0	Failed Transfers : 0
Successful Reads : 0	Failed Reads : 0
Successful Writes : 0	Failed Writes : 0

ip dhcp snooping database timeout

Syntax	ip dhcp snooping database timeout <0-86400>
	no ip dhcp snooping database timeout

Parameter	<0-86400> 0 ~ 86400 seconds
-----------	--

Default	DHCP snooping database timeout is 300 seconds
---------	---

Mode	Global Configuration
------	----------------------

Usage	Use the ip dhcp snooping database timeout command to modify the timeout timer. Use the no form of this command to default setting.
-------	--

Example	The example shows how to set timeout timer to 60 seconds. You can verify settings by the following show ip dhcp snooping database command.
---------	---

```
switch(config)# ip dhcp snooping database timeout 60
switch(config)# do show ip dhcp snooping database
```

```
Type : tftp: 192.168.1.50
FileName : backup_file
Write delay Timer : 300 seconds
Abort Timer : 60 seconds
```

```
Agent Running : Running
Delay Timer Expiry : 300 seconds
Abort Timer Expiry : 299
```

```
Last Succeeded Time : None
Last Failed Time : None
Last Failed Reason : No failure recorded.
```

```
Total Attempts : 1
Successful Transfers : 0 Failed Transfers : 0
Successful Reads : 0 Failed Reads : 0
Successful Writes : 0 Failed Writes : 0
```

clear ip dhcp snooping database statistics

Syntax	clear ip dhcp snooping database statistics
Parameter	None
Default	No default is defined
Mode	Privileged EXEC
Usage	Use the clear ip dhcp snooping database statistics command to clear statistics of DHCP Snooping database.
Example	The example shows how to clear statistics of DHCP Snooping agent. You can verify settings by the following show ip dhcp snooping database command. switch# clear ip dhcp snooping database statistics switch# show ip dhcp snooping database Type : tftp: 192.168.1.50 FileName : backup_file Write delay Timer : 300 seconds Abort Timer : 60 seconds Agent Running : Running Delay Timer Expiry : 300 seconds Abort Timer Expiry : 299 Last Succeeded Time : None Last Failed Time : None Last Failed Reason : No failure recorded. Total Attempts : 0 Successful Transfers : 0 Failed Transfers : 0 Successful Reads : 0 Failed Reads : 0 Successful Writes : 0 Failed Writes : 0

renew ip dhcp snooping database

Syntax	renew ip dhcp snooping database
Parameter	None

Default	No default is defined																	
Mode	Privileged EXEC																	
Usage	Use the renew ip dhcp snooping database command to renew DHCP Snooping database from backup file.																	
Example	<p>The example shows how to renew DHCP Snooping database. You can verify settings by the following show ip dhcp snooping database and show ip dhcp snooping binding command.</p> <pre>switch# show ip dhcp snooping database Type : tftp: 192.168.1.50 FileName : backup_file Write delay Timer : 300 seconds Abort Timer : 60 seconds Agent Running : Running Delay Timer Expiry : 300 seconds Abort Timer Expiry : 299 Last Succeeded Time : None Last Failed Time : None Last Failed Reason : No failure recorded. Total Attempts : 1 Successful Transfers : 1 Failed Transfers : 0 Successful Reads : 1 Failed Reads : 0 Successful Writes : 0 Failed Writes : 0</pre> <p>switch# show ip dhcp snooping binding</p> <table border="1"> <thead> <tr> <th colspan="5">Bind Table: Maximun Binding Entry Number 192</th> </tr> <tr> <th>Port</th> <th>VID</th> <th>MAC Address</th> <th>IP</th> <th>Type</th> <th>Lease Time</th> </tr> </thead> <tbody> <tr> <td>gi1</td> <td>1</td> <td>48:5B:39:C7:12:62</td> <td>192.168.1.100(255.255.255.255)</td> <td>DHCP Snooping</td> <td>86400</td> </tr> </tbody> </table>	Bind Table: Maximun Binding Entry Number 192					Port	VID	MAC Address	IP	Type	Lease Time	gi1	1	48:5B:39:C7:12:62	192.168.1.100(255.255.255.255)	DHCP Snooping	86400
Bind Table: Maximun Binding Entry Number 192																		
Port	VID	MAC Address	IP	Type	Lease Time													
gi1	1	48:5B:39:C7:12:62	192.168.1.100(255.255.255.255)	DHCP Snooping	86400													

show ip dhcp snooping database

Syntax	show ip dhcp snooping database
Parameter	None
Default	No default is defined

Mode	Privileged EXEC
Usage	Use the show ip dhcp snooping database command to show settings of DHCP Snooping agent.
Example	<p>The example shows how to show settings of DHCP Snooping agent.</p> <pre>switch(config)# show ip dhcp snooping database Type : tftp: 192.168.1.50 FileName : backup_file Write delay Timer : 300 seconds Abort Timer : 60 seconds Agent Running : Running Delay Timer Expiry : 300 seconds Abort Timer Expiry : 299 Last Succeeded Time : None Last Failed Time : None Last Failed Reason : No failure recorded. Total Attempts : 1 Successful Transfers : 1 Failed Transfers : 0 Successful Reads : 1 Failed Reads : 0 Successful Writes : 0 Failed Writes : 0</pre>

7. DoS

dos

Syntax	<pre>dos (daeqsa-deny icmp-frag-pkts-deny icmpv4-ping-max- check icmpv6-ping-max-check ipv6-min-frag-size-check land- deny nullscan-deny pod-deny smurf-deny syn-sportl1024- deny synfin-deny synrst-deny tcp-frag-off-min-check tcpblat- deny tcphdr-min-check udpblat-deny xmas-deny) dos icmp-ping-max-length <i>MAX_LEN</i> dos ipv6-min-frag-size-length <i>MIN_LEN</i> dos smurf-netmask <i>MASK</i> dos tcphdr-min-length <i>HDR_MIN_LEN</i> no dos (tcp-frag-off-min-check synrst-deny synfin-deny xma- deny nullscan-deny syn-sportl1024-deny tcphdr-min-check smurf- deny icmpv6-ping-max-check icmpv4-ping-max-check icmp-frag- pkts-deny ipv6-min-frag-size-check pod-deny tcpblat-</pre>
---------------	---

deny|udpblat-deny|land-deny|daeqsa-deny)

Parameter	
daeqsa-deny	Destination MAC equals to source MAC.
icmp-frag-pkts- deny	Fragmented ICMP packets.
icmpv4-ping-max-check	Check ICMPv4 ping maximum packets size
icmpv6-ping-max- check	Check ICMPv6 ping maximum packets size
ipv6-min-frag- size-check	Check minimum size of IPv6 fragments.

land-deny	Source IP equals to destination IP.
nullscan-deny	NULL Scan Attacks.
pod-deny	Ping of Death Attacks.
smurf-deny	Smurf Attacks.
syn-sportl1024- deny	SYN packets with sport less than 1024.
synfin-deny	SYN and FIN bits set in the packet.
synrst-deny	SYNC and RST bits set in the packet.
tcp-frag-off-min-check	TCP fragment packet with offset equals to one.
tcpblat-deny	Source TCP port equals to destination TCP port.
tcphdr-min-check	Check minimum TCP header.
udpblat-deny	Source UDP port equals to destination UDP portt.
xmas-deny	Xmascan: sequence number is zero and the FIN, URG and PSH bits are set.
icmp-ping-max-length	DoS information.
ipv6-min-frag-size-length	DoS information
smurf-netmask	DoS information
tcphdr-min-length	DoS information

Default

All of DoS protections are enabled by default.

The default parameter are:

- The maximum size of ICMP ping packages is 512 bytes
- The minimum size of IPv6 fragments is 1240 bytes.
- The Smurf netmask length is 0 bytes.
- The minimum TCP header length is 20 bytes.

Mode

Global Configuration

Usage

To enable the specific Deniel of Service (DoS) protection, use the command **dos** in the Global Configuration mode. Otherwise, use the **no** form of the command to disable the specific DoS protection.

Example

The following example sets the minimum fragment size to 1024 bytes, and enables the minimum size of IPv6 fragments validation.

```
Switch(config)# dos ipv6-min-frag-size-length 1024
Switch(config)# dos ipv6-min-frag-size-check
```

dos (interface)

Syntax

dos
no dos

Parameter

N/A

Default

DoS protection is disabled on each interface.

Mode	Interface Configuration
-------------	-------------------------

Usage	To enable the DoS on the specific interface, use the command dos in the Interface Configuration mode. Otherwise, use the no form of the command to disable the DoS on the interface.
--------------	--

Example	The following example enables the DoS on the interface fa1.
----------------	---

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# dos
```

show dos

Syntax	show dos
---------------	-----------------

show dos interface *IF_PORTS*

Parameter	interface <i>IF_PORTS</i>	Interface status and configuration.
------------------	----------------------------------	-------------------------------------

Default	N/A
----------------	-----

Mode	Privileged EXEC
-------------	-----------------

Usage	To show the DoS protection configuration, use the command show dos in the Privileged EXEC mode. For the status of DoS protection on each interface, use the command show dos interface in the Priveleged EXEC mode.
--------------	---

Example	The following example shows the global DoS protection configuration.
----------------	--

```
Switch# show dos
      Type          | State (Length)
-----+-----
    DMAc equal to SMAC | enabled
    Land (DIP = SIP) | enabled
    UDP Blat (DPORT = SPORt) | enabled
    TCP Blat (DPORT = SPORt) | enabled
    POD (Ping of Death) | enabled
    IPv6 Min Fragment Size | enabled (1024 Bytes)
    ICMP Fragment Packets | enabled
    IPv4 Ping Max Packet Size | enabled (512 Bytes)
    IPv6 Ping Max Packet Size | enabled (512 Bytes)
    Smurf Attack | enabled (Netmask Length: 0)
    TCP Min Header Length | enabled (20 Bytes)
    TCP Syn (SPORt < 1024) | enabled
    Null Scan Attack | enabled
    X-Mas Scan Attack | enabled
    TCP SYN-FIN Attack | enabled
```

TCP SYN-RST Attack	enabled
TCP Fragment (Offset = 1)	enabled

Switch# show dos

The following example shows the status of DoS protection on the interface fa1.

Switch# show dos interfaces GigabitEthernet 1	
Port	DoS Protection
-----+-----	
g1	disabled

8. Dynamic ARP Inspection

ip arp inspection

Syntax	ip arp inspection no ip arp inspection
Parameter	None
Default	Dynamic Arp inspection is disabled
Mode	Global Configuration
Usage	Use the ip arp inspection command to enable Dynamic Arp Inspection function. Use the no form of this command to disable.
Example	The example shows how to enable Dynamic Arp Inspection on VLAN 1. You can verify settings by the following show ip arp inspection command. <pre>switch(config)# ip arp inspection switch(config)# ip arp inspection vlan 1 switch# show ip arp inspection Dynamic ARP Inspection: enabled on Vlans 1</pre>

ip arp inspection vlan

Syntax	ip arp inspection vlan VLAN-LIST no ip arp inspection vlan VLAN-LIST
Parameter	VLAN-LIST Specify VLAN ID or a range of VLANs to enable or disable dynamic Arp inspection
Default	Default is disabled on all VLANs

Mode	Global Configuration
Usage	<p>Use the ip arp inspection vlan command to enable VLANs on Dynamic Arp Inspection function. Use the no form of this command to disable VLANs on Dynamic Arp Inspection function.</p>
Example	<p>The example shows how to enable VLAN 1-100 on Dynamic Arp Inspection, and then disable VLAN 30-40 on Dynamic Arp Inspection. You can verify settings by the following show ip arp inspection command.</p> <pre>switch(config)# vlan 1-100 switch(config-vlan)# exit switch(config)# ip arp inspection switch(config)# ip arp inspection vlan 1-100 switch# show ip arp inspection Dynamic ARP Inspection : enabled Enable on Vlans : 1-100 switch(config)# no ip arp inspection vlan 30-40 switch(config)# show ip arp inspection Dynamic ARP Inspection : enabled Enable on Vlans : 1-29,41-100</pre>

ip arp inspection trust

Syntax	ip arp inspection trust no ip arp inspection trust
Parameter	None
Default	Dynamic Arp inspection trust is disabled
Mode	Interface Configuration
Usage	<p>Use the ip arp inspection trust command to set trusted interface. The switch does not check ARP packets that are received on the trusted interface; it simply forwards it. Use the no form of this command to set untrusted interface.</p>
Example	<p>The example shows how to set interface gi1 to trust. You can verify settings by the following show ip arp inspection interface command.</p> <pre>switch(config)# interface GigabitEthernet 1 switch(config-if)# ip arp inspection trust switch(config-if)# do show ip arp inspection interface GigabitEthernet 1 Interfaces Trust State Rate (pps) SMAC Check DMAC Check IP Check/Allow Zero -----+-----+-----+-----+-----+-----+ gi1 Trusted None disabled disabled disabled/disabled</pre>

ip arp inspection validate

Syntax

```
ip arp inspection validate src-mac
ip arp inspection validate dst-mac
ip arp inspection validate ip [allow-zeros]
no ip arp inspection validate src-mac
no ip arp inspection validate dst-mac
no ip arp inspection validate ip [allow-zeros]
```

Parameter

None

Default

Default is disabled of all validation

Mode

Interface Configuration

Usage

Use the **ip arp inspection validate** command to enable validate function on interface. The "**src-mac**" drop ARP requests and reply packets that arp-sender-mac and ethernet-source-mac is not match. The "**dst-mac**" drops ARP reply packets that arp-target-mac and ethernet-dst-mac is not match. The "**ip**" drop ARP request and reply packets that sender-ip is invalid such as broadcast, multicast, all zero IP address and drop ARP reply packets that target-ip is invalid. The "**allow-zeros**" means won't drop all zero IP address. Use the **no** form of this command to disable validation.

Example

The example shows how to set interface gi1 to validate "**src-mac**", "**dst-mac**" and '**ip allow zeros**'. You can verify settings by the following **show ip arp inspection interface** command.

```
switch(config)# interface GigabitEthernet 1
switch(config-if)# ip arp inspection validate src-mac
switch(config-if)# ip arp inspection validate dst-mac
switch(config-if)# ip arp inspection validate ip allow-zeros
switch(config)# do show ip arp inspection interface GigabitEthernet 1
Interfaces | Trust State | Rate (pps) | SMAC Check | DMAC Check | IP Check/Allow Zero
|
-----+-----+-----+-----+-----+
gi1   | Untrusted | None    | enabled  | enabled  | enabled/ enabled
```

ip arp inspection rate-limit

Syntax

```
ip arp inspection rate-limit <1-50>
[no] ip arp inspection rate-limit
```

Parameter

<1-50> Value 1-50 pps

Default

Default is un-limited of ARP packet

Mode	Interface Configuration
Usage	Use the ip arp inspection rate-limit command to set rate limitation on interface. The switch drop ARP packets after receives more than configured rate of packets per second. Use the no form of this command to return to default settings.
Example	The example shows how to set rate limit to 30 pps on interface gi1. You can verify settings by the following show ip arp inspection interface command. <pre>switch(config)# interface GigabitEthernet 1 switch(config)# ip arp inspection rate-limit 30 switch(config)# do show ip arp inspection interface GigabitEthernet 1 Interfaces Trust State Rate (pps) SMAC Check DMAC Check IP Check/AllowZero -----+-----+-----+-----+-----+ gi1 Untrusted 30 disabled disabled disabled/disabled</pre>

clear ip arp inspection statistics

Syntax	clear ip arp inspection interfaces IF_PORTS statistics				
Parameter	<table border="1"> <tr> <td>GigabitEthernet</td> <td>Gigabit ethernet interface to configure</td> </tr> <tr> <td>LAG</td> <td>IEEE 802.3 Link Aggregateion interface</td> </tr> </table>	GigabitEthernet	Gigabit ethernet interface to configure	LAG	IEEE 802.3 Link Aggregateion interface
GigabitEthernet	Gigabit ethernet interface to configure				
LAG	IEEE 802.3 Link Aggregateion interface				
Default	No default is defined				
Mode	Privileged EXEC				
Usage	Use the clear ip arp inspection interfaces statistics command to clear statistics that are recorded on interface.				
Example	The example shows how to clear statistics on interface gi1. You can verify settings by the following show ip arp inspection interface statistics command. <pre>switch# clear ip arp inspection interfaces GigabitEthernet 1 statistics switch# show ip arp inspection interfaces GigabitEthernet 1 statistics Port Forward Source MAC Failures Dest MAC Failures SIP Validation Failures DIP Validation Failures IP-MAC Mismatch Failures -----+-----+-----+-----+-----+ gi1 0 0 0 0 0 0</pre>				

show ip arp inspection

Syntax	show ip dhcp snooping
Parameter	None
Default	No default is defined
Mode	Privileged EXEC

Usage Use the **show ip arp inspection** command to show settings of Dynamic Arp Inspection

Example The example shows how to show settings of Dynamic Arp Inspection

```
switch(config)# show ip arp inspection
Dynamic ARP Inspection: enabled Enable
on Vlans 1
```

show ip arp inspeciton interface

Syntax **show ip arp inspection interfaces IF_PORTS**
show ip arp inspection interfaces IF_PORTS statistics

Parameter	GigabitEthernet	Gigabit ethernet interface to configure
	LAG	IEEE 802.3 Link Aggregateion interface

Default No default is defined

Mode Privileged EXEC

Usage Use the **show ip arp inspection interfaces** command to show settings or statistics of interface.

Example The example shows how to show settings of interface GigabitEthernet 1.

```
switch# show ip arp inspection interface GigabitEthernet 1
Interfaces | Trust State | Rate (pps) | SMAC Check | DMAC Check | IP Check/AllowZero
|
-----+-----+-----+-----+-----+
gi1 | Trusted | None | disabled | disabled | disabled/disabled
```

The example shows how to show statistics of interface GigabitEthernet 1.

```
switch# show ip arp inspection interfaces GigabitEthernet 1 statistics
Port| Forward |Source MAC Failures|Dest MAC Failures|
SIP Validation Failures|DIP Validation Failures|IP-MAC Mismatch Failures
-----+-----+-----+-----+-----+
gi1| 0 | 0 | 0 | 0 | 0 | 0
```

9. GVRP

gvrp (Global)

Syntax **gvrp**
no gvrp

Parameter None

Default	GVRP is disabled
Mode	Global Configuration
Usage	Disable gvrp will clear all learned dynamic vlan entry and do not learn dynamic vlan anymore. Use ‘show gvrp’ to show configuration.
Example	The following example specifies that set global gvrp test. Switch(config)# gvrp Switch# show gvrp

GVRP Status

gvrp (Interface)

Syntax	gvrp no gvrp
Parameter	none
Default	GVRP is disabled on interface
Mode	Interface mode
Usage	‘no gvrp’ will remove dynamic port from vlan. ‘gvrp’ must work at port mode is trunk.
Example	<p>The following example specifies that set port gvrp test. The port gvrp enable must set port mode is trunk firstly.</p> <pre>Switch(config)#interface GigabitEthernet 1 Switch(config-if)# switchport mode trunk Switch(config)#gvrp Switch# show gvrp configuration interfaces GigabitEthernet 1 Port GVRP-Status Registration Dynamic VLAN Creation -----+-----+-----+ g11 Enabled Normal Disabled</pre>

gvrp registration-mode

Syntax	gvrp registration-mode (normal fixed forbidden)
Parameter	(normal fixed forbidden) normal: Normal mode. fixed: Fixed mode. forbidden: Forbidden mode.
Default	Default is Normal
Mode	Interface mode
Usage	When set registration-mode is fixed or forbidden, will remove the port from vlan witch is dynamic port. And do not learning vlan.
Example	<p>The following example specifies that set gvrp registration mode test.</p> <pre>Switch(config)# interface GigabitEthernet 1 Switch(config-if)# gvrp registration-mode fixed Switch# show gvrp configuration interfaces GigabitEthernet 1 Port GVRP-Status Registration Dynamic VLAN Creation -----+-----+-----+ g1 Enabled Fixed Disabled</pre>

gvrp vlan-create-forbid

Syntax	gvrp vlan-creation-forbid no gvrp vlan-creation-forbid
Parameter	none
Default	Default is disabled.
Mode	Interface mode
Usage	‘gvrp vlan-creation-forbid’ will not remove dynamic port from vlan immediate.
Example	<p>The following example specifies that set port gvrp vlan-creation-forbid test.</p> <pre>Switch(config)#interface GigabitEthernet 1 Switch(config-if)# gvrp vlan-creation-forbid Switch(config-if)#exit Switch# show gvrp configuration interfaces GigabitEthernet 1 Port GVRP-Status Registration Dynamic VLAN Creation -----+-----+-----+ g1 Enabled Normal Enabled</pre>

clear gvrp statistics

Syntax **clear gvrp (error-statistics | statistics) [interfaces IF_PORTS]**

Parameter	(error-statistics statistics) Error-statistics: GVRP Error Statistics info Statistics: GVRP Statistics info
------------------	---

Default	none
----------------	------

Mode	Privileged EXEC
-------------	-----------------

Usage	This command will clear the ports error statistics or statistics info.
--------------	--

Example	The following example specifies that clear gvrp error statistics and statistics test. Switch# clear gvrp statistics Switch# clear gvrp error-statistics
----------------	---

show gvrp statistics

Syntax **show gvrp (statistics | error-statistics) [interfaces IF_PORTS]**

Parameter	none Display all ports (statistics error- statistics) configuration statistics – GVRP statistics error-statistics Gvrp Error Statistics GVRP configuration
------------------	--

Default	Display all ports statistics info
----------------	-----------------------------------

Mode	Privileged EXEC
-------------	-----------------

Usage	This command will display the ports error statistics or statistics info.
--------------	--

Example	The following example specifies that display gvrp error statistics and statistics test. Switch# show gvrp statistics Port id : g i 1
----------------	---

```
Total RX      : 0
JoinEmpty RX  : 0
JoinIn RX    : 0
Empty RX     : 0
LeaveIn RX   : 0
LeaveEmpty RX : 0
LeaveAll RX  : 0
Total TX      : 0
JoinEmpty TX  : 0
JoinIn TX    : 0
Empty TX     : 0
LeaveIn TX   : 0
LeaveEmpty TX : 0
LeaveAll TX  : 0
```

```
Port id      : g i 2
Total RX      : 0
JoinEmpty RX  : 0
JoinIn RX    : 0
Empty RX     : 0
LeaveIn RX   : 0
LeaveEmpty RX : 0
LeaveAll RX  : 0
Total TX      : 0
...

```

Switch# show gvrp error-statistics

INVPROT : Invalid protocol Id

INVATYP : Invalid Attribute Type INVALEN : Invalid Attribute Length

INVAVAL : Invalid Attribute Value INVEVENT: Invalid Event

Port	INVPROT	INVATYP	INVALEN	INVAVAL	INVEVENT
gi1	0	0	0	0	0
gi2	0	0	0	0	0
gi3	0	0	0	0	0
gi4	0	0	0	0	0
gi5	0	0	0	0	0
gi6	0	0	0	0	0

show gvrp

Syntax

show gvrp

Parameter

none

Default	None
Mode	Privileged EXEC
Usage	This command will display the gvrp global info.
Example	<p>The following example specifies that display gvrp test.</p> <pre>Switch# show gvrp GVRP Status ----- GVRP : Disabled Join time : 200 ms Leave time : 600 ms LeaveAll time : 10000 ms</pre>

show gvrp configuration

Syntax	show gvrp configuration [interface IF_PORTS]				
Parameter	<table border="0"> <tr> <td>none</td> <td>Display all ports configuration</td> </tr> <tr> <td>[interfaces]</td> <td>Interface status and configuration</td> </tr> </table>	none	Display all ports configuration	[interfaces]	Interface status and configuration
none	Display all ports configuration				
[interfaces]	Interface status and configuration				
Default	Display all ports configuration info				
Mode	Privileged EXEC				
Usage	This command will display the ports configuration info.				
Example	<p>The following example specifies that display gvrp port configuration test.</p> <pre>Switch# show gvrp configuration Port GVRP-Status Registration Dynamic VLAN Creation -----+-----+-----+ gi1 Disabled Normal Enabled gi 2 Disabled Normal Enabled</pre>				

gi 3	Disabled	Normal	Enabled
gi 4	Disabled	Normal	Enabled
gi 5	Disabled	Normal	Enabled
gi 6	Disabled	Normal	Enabled
gi 7	Disabled	Normal	Enabled
--More--			

10. IGMP Snooping

ip igmp snooping

Syntax	ip igmp snooping no ip igmp snooping
Parameter	None
Default	Default is enabled
Mode	Global Configuration
Usage	Use the ip igmp snooping command to enable IGMP snooping function. Use the no form of this command to disable. You can verify settings by the show ip igmp snooping command.
Example	The following example specifies that set ip igmp snooping test. Switch(config)# no ip igmp snooping

ip igmp snooping report-suppression

Syntax	ip igmp snooping report-suppression no ip igmp snooping report-suppression
Parameter	None
Default	Default is enabled
Mode	Global Configuration

Usage	Use the ip igmp snooping report-suppression command to enable IGMP snooping report-suppression function. Use the no form of this command to disable. Disable report-supression will forward all received reports to the vlan router ports. You can verify settings by the show ip igmp snooping command.
--------------	---

Example	The following example specifies that disable ip igmp snooping report-suppression test.
	Switch# show ip igmp snooping IGMP Snooping Status -----

Snooping	: Disabled
Report Suppression	: Enabled
Operation Version	: v2
Forward Method	: mac
Unknown IP Multicast Action	: Flood

Packet Statistics	
Total RX	: 0
Valid RX	: 0
Invalid RX	: 0
Other RX	: 0
Leave RX	: 0
Report RX	: 0
General Query RX	: 0
Specail Group Query RX	: 0
Specail Group & Source Query RX	: 0
Leave TX	: 0
Report TX	: 0
General Query TX	: 0
Specail Group Query TX	: 0
Specail Group & Source Query TX	: 0

ip igmp snooping version

Syntax	ip igmp snooping version (2 3)	
Parameter	(2 3)	2 IGMP Operation Version is v2 3 IGMP Operation Version is v3
Default	Default is version 2	
Mode	Global Configuration	

Usage	Use the ip igmp snooping version command to change IGMP support version. Only basic mode is supported in v3. When change version from v3 to v2, all querier version will update to version 2. You can verify settings by the show ip igmp snooping command.
Example	The following example specifies that set ip igmp snooping version 3. Switch(config)# ip igmp snooping version 3

ip igmp snooping unknown-multicast action

Syntax	ip igmp snooping unknown-multicast action (drop flood router-port) no ip igmp snooping unknown-multicast action	
Parameter	(drop flood router- port)	Drop、 flood in vlan or forward to router port of unknown multicast packet
Default	Default is flood.	
Mode	Global Configuration	
Usage	<p>When igmp and mld snooping disabled, it can't set action router-port. When disable igmp snooping & mld snooping, it set unknown multicast action flood. When action is router-port to flood or drop, it will delete the unknown multicast group entry.</p> <p>Use the ip igmp snooping unknown-multicast action command to change action. Use the no form of this command to restore to default. You can verify settings by the show ip igmp snooping command.</p>	
Example	<p>The following example specifies that set ip igmp unknown multicast action router-port test.</p> <p>Switch(config)# ip igmp snooping Switch(config)# ip igmp snooping unknown-multicast action router-port</p>	

ip igmp snooping querier

Syntax	ip igmp snooping vlan <VLAN-LIST> querier [version (2 3)] no ip igmp snooping [vlan <VLAN-LIST>] querier	
Parameter	version	Querier Version configuration
	(2 3)	Query version 2 or 3
Default	No ip igmp snooping querier by default	
Mode	Global Configuration	

Usage	When enable ip igmp vlan querier, there will process router select, the select successful will send general and specific query. Use the ip igmp snooping querier command to add querier. Use the no form of this command to delete querier. You can verify settings by the show ip igmp snooping querier command.
--------------	---

Example	The following example specifies that set ip igmp snooping querier test. Switch(config)# ip igmp snooping vlan 2 querier version 3
----------------	---

ip igmp snooping vlan

Syntax	ip igmp snooping vlan VLAN-LIST no ip igmp snooping vlan VLAN-LIST
---------------	---

Parameter	VLAN-LIST VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094
------------------	--

Default	Default is disabled for all VLANs
----------------	-----------------------------------

Mode	Global Configuration
-------------	----------------------

Usage	Disable will clear all ip igmp snooping dynamic group and dynamic router port and make all static ip igmp group invalid of this vlan. Will not learn dynamic group and router port by igmp message any more. Use the ip igmp snooping vlan command to enable IGMP on VLAN. Use the no form of this command to disable You can verify settings by the show ip igmp snooping vlan command.
--------------	--

Example	The following example specifies that set ip igmp snooping vlan test.
----------------	--

```
Switch(config)# ip igmp snooping  
Switch(config)# ip igmp snooping vlan 2
```

ip igmp snooping vlan fastleave

Syntax	ip igmp snooping vlan <VLAN-LIST> fastleave no ip igmp snooping vlan <VLAN-LIST> fastleave
---------------	---

Parameter	VLAN-LIST	specifies VLAN ID list to set
Default		Default is disabled
Mode		Global Configuration
Usage		<p>Use the ip igmp snooping vlan fastleave command to enable fastleave function. Group will remove port immediately when receive leave packet.</p> <p>Use the no form of this command to disable.</p> <p>You can verify settings by the show ip igmp snooping vlan command</p>
Example		<p>The following example specifies that set ip igmp snooping vlan fastleave test.</p> <pre>Switch(config)# ip igmp snooping vlan 1 fastleave</pre>

ip igmp snooping vlan last-member-query-count

Syntax	ip igmp snooping vlan <VLAN-LIST> last-member-query-count <1-7> no ip igmp snooping vlan <VLAN-LIST> last-member-query-count	
Parameter	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094
	last-member-query-count <1-7>	sLast Member Query Count.
Default		Default is 2
Mode		Global Configuration
Usage		<p>Use the ip igmp snooping vlan last-member-query-count command to change how many query packets will send.</p> <p>Use the no form of this command to restore to default.</p> <p>You can verify settings by the show ip igmp snooping vlan command</p>
Example		<p>The following example specifies that set ip igmp snooping vlan last-member-query-count test.</p> <pre>Switch(config)# ip igmp snooping vlan 1 last-member-query-count 5</pre>

ip igmp snooping vlan last-member-query-interval

Syntax	ip igmp snooping vlan <VLAN-LIST> last-member-query-interval <1-60>
---------------	--

no ip igmp snooping vlan <VLAN-LIST> last-member-query-interval

Parameter	VLAN-LIST VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.
Default	last-member-query-interval <1-60> Default is 1
Mode	Global Configuration
Usage	Use the ip igmp snooping vlan last-member-query-interval command to set interval between each query packet. Use the no form of this command to restore to default You can verify settings by the show ip igmp snooping vlan command
Example	The following example specifies that set ip igmp snooping vlan last-member-query-interval test. Switch(config)# ip igmp snooping vlan 1 last-member-query-interval 3

ip igmp snooping vlan query-interval

Syntax	ip igmp snooping vlan <VLAN-LIST> query-interval <30-18000> no ip igmp snooping vlan <VLAN-LIST> query-interval
Parameter	VLAN-LIST VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.
	query-interval <30-18000> Query Interval
Default	Default is 125
Mode	Global Configuration
Usage	Use the ip igmp snooping vlan query-interval command to set interval between each query. Use the no form of this command to restore to default You can verify settings by the show ip igmp snooping vlan command

Example	The following example specifies that set ip igmp snooping vlan query-interval test. Switch(config)# ip igmp snooping vlan 1 query-interval 100
----------------	---

ip igmp snooping vlan response-time

Syntax	ip igmp snooping vlan <VLAN-LIST> response-time <5-20> no ip igmp snooping vlan <VLAN-LIST> response-time				
Parameter	<table border="0"> <tr> <td>VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.</td> </tr> <tr> <td>response-time <5-20></td> <td>Response Time.</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.	response-time <5-20>	Response Time.
VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.				
response-time <5-20>	Response Time.				
Default	Default is 10				
Mode	Global Configuration				
Usage	<p>Use the ip igmp snooping vlan response-time command to set response time Use the no form of this command to restore to default.</p> <p>You can verify settings by the show ip igmp snooping vlan command</p>				
Example	<p>The following example specifies that set ip igmp snooping vlan response-time test.</p> <pre>Switch(config)# ip igmp snooping vlan 1 response-time 12</pre>				

ip igmp snooping vlan robustness-variable

Syntax	ip igmp snooping vlan <VLAN-LIST> robustness-variable <1-7> no ip igmp snooping vlan <VLAN-LIST> robustness-variable				
Parameter	<table border="0"> <tr> <td>VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094</td> </tr> <tr> <td>robustness-variable <1-7></td> <td>Robustness Variable</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094	robustness-variable <1-7>	Robustness Variable
VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094				
robustness-variable <1-7>	Robustness Variable				
Default	Default is 2				
Mode	Global Configuration				
Usage	Use the ip igmp snooping vlan robustness-variable command to times to retry.				

Use the **no** form of this command to restore to default
You can verify settings by the **show ip igmp snooping vlan** command

Example

The following example specifies that set ip igmp snooping vlan parameters test.

```
Switch(config)# ip igmp snooping vlan 1 robustness-variable
```

ip igmp snooping vlan router

Syntax

```
ip igmp snooping vlan VLAN-LIST router learn pim-dvmrp
no ip igmp snooping vlan VLAN-LIST router learn pim-dvmrp
```

Parameter

VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094
-----------	---

Default

Default is enabled

Mode

Global Configuration

Usage

Use the **ip igmp snooping vlan router** command to enable learning router port by routing protocol packets such as PIM/PIMv2, DVMRP, MOSPF.
Use the **no** form of this command to disable.
You can verify settings by the **show ip igmp snooping vlan** command

Example

The following example specifies that set **ip igmp snooping vlan router** test.
Switch(config)# ip igmp snooping vlan 99 router

ip igmp snooping vlan forbidden-port

Syntax

```
ip igmp snooping vlan <VLAN-LIST> forbidden-port IF_PORTS no
ip igmp snooping vlan <VLAN-LIST> forbidden-port IF_PORTS
```

Parameter

GigabitEthernet	Gigabit ethernet interface to configure
LAG	IEEE 802.3 Link Aggregateion interface

Default

No forbidden ports by default

Mode

Global Configuration

Usage

‘ip igmp snooping vlan 1 static-port gi1-2’ will add static port gi1-2 for vlan 1.the all known vlan 1 ipv4 group will add the static ports.

‘ip igmp snooping vlan 1 forbidden-port gi3-4’ will add forbidden port gi3-4 for vlan 1.the all known vlan 1 ipv4 group will remove the forbidden ports. The configure can use ‘show ip igmp snooping forward-all’.

Use the **ip igmp snooping vlan forbidden-port** command to add static non-forwarding port, all known vlan 1 ipv4 group will remove the forbidden ports. Use the **no** form of this command to delete forbidden port.
You can verify settings by the **show ip igmp snooping forward-all** command.

Example

The following example specifies that set ip igmp snooping static/forbidden port test.

Switch(config)# **ip igmp snooping vlan 1 forbidden -port GigabitEthernet 3-4**

ip igmp snooping vlan static-port

Syntax

ip igmp snooping vlan <VLAN-LIST> static-port IF_PORTS
no ip igmp snooping vlan <VLAN-LIST> static-port IF_PORTS

Parameter

GigabitEthernet	Gigabit ethernet interface to configure
LAG	IEEE 802.3 Link Aggregateion interface

Default

No static port by default

Mode

Global Configuration

Usage

Use the **ip igmp snooping vlan static-port command to add static forwarding port, all known vlan 1 ipv4 group will add the static ports.**

Use the **no** form of this command to delete static port.

You can verify settings by the **show ip igmp snooping forward-all** command.

Example

The following example specifies that set ip igmp snooping static port test.

Switch(config)# **ip igmp snooping vlan 1 static -port GigabitEthernet 1-2**

ip igmp snooping vlan forbidden-router-port

Syntax

ip igmp snooping vlan <VLAN-LIST> forbidden-router-port IF_PORTS
no ip igmp snooping vlan <VLAN-LIST> forbidden-router-port IF_PORTS

Parameter	GigabitEthernet Gigabit ethernet interface to configure LAG IEEE 802.3 Link Aggregateion interface
Default	No forbidden router ports by default
Mode	Global Configuration
Usage	<p>Use the ip igmp snooping vlan forbidden-router-port command to add static forbidden router port. This will also remove port from static router port. The forbidden router port will not forward received query packet.</p> <p>.Use the no form of this command to delete forbidden router port.</p> <p>You can verify settings by the show ip igmp snooping router command.</p>
Example	<p>The following example specifies that set ip igmp snooping forbidden test.</p> <pre>Switch(config)# ip igmp snooping vlan 1 forbidden-router-port GigabitEthernet 2</pre>
ip igmp snooping vlan static-router-port	
Syntax	<pre>ip igmp snooping vlan <VLAN-LIST> static-router-port IF_PORTS no ip igmp snooping vlan <VLAN-LIST> static-router-port IF_PORTS</pre>
Parameter	GigabitEthernet Gigabit ethernet interface to configure LAG IEEE 802.3 Link Aggregateion interface
Default	No static router ports by default
Mode	Global Configuration
Usage	<p>Use the ip igmp snooping vlan static-router-port command to add static router port. All query packets will forward to this port.</p> <p>Use the no form of this command to delete static router port.</p> <p>You can verify settings by the show ip igmp snooping router command.</p>
Example	<p>The following example specifies that set ip igmp snooping static test.</p> <pre>Switch(config)# ip igmp snooping vlan 1 static-router-port g1-2</pre>

ip igmp snooping vlan static-group

Syntax	ip igmp snooping vlan <VLAN-LIST> static-group [<ip-addr>] interfaces
---------------	--

IF_PORTS

**no ip igmp snooping vlan <VLAN-LIST> static-group <ip-addr>
interfaces IF_PORTS**

Parameter	VLAN-LIST	specifies VLAN ID list to set
	A.B.C.D	IPV4 multicast address
	GigabitEthernet	Gigabit ethernet interface to configure
	LAG	IEEE 802.3 Link Aggregateion interface

Default	No static group by default
----------------	----------------------------

Mode	Global Configuration
-------------	----------------------

Usage	Use the ip igmp snooping vlan static-group command to add a static group. The static group will not learn other dynamic ports. If the dynamic group exists, then the static group will overlap the dynamic group. The static group set to valid unless igmp snooping global and vlan enable.
--------------	---

Use the **no** form of this command to delete a port in static group. If remove the last member of static group, the static group will be delete.

You can verify settings by the **show ip igmp snooping group** command.

Example	The following example specifies that set ip igmp snooping static group test. Switch(config)# ip igmp snooping vlan 1 static-group 224.1.1.1 interfaces gi1-2
----------------	--

ip igmp snooping vlan group

Syntax	no ip igmp snooping vlan <VLAN-LIST> group <ip-addr>
---------------	---

Parameter	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094
------------------	-----------	---

Default	None
----------------	------

Mode	Global Configuration
-------------	----------------------

Usage	Use the no ip igmp snooping vlan group command to delete a group which could be static or dynamic.
--------------	---

You can verify settings by the **show ip igmp snooping group** command.

Example	The following example specifies that set ip igmp snooping static group test.
----------------	--

Switch(config)# **no ip igmp snooping vlan 1 group 224.1.1.1**

profile range

Syntax	profile range ip <ip-addr> [ip-addr] action (permit deny)
---------------	--

Parameter	<table border="0"> <tr> <td style="width: 30%;"><ip-addr></td><td>Start ipv4 multicast address</td></tr> <tr> <td>A.B.C.D</td><td>IPv4 multicast address end</td></tr> <tr> <td>(permit deny)</td><td>Permit: Action permit deny: Action deny</td></tr> </table>	<ip-addr>	Start ipv4 multicast address	A.B.C.D	IPv4 multicast address end	(permit deny)	Permit: Action permit deny: Action deny
<ip-addr>	Start ipv4 multicast address						
A.B.C.D	IPv4 multicast address end						
(permit deny)	Permit: Action permit deny: Action deny						
Default	None						
Mode	igmp profile configuration mode						
Usage	Use the profile command to generate IGMP profile. You can verify settings by the show ip igmp profile command						
Example	The following example specifies that set ip igmp profile test. Switch(config)# ip igmp profile 1 Switch(config-igmp-profile)# profile range ip 224.1.1.1 224.1.1.8 action permit						

ip igmp profile

Syntax	ip igmp profile <1-128> no ip igmp profile <1-128>
---------------	---

Parameter	<1-128> specifies profile ID
------------------	---

Default	No profie exist by default
----------------	----------------------------

Mode	Global Configuration
-------------	----------------------

Usage	Use the ip igmp profile command to enter profile configuration Use the no form of this command to delete profile You can verify settings by the show ip igmp profile command
--------------	---

Example	The following example specifies that set ip igmp profile test.
----------------	--

Switch(config)# **ip igmp profile 1**

ip igmp filter

Syntax	ip igmp filter <1-128> [no] ip igmp filter
Parameter	<1-128> specifies profile ID
Default	None
Mode	Port Configuration
Usage	Use the ip igmp filter command to bind a profile for port. When the port bind a profile. Then the port learning group will update, if the group is not match the profile rule it will remove the port from the group. Static group is excluded. Use the no form of this command to delete profile You can verify settings by the show ip igmp filter command
Example	The following example specifies that set ip igmp filter test.

Switch(config)# **interface GigabitEthernet 1**
Switch(config-if)#**ip igmp filter 1**

ip igmp max-groups

Syntax	ip igmp max-groups <0-1024> no ip igmp max-groups
Parameter	<0-256> IGMP snooping max group number 0~256.
Default	Default is 256
Mode	Port Configuration

Usage	Use the ip igmp max-groups command to limit port learning max group number. When the port has reach limitation, new group will not add this port. Static group is excluded.
--------------	--

Use the **no** form of this command to restore to default
You can verify settings by the **show ip igmp max-groups** command.

Example	The following example specifies that set ip igmp max-groups test. Switch(config-if)# ip igmp max-groups 10
----------------	--

ip igmp max-groups action

Syntax	ip igmp max-groups action (deny replace)
---------------	---

Parameter	(deny replace) Deny: IGMP max-group action deny Replace: IGMP max-group action replace
------------------	---

Default	Default action is deny
----------------	------------------------

Mode	Port Configuration
-------------	--------------------

Usage	Use the ip igmp max-groups action command to set the action when the numbers of groups reach the limitation. Use the no form of this command to restore to default You can verify settings by the show ip igmp max-groups command.
--------------	---

Example	The following example specifies that set action replace test. Switch(config-if)# ip igmp max-groups action replace
----------------	--

clear ip igmp snooping groups

Syntax	clear ip igmp snooping groups [(dynamic static)]
---------------	---

Parameter	none Clear ip igmp groups include dynamic and static (dynamic static) Ip igmp group type is dynamic or static
------------------	--

Default	None
----------------	------

Mode	Privileged EXEC
Usage	<p>This command will clear the ip igmp groups for dynamic or static or all of type.</p> <p>You can verify settings by the show ip igmp snooping groups command.</p>
Example	<p>The following example specifies that clear ip igmp snooping groups test.</p> <pre>Switch# clear ip igmp snooping groups Switch# show ip igmp snooping groups VLAN Group IP Address Type Life(Sec) Port -----+-----+-----+-----+ Total Number of Entry = 0</pre>

clear ip igmp snooping statistics

Syntax	clear ip igmp snooping statistics
Parameter	none
Default	None
Mode	Privileged EXEC
Usage	<p>This command will clear the igmp statistics.</p> <p>You can verify settings by the show ip igmp snooping command.</p>
Example	<p>The following example specifies that clear ip igmp snooping statistics test.</p> <pre>Switch# clear ip igmp snooping statistics Switch# show ip igmp snooping IGMP Snooping Status ----- Snooping : Enabled Report Suppression : Enabled Operation Version : v2 Forward Method : mac Unknown IP Multicast Action : Flood Packet Statistics Total RX : 0 Valid RX : 0</pre>

Invalid RX	:	0
Other RX	:	0
Leave RX	:	0
Report RX	:	0
General Query RX	:	0
Specail Group Query RX	:	0
Specail Group & Source Query RX	:	0
Leave TX	:	0
Report TX	:	0
General Query TX	:	0
Specail Group Query TX	:	0
Specail Group & Source Query TX	:	0

show ip igmp snooping groups counters

Syntax **show ip igmp snooping groups**

Parameter none

Default none

Mode Privileged EXEC

Usage This command will display the ip igmp group counter include static group.

Example The following example specifies that display ip igmp snooping group counter test.

Switch# **show ip igmp snooping group counters**

Total ip igmp snooping group number: 2

Total ip igmp snooping static mac number: 0

show ip igmp snooping groups

Syntax **show ip igmp snooping groups [(dynamic | static)]**

Parameter	none	Show ip igmp groups include dynamic and static
	(dynamic static)	Display Ip igmp group type is dynamic or static

Default None

Mode	Privileged EXEC
Usage	This command will display the ip igmp groups for dynamic or static or all of type.
Example	<p>The following example specifies that show ip igmp snooping groups.</p> <pre>Switch# show ip igmp snooping groups VLAN Group IP Address Type Life(Sec) Port -----+-----+-----+-----+ 1 224.1.2.3 Static -- gi9 1 224.1.2.4 Static -- gi10</pre> <p>Total Number of Entry = 2</p>

show ip igmp snooping router

Syntax	show ip igmp snooping router [(dynamic forbidden static)]				
Parameter	<table border="0"> <tr> <td>none</td> <td>Show ip igmp router include dynamic and static and forbidden</td> </tr> <tr> <td>(dynamic forbidden static)</td> <td>Display Ip igmp router info for different type</td> </tr> </table>	none	Show ip igmp router include dynamic and static and forbidden	(dynamic forbidden static)	Display Ip igmp router info for different type
none	Show ip igmp router include dynamic and static and forbidden				
(dynamic forbidden static)	Display Ip igmp router info for different type				
Default	None				
Mode	Privileged EXEC				
Usage	This command will display the ip igmp router info.				
Example	<p>The following example specifies that show ip igmp snooping router.</p> <pre>Switch# show ip igmp snooping router Dynamic Router Table VID Port Expiry Time(Sec) -----+-----+</pre> <p>Total Entry 0</p> <pre>Static Router Table VID Port Mask -----+ 1 gi4</pre>				

Total Entry 1

Forbidden Router Table VID | Port Mask

-----+-----

1 | gi8

Total Entry 1

show ip igmp snooping querier

Syntax

show ip igmp snooping querier

Parameter

none Show all vlan ip igmp querier info.

Default

None

Mode

Privileged EXEC

Usage

This command will display all of the static vlan ip igmp querier info.

Example

The following example specifies that show ip igmp snooping querier test.

Switch# **show ip igmp snooping querier**

VID | State | Status | Version | Querier IP

-----+-----+-----+-----

1 | Disabled | Non-Querier | No | -----

Total Entry 1

show ip igmp snooping

Syntax

show ip igmp snooping

Parameter

None

Default

None

Mode

Privileged EXEC

Usage	This command will display ip igmp snooping global info.
--------------	---

Example	The following example specifies that show ip igmp snooping test.
----------------	--

```
Switch# show ip igmp snooping
          IGMP Snooping Status
-----
Snooping           : Enabled
Report Suppression : Enabled
Operation Version   : v2
Forward Method      : mac
Unknown Multicast Action : Flood

          Packet Statistics
Total RX           : 0
Valid RX           : 0
Invalid RX         : 0
Other RX           : 0
Leave RX           : 0
Report RX          : 0
General Query RX   : 0
Specail Group Query RX : 0
Specail Group & Source Query RX : 0
Leave TX           : 0
Report TX          : 0
General Query TX   : 0
Specail Group Query TX : 0
Specail Group & Source Query TX : 0
```

show ip igmp snooping vlan

Syntax	show ip igmp snooping vlan [VLAN-LIST]
---------------	---

Parameter	none	Show all ip igmp snooping vlan info
	[VLAN-LIST]	Show specifies vlan ip igmp snooping info

Default	None
----------------	------

Mode	Privileged EXEC
-------------	-----------------

Usage	This command will display ip igmp snooping vlan info.
--------------	---

Example	The following example specifies that show ip igmp snooping vlan test. Switch# show ip igmp snooping vlan 1 IGMP Snooping is globally enabled IGMP Snooping VLAN 1 admin : disabled IGMP Snooping operation mode : disabled IGMP Snooping robustness: admin 2 oper 2 IGMP Snooping query interval: admin 125 sec oper 125 sec IGMP Snooping query max response : admin 10 sec oper 10 sec IGMP Snooping last member query counter: admin 2 oper 2 IGMP Snooping last member query interval: admin 1 sec oper 1 sec IGMP Snooping last immediate leave: disabled <u>IGMP Snooping automatic learning of multicast router ports: enabled</u>
----------------	---

show ip igmp snooping forward-all

Syntax	show ip igmp snooping forward-all [vlan VLAN-LIST]
---------------	---

Parameter	none Show all ip igmp snooping vlan forward-all info [vlan VLAN-LIST] Show specifies vlan of ip igmp forward info.
------------------	---

Default	None
----------------	------

Mode	Privileged EXEC
-------------	-----------------

Usage	This command will display ip igmp snooping forward all info.
--------------	--

Example	The following example specifies that show ip igmp snooping forward-all test. Switch# show ip igmp snooping forward-all 1 IGMP Snooping VLAN 1 IGMP Snooping static port : None <u>IGMP Snooping forbidden port : None</u>
----------------	--

show ip igmp profile

Syntax	show ip igmp profile [<1-128>]
---------------	---

Parameter	none Show all ip igmp snooping profile info [<1-128>] Show specifies index profile info
------------------	--

Default	None
----------------	------

Mode	Privileged EXEC
-------------	-----------------

Usage	This command will display ip igmp profile info.
Example	<p>The following example specifies that show ip igmp profile test.</p> <pre>Switch# show ip igmp profile IP igmp profile index: 1 IP igmp profile action: permit Range low ip: 224.1.1.1 Range high ip: 224.1.1.8 IP igmp profile index: 2 IP igmp profile action: deny Range low ip: 225.1.1.0 Range high ip: 225.1.2.1</pre>

show ip igmp filter

Syntax	show ip igmp filter [interfaces IF_PORTS]
---------------	--

Parameter	<table border="0"> <tr> <td>none</td><td>Show all port filter</td></tr> <tr> <td>[interfaces IF_PORTS]</td><td>Show specifies ports filter</td></tr> </table>	none	Show all port filter	[interfaces IF_PORTS]	Show specifies ports filter
none	Show all port filter				
[interfaces IF_PORTS]	Show specifies ports filter				
Default	None				
Mode	Privileged EXEC				
Usage	This command will display ip igmp port filter info.				
Example	<p>The following example specifies that show ip igmp filter test.</p> <pre>Switch# show ip igmp filter Port ID Profile ID -----+----- gi1 : 1 gi2 : None gi3 : None gi4 : None gi5 : None --More--</pre>				

show ip igmp max-group

Syntax	show ip igmp max-group [interfaces IF_PORTS]
---------------	---

Parameter	none [interfaces IF_PORTS]	Show all port max-group Show specifies ports max-group
Default	None	
Mode	Privileged EXEC	
Usage	This command will display ip igmp port max-group.	
Example	The following example specifies that show ip igmp max-group test. Switch(config-if)#ip igmp max-groups 50 Switch# show ip igmp max-group Port ID Max Group -----+----- gi1 : 50 gi2 : 256 gi3 : 256 gi4 : 256 gi5 : 256 --More--	

show ip igmp max-group action

Syntax	show ip igmp max-group action [interfaces IF_PORTS]
Parameter	none [interfaces IF_PORTS]
Default	None
Mode	Privileged EXEC
Usage	This command will display ip igmp port max-group action.

Example

The following example specifies that show ip igmp max-group action test.

```
Switch(config)#interface gi1
Switch(config-if)#ip igmp max-groups action replace
Switch# show ip igmp max-group action
Port ID | Max-groups Action
-----+-----
gi1 : replace
gi2 : deny
gi3 : deny
gi4 : deny
gi5 : deny
--More--
```

11. IP Source Guard

ip source verify

Syntax

ip source verify [mac-and-ip]
no ip source verify

Parameter

mac-and-ip Source mac and ip mode

Default

IP Source Guard is disabled on interface. Default is that verifying ip address only

Mode

Port Configuration

Usage

Use the **ip source verify** command to enable IP Source Guard function. Default IP Source Guard filter source IP address. The “**mac-and-ip**” filters not only source IP address but also source MAC address. Use the **no** form of this command to disable. You can verify settings by the **show ip source interfaces** command.

Example

The example shows how to enable IP Source Guard with source IP address filtering on interface gi1.

```
Switch(config)# interface GigabitEthernet 1
switch(config-if)# ip source verify
```

The example shows how to enable IP Source Guard with source IP and MAC address filtering on interface gi2.

```
Switch(config)# interface GigabitEthernet 2
switch(config-if)# ip source verify mac-and-ip
```

```
switch(config-if)# do show ip source interfaces gi1-2
Port | Status | Max Entry | Current Entry
-----+-----+-----+
gi1 | Verify MAC+IP | No Limit | 0
gi2 | disabled | No Limit | 0
```

ip source binding

Syntax

```
ip source binding A:B:C:D:E:F vlan <1-4094> A.B.C.D interface
IF_PORT
no ip source binding A:B:C:D:E:F vlan <1-4094> A.B.C.D interface
IF_PORT
```

Parameter

A:B:C:D:E:F	MAC address xx:xx:xx:xx:xx:xx
VLAN <1-4094>	VLAN configuration
A.B.C.D	IP address.
GigabitEthernet	Gigabit ethernet interface to configure.
LAG	IEEE 802.3 Link Aggregateion interface

Default

Default is no binding entry.

Mode

Global Configuration

Usage

Use the **ip source binding** command to create a static IP source binding entry has an IP address, its associated MAC address、VLAN ID、interface.

Use the **no** form of this command to delete static entry.

You can verify settings by the **show ip source binding** command.

Example

The example shows how to add a static IP source binding entry.

```
Switch(config)# ip source binding 00:11:22:33:44:55 vlan 1 192.168.1.55
```

interface fa1

```
switch(config)# do show ip source binding
```

Bind Table: Maximun Binding Entry Number 192

Port	VID	MAC Address	IP	Type	Lease Time
------	-----	-------------	----	------	------------

gi1	[1]	00:11:22:33:44:55	192.168.1.55(255.255.255.255)	Static	NA
-----	-----	-------------------	-------------------------------	--------	----

show ip source interface

Syntax

show ip source interfaces IF_PORTS

Parameter

GigabitEthernet	Gigabit ethernet interface to configure
LAG	IEEE 802.3 Link Aggregateion interface

Default

Mode

No default is defined

Privileged EXEC

Usage	Use the show ip source interface command to show settings of IP Source Guard of interface
--------------	--

Example	The example shows how to show settings of IP Source Guard of interface gi1
----------------	--

```
switch# show ip source interfaces GigabitEthernet 1
  Port | Status      | Max Entry | Current Entry
  +-----+-----+-----+
  gi1 | Verify MAC+IP | No Limit | 0
```

show ip source binding

Syntax	show ip source binding [(dynamic static)]
---------------	--

Parameter	dynamic Show entries that added by DHCP snooping learn static Show entries that added by user
------------------	--

Default	No default is defined
----------------	-----------------------

Mode	Privileged EXEC
-------------	-----------------

Usage	Use the show ip source binding command to show binding entries of IP Source Guard.
--------------	---

Example	The example shows how to show static binding entries of IP Source Guard.
----------------	--

```
switch# show ip source binding
Bind Table: Maximun Binding Entry Number 192
  Port | VID | MAC Address | IP           | Type | Lease Time
  +-----+-----+-----+
  gi1 | 1   | 00:11:22:33:44:55 | 192.168.1.55(255.255.255.255) | Static | NA
```

12. Link Aggregation

lag

Syntax	lag <1-8> mode (static active passive) no lag
---------------	--

Parameter	<1-8> LAG number static Enable Static Only.
------------------	--

active	Enable LACP unconditionally.																								
passive	Enable LACP only if a LACP device is detected																								
Default	There is no LAG in default.																								
Mode	Interface Configuration																								
Usage	Link aggregation group function allows you to aggregate multiple physical ports into one logic port to increase bandwidth. This command makes normal port join into the specific LAG logic port with static or dynamic mode. And use “ no lag ” to leave the LAG logic port.																								
Example	<p>This example shows how to create a dynamic LAG and join fa1-fa3 to this LAG.</p> <pre>Switch(config)# interface range GigabitEthernet 1-3 Switch(config-if-range)# lag 1 mode active</pre> <p>This example shows how to show current LAG status.</p> <pre>Switch# show lag Load Balancing: src-dst-mac-ip.</pre> <table border="1"> <thead> <tr> <th>Group ID</th> <th>Type</th> <th>Ports</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>LACP</td> <td>Inactive: gi1-3 2</td> </tr> <tr> <td>3</td> <td>-----</td> <td></td> </tr> <tr> <td>4</td> <td>-----</td> <td></td> </tr> <tr> <td>5</td> <td>-----</td> <td></td> </tr> <tr> <td>6</td> <td>-----</td> <td></td> </tr> <tr> <td>7</td> <td>-----</td> <td></td> </tr> <tr> <td>8</td> <td>-----</td> <td></td> </tr> </tbody> </table>	Group ID	Type	Ports	1	LACP	Inactive: gi1-3 2	3	-----		4	-----		5	-----		6	-----		7	-----		8	-----	
Group ID	Type	Ports																							
1	LACP	Inactive: gi1-3 2																							
3	-----																								
4	-----																								
5	-----																								
6	-----																								
7	-----																								
8	-----																								

lag load-balance

Syntax	lag load-balance (src-dst-mac src-dst-mac-ip) no lag load-balance				
Parameter	<table border="1"> <tr> <td>src-dst-mac</td> <td>LAG load balancing is based on source and destination MAC addr.</td> </tr> <tr> <td>src-dst-mac-ip</td> <td>LAG load balancing is based on source and destination of MAC and IP addresses</td> </tr> </table>	src-dst-mac	LAG load balancing is based on source and destination MAC addr.	src-dst-mac-ip	LAG load balancing is based on source and destination of MAC and IP addresses
src-dst-mac	LAG load balancing is based on source and destination MAC addr.				
src-dst-mac-ip	LAG load balancing is based on source and destination of MAC and IP addresses				
Default	Default load balance algorithm is src-dst-mac				
Mode	Global Configuration				

Usage

Link aggregation group port should transmit packets spread to all ports to balance traffic loading. There are two algorithm supported and this command allow you to select the algorithm.

Example

This example shows how to change load balance algorithm to src-dst-mac-ip.

```
Switch(config) # lag load-balance src-dst-mac-ip
```

This example shows how to show current load balance algorithm.

```
Switch# show lag
Load Balancing: src-dst-mac-ip.
```

Group ID	Type	Ports
1	-----	
2	-----	
3	-----	
4	-----	
5	-----	
6	-----	
7	-----	
8	-----	

lacp port-priority

Syntax

```
lacp port-priority <1-65535>
no lacp port-priority
```

Parameter

<1-65535>	Port-priority value
------------------------	---------------------

Default

Default port priority is 1.

Mode

Interface Configuration

Usage

LACP port priority is used for two connected DUT to select aggregation ports. Lower port priority value has higher priority. And the port with higher priority will be selected into LAG first.

The only way to show this configuration is using “**show running-config**” command.

Example

This example shows how to configure interface fa1 lacp port priority to 100.

```
Switch(config) # interface GigabitEthernet 1
Switch(config-if) # lacp port-priority 100
```

lacp system-priority

Syntax	<code>lacp system-priority <1-65535></code> <code>no lacp system-priority</code>
Parameter	<code><1-65535></code> lacp system-priority
Default	Default system priority is 32768.
Mode	Global Configuration
Usage	LACP system priority is used for two connected DUT to select master switch. Lower system priority value has higher priority. And the DUT with higher priority can decide which ports are able to join the LAG. Use “ no lacp system-priority ” to restore to the default priority value. The only way to show this configuration is using “ show running-config ” command.
Example	This example shows how to configure lacp system priority to 1000. <code>Switch(config)# lacp system-priority 1000</code>

lacp timeout

Syntax	<code>lacp timeout (long short)</code> <code>no lacp timeout</code>
Parameter	<code>long</code> Long timeout value. <code>short</code> Short timeout value.
Default	Default LACP timeout is long.
Mode	Interface Configuration
Usage	LACP need to send LACP packet to partner switch to check the link status. This command configure the interval of sending LACP packets. The only way to show this configuration is using “ show running-config ” command.
Example	This example shows how to configure interface fa1 lacp timeout to short.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# lacp timeout short
```

show lacp

Syntax

show lacp sys-id
show lacp [<1-8>] counters
show lacp [<1-8>] (internal | neighbor) [detail]

Parameter

Default

No default values for this command.

Mode

Privileged EXEC

Usage

Use “**show lacp sys-id**” command to displays the system identifier that is being used by LACP. The system identifier is made up of the LACP system priority and the switch MAC address.

Use “**show lacp counter**” command to display LACP statistic information.

Use “**show lacp internal**” command to display local information.

Use “**show lacp neighbor**” command to display remote information.

State of the specific port. These are the allowed values:

- **-**—Port is in an unknown state.
- **bndl**—Port is attached to an aggregator and bundled with other ports.
- **susp**—Port is in a suspended state; it is not attached to any aggregator.
- **hot-sby**—Port is in a hot-standby state.
- **1indiv**—Port is incapable of bundling with any other port.
- **1indep**—Port is in an independent state (not bundled but able to switch data traffic. In this case, LACP is not running on the partner port).
- **down**—Port is down.

State variables for the port, encoded as individual bits within a single octet with these meanings:

- **bit0**—LACP_Activity
- **bit1**—LACP_Timeout
- **bit2**—Aggregation
- **bit3**—Synchronization
- **bit4**—Collecting
- **bit5**—Distributing
- **bit6**—Defaulted
- **bit7**—Expired

Example

This example shows how to show LACP statistics.

```
Switch# show lacp counters
      LACPDU Sent     Recv     LACPDU
Port          Pkts Err
-----
Channel group 1
fa1           0      0       0
fa2           0      0       0
```

This example shows how to show LACP local information.

```
Switch# show lacp internal
Flags:   S - Device is requesting Slow LACPDU
          F - Device is requesting Fast LACPDU
          A - Device is in Active mode          P - Device is in
Passive mode

Channel group 1
Port      Port      LACP port Admin Oper
Port      Flags     State    Priority Key     Key
Number    State
fa1       SA        down     1          0x3e8   0x3e8
0x1       0x45
fa2       SA        down     1          0x3e8   0x3e8
0x2       0x45
```

This example shows how to show LACP remote information.

```
Switch# show lacp neighbor
Flags:   S - Device is sending Slow LACPDU
          F - Device is sending Fast LACPDU
          A - Device is in Active mode          P - Device is in
Passive mode

Channel group 1 neighbors
Partner's information:
```

LACP port					Admin	Oper	
Port	Port	Flags	Priority	Dev ID	Age	key	Key
Number	State						
Gi1 0x3e8	FP 0x1	0x56	32768	0000.0000.0000	0s	0x3e8	
Gi2 0x3e8	FP 0x2	0x56	32768	0000.0000.0000	0s	0x3e8	

show lag

Syntax

show lag

Parameter

Default

No default values for this command.

Mode	Privileged EXEC																								
Usage	Use “ show lag ” command to show current LAG load balance algorithm and members active/inactive status.																								
Example	This example shows how to show current LAG status. Switch# show lag Load Balancing: src-dst-mac-ip.																								
Group ID Type Ports	<table><thead><tr><th>Group ID</th><th>Type</th><th>Ports</th></tr></thead><tbody><tr><td>1</td><td>LACP</td><td>Inactive: gi1-3 2</td></tr><tr><td>3</td><td></td><td></td></tr><tr><td>4</td><td></td><td></td></tr><tr><td>5</td><td></td><td></td></tr><tr><td>6</td><td></td><td></td></tr><tr><td>7</td><td></td><td></td></tr><tr><td>8</td><td></td><td></td></tr></tbody></table>	Group ID	Type	Ports	1	LACP	Inactive: gi1-3 2	3			4			5			6			7			8		
Group ID	Type	Ports																							
1	LACP	Inactive: gi1-3 2																							
3																									
4																									
5																									
6																									
7																									
8																									

13. LLDP

clear lldp statistics

Syntax **clear lldp global statistics**

Default There is no default configuration for this command

Mode Privileged EXEC

Usage Use “**clear lldp statistics**” command to clear the LLDP RX/TX statistics.

Example This example shows how to clear LLDP statistics.

Switch# clear lldp global statistics

lldp

Syntax	lldp no lldp
Default	Default is enabled
Mode	Global Configuration
Usage	<p>Use “lldp” command to enable LLDP RX/TX ability. The LLDP enable status is displayed by “show lldp” command.</p> <p>Use the no form of this command to disable the LLDP. When LLDP is disabled, the behavior of receiving LLDP PDU would be decided by “lldp lldpdu” command.</p>
Example	<p>The following example sets LLDP enable/disable.</p> <pre>Switch (config)# lldp Switch# show lldp State: Enabled Timer: 30 Seconds Hold multiplier: 4 Reinit delay: 2 Seconds Tx delay: 2 Seconds LLDP packet handling: Flooding Port State Optional TLVs Address ----- + ----- + ----- + ----- fa1 RX, TX 192.168.1.2 fa2 RX, TX 192.168.1.2 fa3 RX, TX 192.168.1.2 fa4 RX, TX 192.168.1.2 fa5 RX, TX 192.168.1.2</pre>

lldp rx

Syntax	lldp rx no lldp rx
Default	Default is enabled
Mode	Port Configuration
Usage	<p>Use “lldp rx” command to enable the LLDP PDU RX ability. The configuration could be shown by “show lldp” command.</p> <p>Use the no form of this command to disable the RX ability.</p>
Example	This example sets port gi1 to enable LLDP TX, port gi2 to disable RX but

enable TX, port gi3 to enable RX but disable TX, port gi4 to disable RX and TX.

```

Switch(config)# interface GigabitEthernet 1
Switch(config-if)# lldp rx
Switch(config-if)# lldp tx
Switch(config)# interface GigabitEthernet 2
Switch(config-if)# no lldp rx
Switch(config-if)# lldp tx
Switch(config)# interface GigabitEthernet 3
Switch(config-if)# lldp rx Switch(config-if)# no lldp tx
Switch(config)# interface GigabitEthernet 4
Switch(config-if)# no lldp rx
Switch(config-if)# no lldp tx
Switch(config-if)# end
Switch# show lldp interfaces GigabitEthernet 1-4

State: Enabled
Timer: 30 Seconds
Hold multiplier: 4
Reinit delay: 2 Seconds
Tx delay: 2 Seconds
LLDP packet handling: Bridging

Port      | State   | Optional TLVs | Address
----- + ----- + ----- + ----- gi1
        | RX, TX |           | 192.168.1.254
gi2    |      TX |           | 192.168.1.254
gi3    |      RX |           | 192.168.1.254
gi4    | Disable |           | 192.168.1.254

```

lldp tx-interval

Syntax

lldp tx-interval <5-32768>
no lldp tx-interval

Parameter

<5-32768>	Rate at which LLDP packets are sent (in sec).
------------------------	---

Default

Default TX interval is 30 seconds

Mode

Global Configuration

Usage

Use “**lldp tx-interval**” command to configure the LLDP TX interval. It should be noticed that both “**lldp tx-interval**” and “**lldp tx-delay**” affects the LLDP PDU TX time. The larger value of the two configurations decides the TX interval. The configuration could be shown by “**show lldp**” command.

Use the **no** form of this command to restore the interval to default value.

Example

This example sets LLDP TX interval to 10 seconds.

```
Switch(config)# lldp tx-interval 10
Switch# show lldp
  State: Disabled
  Timer: 10 Seconds
  Hold multiplier: 4
  Reinit delay: 2 Seconds
  Tx delay: 2 Seconds
  LLDP packet handling: Flooding
```

lldp reinit-delay

Syntax	lldp reinit-delay <1-10> no lldp reinit-delay
Parameter	<1-10> Specify the delay (in secs) for LLDP to initialize
Default	Default reinitial delay is 2 seconds
Mode	Global Configuration
Usage	<p>Use “lldp reinit-delay” to configure the LLDP re-initial delay. This delay avoids LLDP generate too many PDU if the port is up and down frequently. The delay starts to count when the port links down. The port would not generate LLDP PDU until the delay counts to zero. The configuration could be shown by “show lldp” command.</p> <p>Use the no form of this command to restore the delay to default value.</p>
Example	This example sets LLDP re-initial delay to 5 seconds.
	<pre>Switch(config)# lldp reinit-delay 5 Switch# show lldp State: Disabled Timer: 10 Seconds Hold multiplier: 4 Reinit delay: 5 Seconds Tx delay: 2 Seconds LLDP packet handling: Flooding</pre>

lldp holdtime-multiplier

Syntax	lldp holdtime-multiplier <2-10> no holdtime-multiplier
Parameter	<2-10> Multiplier used for calculating the LLDP discovery packet hold time
Default	lldp holdtime-multiplier 4

Mode	Global Configuration
Usage	<p>Use “lldp holdtime-multiplier” command to configure the LLDP PDU hold multiplier that decides time-to-live (TTL) value sent in LLDP advertisements: TTL = (tx-interval * holdtime-multiplier). The configuration could be shown by “show lldp” command.</p> <p>Use the no form of this command to restore the multiplier to default value.</p>
Example	<p>This example sets LLDP hold time multiplier to 3.</p> <pre>Switch(config)# lldp holdtime-multiplier 3 Switch# show lldp State: Disabled Timer: 10 Seconds Hold multiplier: 3 Reinit delay: 2 Seconds Tx delay: 2 Seconds LLDP packet handling: Flooding</pre>

lldp lldpdu

Syntax	lldp lldpdu (filtering flooding bridging)						
Parameter	<table border="0"> <tr> <td>bridging</td> <td>Bridging LLDP PDU to VLAN member ports</td> </tr> <tr> <td>filtering</td> <td>Drop LLDP PDU.</td> </tr> <tr> <td>flooding</td> <td>Flooding LLDP PDU to all ports (VLAN unaware)</td> </tr> </table>	bridging	Bridging LLDP PDU to VLAN member ports	filtering	Drop LLDP PDU.	flooding	Flooding LLDP PDU to all ports (VLAN unaware)
bridging	Bridging LLDP PDU to VLAN member ports						
filtering	Drop LLDP PDU.						
flooding	Flooding LLDP PDU to all ports (VLAN unaware)						
Default	Default LLDP PDU handling behavior when LLDP disabled is flooding						
Mode	Global Configuration						
Usage	<p>Use “lldp lldpdu” command to configure the LLDP PDU handling behavior when LLDP is globally disabled. It should be noticed that if LLDP is globally enabled and per port LLDP RX status is configured to disabled, the received LLDP PDU would be dropped instead of taking the global disable behavior. The configuration could be shown by “show lldp” command.</p> <p>Use the no form of this command to restore the behavior to default.</p>						
Example	This example sets LLDP disable action to bridging.						

```
Switch(config)# lldp lldpdu bridging
Switch# show lldp

State: Enabled
Timer: 30 Seconds
Hold multiplier: 4
Reinit delay: 2 Seconds
Tx delay: 2 Seconds
LLDP packet handling: Bridging
```

lldp med

Syntax

lldp med no
lldp med

Default

lldp med

Mode

Port Configuration

Usage

Use “**lldp med**” to configure the LLDP MED enable status. If LLDP MED is enabled, LLDP MED capability TLV and other selected MED TLV would be attached. The configuration could be shown by “show lldp med” command.

Use the **no** form of this command to disable the LLDP MED status.

Example

This example sets port gi1 to enable LLDP MED, port gi2 to disable LLDP MED.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# lldp med
Switch(config)# interface GigabitEthernet 2
Switch(config-if)# no lldp med
Switch# show lldp interfaces GigabitEthernet 1-2 med
```

Port	Capabilities	Network Policy	Location	
Inventory				
gi1	Yes	Yes	No	
gi2	No	Yes	No	

lldp med fast-start-repeat-count

Syntax

lldp med fast-start-repeat-count <1-10>
no lldp med fast-start-repeat-count

Parameter	<code><1-10></code>	Fast start repeat count, range is 1-10.
Default		Default fast start TX repeat count is 3
Mode		Global Configuration
Usage		<p>Use “lldp med fast-start-repeat-count” command to configure the LLDP PDU fast start TX repeat count. When port links up, it will send LLDP PDU immediately to notify link partner. The number of LLDP PDU sends when it links up depends on fast-start-repeat-count configuration. The LLDP PDU fast-start transmits in interval of one second. The fast start behavior works no matter LLDP MED is enabled or not. The configuration could be shown by “show lldp med” command.</p> <p>Use the no form of this command to restore count to default.</p>

Example This example sets fast start repeat count to 10.

```
Switch(config)# lldp med fast-start-repeat-count 10
Switch# show lldp med

Fast Start Repeat Count: 10
lldp med network-policy voice: auto
```

lldp med location

Syntax	lldp med location (coordination civic-address ecs-elin) ADDR no lldp med location (coordination civic-address ecs-elin)	
Parameter	coordination	The location is specified as coordinates. Range: 16 hexadecimal bytes exactly.
	civic-address	The location is specified as civic address. Range: 6 to 160 hexadecimal bytes.
	ecs-elin	The location is specified as ECS ELIN. Range: 10 to 25 hexadecimal bytes.
	ADDR	Specify the location data. Input format is hexadecimal values without colon (for example: 1234AB). For coordination location type, the length of ADDR is 16 bytes. For civic-address, the length is 6 to 160 bytes. For ecs-elin, the length is 10 to 25 bytes.
Default	Default is no location data.	

Mode	Port Configuration
<i>Managed Switch Software</i>	215

Usage

Use “**lldp med location**” command to configure the LLDP MED location data. The “coordinate”, “civic-address”, “ecs-elin” locations are independent, so at most three location TLVs could be sent if their data are not empty. The configuration of location could be shown by “**show lldp interface PORT med**” command.

Use the **no** form of this command to clear location data.

Example

This example sets location data for interface g1.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# lldp med location coordinate
112233445566778899AABBCCDDEEFF00
Switch(config-if)# lldp med location civic-address
112233445566
Switch(config-if)# lldp med location ecs-elin
112233445566778899AA
Switch# show lldp interfaces g1 med

      Port      | Capabilities      | Network Policy | Location |
Inventory
----- + ----- + ----- + ----- + -----
-- 
      g1      |          Yes |          Yes |          Yes |
Yes

Port ID: g1
Network policies: 1, 32
Location:
Coordinates: 112233445566778899AABBCCDDEEFF00
Civic-address: 112233445566
Ecs-elin: 112233445566778899AA
```

lldp med network-policy

Syntax

lldp med network-policy <1-32> app (voice|voice-signaling|guest-voice|guest-voice-signaling|softphone-voice|video-conferencing|streaming-video|video-signaling) vlan <1-4094> vlan-type (tag|untag) priority <0-7> dscp <0-63>

no lldp med network-policy <1-32>

Parameter

<1-32>	Network policy index
voice	
voice-signaling	Voice.
guest-voice	
guest-voice-signaling	
softphone-voice	
video-	

conferencing	
streaming-video	
video-signaling	
	<1-4094> Specify the VLAN ID
	tag untag Specify the VLAN tag status
	<0-7> Specify the L2 priority
	<0-63> Specify the DSCP value
Default	No network policy is defined
Mode	Global Configuration
Usage	<p>Use “lldp med network-policy” command to configure the LLDP MED network policy table and add a network policy entry that can be bind to ports. If LLDP MED network policy voice auto mode is enabled, “voice” type network policy can not be created since it is in auto mode. The network policy table configuration could be shown by “show lldp med” command.</p> <p>Use the no form of this command to remove network policy entry of specific index. A network policy can be removed only when it is not bind to any port.</p>
Example	<p>This example create 2 network policies.</p> <pre>Switch(config)# lldp med network-policy 1 app voice-signaling vlan 2 vlan-type tag priority 3 dscp 4 Switch(config)# lldp med network-policy 32 app video- conferencing vlan 5 vlan-type tag priority 1 dscp 63 Switch# show lldp med</pre> <p>Fast Start Repeat Count: 10 lldp med network-policy voice: auto</p> <p>Network policy 1 ----- Application type: Voice Signaling VLAN ID: 2 tagged Layer 2 priority: 3 DSCP: 4</p> <p>Network policy 32 ----- Application type: Conferencing VLAN ID: 5 tagged Layer 2 priority: 1 DSCP: 63</p>

lldp med network-policy (Interface)

Syntax	lldp med network-policy (add remove) <1-32>
Parameter	add Add network policy to port binding. remove Remove network policy to port binding. <1-32> Specify the network policy index
Default	Default is no network policy binding to port.

Mode	Port Configuration
Usage	<p>Use “lldp med network-policy” command to bind the network policy to port interface. The binded network policy of one port should be with different types. If network policy TLV is selected over a port, the binded network policies would be attached in LLDP MED PDU. The configuration of network policy binding could be shown by “show lldp med” command.</p>
Example	<p>This example binds network policy for interface GigabitEthernet 1 and GigabitEthernet 2.</p> <pre>Switch# show lldp med Fast Start Repeat Count: 10 lldp med network-policy voice: auto Network policy 1 ----- Application type: Voice Signaling VLAN ID: 2 tagged Layer 2 priority: 3 DSCP: 4 Network policy 32 ----- Application type: Conferencing VLAN ID: 5 tagged Layer 2 priority: 1 DSCP: 63 Switch(config)# interface range GigabitEthernet 1-2 Switch(config-if-range)# lldp med network-policy add 1,32 Switch# show lldp interfaces GigabitEthernet 1-2 med Port Capabilities Network Policy Location Inventory ----- + ----- + ----- + ----- + ----- -- gi1 Yes Yes Yes Yes gi2 Yes Yes Yes Yes Port ID: gi1 Network policies: 1, 32 Port ID: gi2 Network policies: 1, 32</pre>

lldp med network-policy voice auto

Syntax	lldp med network-policy voice auto no lldp med network-policy voice auto
Default	lldp med network-policy auto

Usage

Use “**lldp med network-policy voice auto**” command to enable network policy voice auto mode. In voice auto mode, if network-policy TLV is selected, a voice type network policy would be attached to PDU that contents comes from voice VLAN configuration. This works for voice VLAN module to exchange voice VLAN information with link partner. If voice auto mode is enabled, user can not manually create an voice type network policy; if an voice type network policy is created, the voice auto mode can not be enabled. The configuration of network policy auto mode could be shown by “**show lldp med**” command.

Use the **no** form of this command to disable voice auto mode.

Example

This example sets network policy auto mode to enable and then disable.

```
Switch (config)# lldp med network-policy auto
Switch# show lldp med

Fast Start Repeat Count: 10
lldp med network-policy voice: auto

Switch (config)# no lldp med network-policy auto
Switch# show lldp med

Fast Start Repeat Count: 10
lldp med network-policy voice: manual
```

lldp med tlv-select

Syntax

lldp med tlv-select MEDTLV [MEDTLV] [MEDTLV] [MEDTLV]
no lldp med tlv-select

Parameter

MEDTLV LLDP MED optional TLV (network-policy, location, inventory, poe-pse)

Default

network-policy TLV

Mode

Port Configuration@

Usage

Use “**lldp med tlv-select**” command to configure the LLDP MED TLV selection. It should be noticed that even no MED TLV is selected, MED capability TLV would be attached if LLDP MED is enable. The configuration could be shown by “**show lldp med**” command.

Use the **no** form of this command to remove all selected MED TLV over the dedicated ports.

Example

This example sets port gi1-2 to select LLDP MED network policy, location, POE-PSE, inventory TLVs, and it sets port gi3-4 to un-select all LLDP MED TLVs.

```
Switch (config)# interface gi1
```

Command Line Interface

User Guide

```
Switch(config-if)# lldp med tlv-select network-policy location
inventory
Switch(config)# interface gi2
Switch(config-if)# no lldp med tlv-select
Switch# show lldp interfaces gi1-2 med

      Port      | Capabilities      | Network Policy | Location |
Inventory
----- + ----- + ----- + ----- + -----
--
```

Yes	No	
gi1	Yes Yes Yes	
gi2	Yes No No	

lldp tlv-select

Syntax

lldp tlv-select TLV [TLV] [TLV] [TLV] [TLV] [TLV] [TLV] [TLV]
no lldp tlv-select

Parameter

TLV Specify the selected optional TLV. Available optional TLVs are : sys-name (system name), sys-desc (system description), sys-cap (system capability), mac-phy (802.3 MAC-PHY), lag (802.3 link aggregation), max-frame-size (802.3 max frame size), and management-addr (management address).

Default

Default is no selected optional TLV.

Mode

Port Configuration

Usage

Use “lldp tlv-select” command to attach selected TLV in PDU. The configuration could be shown by “show lldp” command.

Example

Use the **no** form of this command to remove all selected TLV.

This example selects system name, system description, system capability, 802.3 MAC-PHY, 802.3 link aggregation, 802.3 max frame size, and management address TLVs for interface gi1 and gi3.

```
Switch(config)# interface range gi 1,3
Switch(config-if-range)# lldp tlv-select port-desc sys-name
sys-desc sys-cap mac-phy lag max-frame-size management-addr
Switch(config-if-range)# end
Switch# show lldp interfaces gi1,3
```

```
State: Disabled
Timer: 10 Seconds
Hold multiplier: 3
Reinit delay: 2 Seconds
Tx delay: 2 Seconds
LLDP packet handling: Flooding
```

Port	State	Optional TLVs	Address
----- + ----- + ----- + -----	----- + ----- + -----	----- + -----	-----
gi1	RX, TX PD, SN, SD, SC	192.168.1.254	gi1
gi3	RX, TX PD, SN, SD, SC	192.168.1.254	

```
Port ID: gi1
802.3 optional TLVs: 802.3-mac-phy, 802.3-lag, 802.3-max-
frame-size, management-addr
802.1 optional TLVs
PVID: Enabled
```

Port ID: gi3
802.3 optional TLVs: 802.3-mac-phy, 802.3-lag, 802.3-max-frame-size, management-addr
802.1 optional TLVs
PVID: Enabled

lldp tlv-select pvid

Syntax	lldp tlv-select pvid (disable enable) no lldp tlv-select pvid				
Parameter	<table border="0"> <tr><td>disable</td><td>Disable Tx optional-TLV 802.1 PVID</td></tr> <tr><td>enable</td><td>Enable Tx optional-TLV 802.1 PVID</td></tr> </table>	disable	Disable Tx optional-TLV 802.1 PVID	enable	Enable Tx optional-TLV 802.1 PVID
disable	Disable Tx optional-TLV 802.1 PVID				
enable	Enable Tx optional-TLV 802.1 PVID				
Default	Default is enabled				
Mode	Port Configuration				
Usage	<p>Use “lldp tlv-select pvid” command to configure the 802.1 PVID TLV attach enable status. The configuration could be shown by “show lldp” command.</p> <p>Use the no form of this command to restore the pvid to default value.</p>				
Example	<p>This example sets port gi1 PVID TLV attaches status to disable and port gi2 to enable.</p> <pre> Switch(config)# interface gi1 Switch(config-if)# lldp tlv-select pvid disable Switch(config-if)# interface gi2 Switch(config-if)# lldp tlv-select pvid enable Switch# show lldp interfaces gi1,gi2 State: Disabled Timer: 10 Seconds Hold multiplier: 3 Reinit delay: 2 Seconds Tx delay: 2 Seconds LLDP packet handling: Flooding Port State Optional TLVs Address ----- + ----- + ----- + ----- gi1 RX,TX 192.168.1.254 gi2 RX,TX 192.168.1.254 Port ID: gi1 802.3 optional TLVs: 802.1 optional TLVs PVID: Disabled Port ID: gi2 </pre>				

802.3 optional TLVs:
802.1 optional TLVs
PVID: Enabled

lldp tlv-select vlan-name

Syntax

lldp tlv-select vlan-name (add|remove) VLAN-LIST

Parameter

add	Specify which VLAN to add to the port.
------------	--

Default

Default is no VLAN added.

Mode

Port Configuration

Usage

Use “**lldp tlv-select vlan-name**” command to add or remove VLAN list for 802.1 VLAN-NAME TLV. The configuration could be shown by “**show lldp**” command.

Example

This example add VLAN 100 to VLAN-NAME TLV for port g10.

```

Switch(config)# vlan 100
Switch(config-vlan)# exit
Switch(config)# interface g1
Switch(config-if)# switchport trunk allowed vlan add all
Switch(config-if)# lldp tlv-select vlan-name add 100
Switch(config-if)# end

Switch# show lldp interfaces g1

State: Enabled
Timer: 30 Seconds
Hold multiplier: 4
Reinit delay: 2 Seconds
Tx delay: 2 Seconds
LLDP packet handling: Flooding

Port      | State | Optional TLVs | Address
----- + ----- + ----- + -----
g1       | RX,TX |             | 192.168.1.2

Port ID: g1
802.3 optional TLVs:
802.1 optional TLVs
PVID: Enabled
VLANs: 100

```

lldp tx

Syntax	lldp tx no lldp tx
Default	Default is enabled
Mode	Port Configuration
Usage	<p>Use “lldp tx” command to enable the LLDP PDU TX ability. The configuration could be shown by “show lldp” command.</p> <p>Use the no form of this command to disable the TX ability.</p>
Example	<p>This example sets port gi1 to enable LLDP TX, port gi2 to disable RX but enable TX, port gi3 to enable RX but disable TX, port gi4 to disable RX and TX.</p> <pre> Switch(config)# interface gi1 Switch(config-if)# lldp rx Switch(config-if)# lldp tx Switch(config)# interface gi2 Switch(config-if)# no lldp rx Switch(config-if)# lldp tx Switch(config)# interface gi3 Switch(config-if)# lldp rx Switch(config-if)# no lldp tx Switch(config)# interface gi4 Switch(config-if)# no lldp rx Switch(config-if)# no lldp tx Switch(config-if)# end Switch# show lldp interfaces gi1-4 State: Enabled Timer: 30 Seconds Hold multiplier: 4 Reinit delay: 2 Seconds Tx delay: 2 Seconds LLDP packet handling: Bridging Port State Optional TLVs Address ----- + ----- + ----- + ----- gi1 RX, TX 192.168.1.254 gi2 TX 192.168.1.254 gi3 RX 192.168.1.254 gi4 Disable 192.168.1.254 </pre>

lldp tx-delay

Syntax	lldp tx-delay <1-8192> no lldp tx-delay
Parameter	<1-8192> LLDP Tx-delay time in seconds.

Default	Default TX delay is 2 seconds
Mode	Global Configuration
Usage	<p>Use “lldp tx-delay” command to configure the delay in seconds between successive LLDP frame transmissions. The delay starts to count in any case LLDP PDU is sent such as by LLDP PDU advertise routine, LLDP PDU content change, port link up, etc. The configuration could be shown by “show lldp” command.</p> <p>Use the no form of this command to restore the delay to default value.</p>
Example	This example sets LLDP PDU TX delay to 10 seconds.
	<pre>Switch(config)# lldp tx-delay 10 Switch# show lldp State: Disabled Timer: 10 Seconds Hold multiplier: 4 Reinit delay: 2 Seconds Tx delay: 10 Seconds LLDP packet handling: Flooding</pre>

show lldp

Syntax	show lldp show lldp interface <i>IF_NMLPORTS</i>
Parameter	<i>IF_NMLPORTS</i> Specify the ports to display information
Default	This command has no default value.
Mode	Privileged EXEC
Usage	Use “ show lldp ” and “ show lldp interface ” commands to display LLDP global information including LLDP enable status, LLDP PDU TX interval, hold time multiplier, re-initial delay, TX delay, and LLDP packet handling when LLDP is disabled. The per port information displayed includes port LLDP RX/TX enable status, selected TLV to TX and IP address. The abbreviations in optional TLVs are: port description (PD), system name (SN), system description (SD), and system capability (SC).

Example

This example displays lldp information of port gi1 and gi2

```
Switch# show lldp interfaces gi1,gi2
State: Disabled
Timer: 30 Seconds
Hold multiplier: 4
Reinit delay: 2 Seconds
Tx delay: 2 Seconds
LLDP packet handling: Flooding

Port      | State | Optional TLVs   | Address
----- + ----- + ----- + -----
          | RX,TX | PD, SN, SD, SC | 192.168.1.254
          |        |                   | 192.168.1.254
gi1     | RX,TX |               |

Port ID: gi1
802.3 optional TLVs: 802.3-mac-phy, 802.3-lag, 802.3-max-frame-size, management-addr
802.1 optional TLVs
PVID: Enabled

Port ID: gi2
802.3 optional TLVs:
802.1 optional TLVs
PVID: Enabled
```

show lldp local-device

Syntax

show lldp local-device
show lldp interfaces *IF_NMLPORTS* local-device

Parameter

IF_NMLPORTS Specify the ports to display information

Default

There is no default configuration for this command

Mode

Privileged EXEC

Usage

Use “**show lldp local-device**” command to show the local configuration of LLDP PDU. By the commands, a user can view the contents of LLDP/ LLDP-MED TLVs that would be attached in LLDP PDU.

Example

This example displays the local device information.

```
Switch# show lldp local-device
LLDP Local Device Information:
Chassis Type : Mac Address
Chassis ID  : 00:12:12:12:12:12
System Name  : Switch121212
System Description :
System Capabilities Support : Bridge
System Capabilities Enable  : Bridge
Management Address : 192.168.1.254 (IPv4)
```

```
Switch121212(config)# show lldp interfaces g1 local-device
Device ID: 00:12:12:12:12:12
Port ID: g1
System Name: Switch121212
Capabilities: Bridge
System description:
Port description:
Management address: 192.168.1.254
Time To Live: 120
802.3 MAC/PHY Configur/Status
Auto-negotiation support: Supported
Auto-negotiation status: Enabled
Auto-negotiation Advertised Capabilities: 10BASE-T half
duplex, 10BASE-T full duplex, 100BASE-TX half duplex,
100BASE-TX full duplex
Operational MAU type: Other or unknown
802.3 Link Aggregation
Aggregation capability: Capable of being aggregated
Aggregation status: Not currently in aggregation
Aggregation port ID: 0
802.3 Maximum Frame Size: 1522
802.1 PVID: 1
LLDP-MED capabilities: Capabilities, Network Policy, Location,
Extended PSE, Inventory
LLDP-MED Device type: Network Connectivity
LLDP-MED Network policy
Application type: Voice Signaling
Flags: Unknown Policy
VLAN ID: 2
Layer 2 priority: 3
DSCP: 4
LLDP-MED Network policy
Application type: Conferencing
Flags: Unknown Policy
VLAN ID: 5
Layer 2 priority: 1
DSCP: 63
Hardware revision: 1123
Firmware revision: 2.5.0-beta.32801
Software revision: 2.5.0-beta.32801
Serial number: abc
Manufacturer Name:
Model name: RTL8328-24FE-4GE
Asset ID:
LLDP-MED Location
Coordinates: 11:22:33:44:55:66:77:88:99:AA:BB:CC:DD:EE:FF:00
Civic-address: 11:22:33:44:55:66
Ecs-elin: 11:22:33:44:55:66:77:88:99:AA
```

show lldp med

Syntax

show lldp med
show lldp interfaces *IF_NMLPORTS* med

Parameter

IF_NMLPORTS Specify the ports to display information

Default There is no default configuration for this command

Mode Privileged EXEC

Usage Use “**show lldp med**” command to display the LLDP MED configuration information.

Example This example display the LLDP MED information.

```
Switch# show lldp med

Fast Start Repeat Count: 10
lldp med network-policy voice: manual

Network policy 1
-----
Application type: Voice Signaling
VLAN ID: 2 tagged
Layer 2 priority: 3
DSCP: 4

Network policy 32
-----
Application type: Conferencing
VLAN ID: 5 tagged
Layer 2 priority: 1
DSCP: 63

      Port      | Capabilities   | Network Policy | Location |
Inventory
      ----- + ----- + ----- + ----- + -----
      --
      Yes Yes No No No No No No No

      gi1 |          Yes |          Yes |          Yes |
      gi2 |          Yes |          Yes |          Yes |
      gi3 |          Yes |          No  |          No  |
      gi4 |          Yes |          No  |          No  |
      gi5 |          No  |          Yes |          No  |
      gi6 |          No  |          Yes |          No  |
      gi7 |          No  |          Yes |          No  |
      gi8 |          No  |          Yes |          No  |
      gi9 |          Yes |          Yes |          No  |
      gi10 |         Yes |          Yes |          No |
```

gi11	Yes	Yes	No
No			
gi12	Yes	Yes	No
No			
gi13	Yes	Yes	No
No			
gi14	Yes	Yes	No
No			
gi15	Yes	Yes	No
No			
gi16	Yes	Yes	No
No			
gi17	Yes	Yes	No
No			
gi18	Yes	Yes	No
No			
gi19	Yes	Yes	No
No			
gi20	Yes	Yes	No
No			
gi21	Yes	Yes	No
No			
gi22	Yes	Yes	No
No			
gi23	Yes	Yes	No
No			
gi24	Yes	Yes	No
No			
gi25	Yes	Yes	No
No			
gi26	Yes	Yes	No
No			
gi27	Yes	Yes	No
No			
gi28	Yes	Yes	No
No			

Switch# show lldp interfaces gi1 med

Port	Capabilities	Network Policy	Location
Inventory			
----- + ----- + ----- + ----- + -----			
--			
gi1	Yes	Yes	Yes
Yes			

Port ID: gi1
 Network policies: 1, 32
 Location:
 Coordinates: 112233445566778899AABBCCDDEEFF00
 Civic-address: 112233445566
 Ecs-elin: 112233445566778899AA

Switch121212(config)#

show lldp neighbor

Syntax	show lldp neighbor show lldp interfaces <i>IF_NMLPORTS</i> neighbor
Parameter	<i>IF_NMLPORTS</i> Specify the ports to display information
Default	There is no default configuration for this command
Mode	Privileged EXEC
Usage	Use “ show lldp neighbor ” command to display the received neighbor LLDP PDU information. When LLDP PDU is received on LLDP RX enable ports, system would store the PDU information in database until time to live of the PDU counts down to zero.
Example	<p>This example displays the neighbor information.</p> <pre> Switch# show lldp neighbor Port Device ID Port ID SysName Capabilities TTL -----+-----+-----+-----+ -- + -----+ ----- gi3 00:12:12:12:12:12 gi1 Switch121212 Bridge 111 gi11 TREEBASE 00:1A:4D:26:EB:E8 TREEBASE Station Only 33 Switch121212(config)# show lldp interfaces gi3 neighbor Device ID: 00:12:12:12:12:12 Port ID: gi1 System Name: Switch121212 Capabilities: Bridge System description: Port description: Management address: 192.168.1.254 Time To Live: 98 802.3 MAC/PHY Configur/Status Auto-negotiation support: Supported Auto-negotiation status: Enabled Auto-negotiation Advertised Capabilities: 10BASE-T half duplex, 10BASE-T full duplex, 100BASE-TX half duplex, 100BASE-TX full duplex Operational MAU type: 100BASE-TX full duplex mode 802.3 Link Aggregation Aggregation capability: Capable of being aggregated Aggregation status: Not currently in aggregation Aggregation port ID: 0 802.3 Maximum Frame Size: 1522 802.1 PVID: 1 LLDP-MED capabilities: Capabilities, Network Policy, Location, Extended PSE, Inventory LLDP-MED Device type: Network Connectivity </pre>

```

LLDP-MED Network policy
Application type: Voice Signaling
Flags: Unknown Policy
VLAN ID: 2
Layer 2 priority: 3
DSCP: 4
LLDP-MED Network policy
Application type: Conferencing
Flags: Unknown Policy
VLAN ID: 5
Layer 2 priority: 1
DSCP: 63
LLDP-MED Power over Ethernet
Device Type: Power Sourcing Entity
Power Source: Primary Power Source
Power priority: Low
Power value: 13.0 Watts
Hardware revision: 1123
Firmware revision: 2.5.0-beta.32801
Software revision: 2.5.0-beta.32801
Serial number: abc
Manufacturer Name:
Model name: RTL8328-24FE-4GE
Asset ID:
LLDP-MED Location
Coordinates: 11:22:33:44:55:66:77:88:99:AA:BB:CC:DD:EE:FF:00
Civic-address: 11:22:33:44:55:66
Ecs-elin: 11:22:33:44:55:66:77:88:99:AA

```

show lldp statistics

Syntax	show lldp statistics show lldp interfaces <i>IF_NMLPORTS</i> statistics
Parameter	<i>IF_NMLPORTS</i> Specify the ports to display information
Default	There is no default configuration for this command
Mode	Privileged EXEC
Usage	Use “ show lldp statistics ” command to display the LLDP RX/TX statistics.
Example	This example display the LLDP statistics. <pre> Switch# show lldp statistics LLDP Global Statistics: Insertions : 3 Deletions : 0 Drops : 0 </pre>

Command Line Interface

User Guide

Age Outs : 1		TX Frames		RX Frames			RX
TLVs		RX Ageouts					
Port	Total	Total	Discarded	Errors	Discarded		
Unrecognized	Total	Total					
gi1	50	0	0	0	0	0	0
gi2	0	0	0	0	0	0	0
gi3	0	50	0	0	0	0	0
gi4	1	0	0	0	0	0	0
gi5	0	0	0	0	0	0	0
gi6	0	0	0	0	0	0	0
gi7	0	0	0	0	0	0	0
gi8	0	0	0	0	0	0	0
gi9	0	0	0	0	0	0	0
gi10	0	0	0	0	0	0	0
gi11	3377	10129	0	0	0	0	0
gi12	0	0	0	0	0	0	0
gi13	0	0	0	0	0	0	0
gi14	0	0	0	0	0	0	0
gi15	0	0	0	0	0	0	0
gi16	0	0	0	0	0	0	0
gi17	0	0	0	0	0	0	0
gi18	0	0	0	0	0	0	0
gi19	0	0	0	0	0	0	0
gi20	0	0	0	0	0	0	0
gi21	0	0	0	0	0	0	0
gi22	0	0	0	0	0	0	0
gi23	0	0	0	0	0	0	0
gi24	0	0	0	0	0	0	0
gi25	3377	0	0	0	0	0	0
gi26	3377	0	0	0	0	0	0
gi27	0	0	0	0	0	0	0

gi28 0 0 0 0 0 0
0 0 0 0 0 0 0

```
Switch121212(config)# show lldp interfaces gi1 statistics
```

LLDP Port Statistics:		RX Frames		RX	
TLVs	RX Ageouts	Port	Total	Total	Discarded
Unrecognized	Total			Errors	Discarded
		-----+-----+-----+-----+-----+			
0 0		gi1 51 0 0 0 0			

show lldp tlv-overloading

Syntax

show lldp interfaces *IF_NMLPORTS* tlvs-overloading

Parameter

IF_NMLPORTS Specify the ports to display information

Default

There is no default configuration for this command

Mode

Privileged EXEC

Usage

The LLDP PDU is composed by TLVs and selected number TLVs may compose a large PDU that the system can not handle. The maximum PDU length is to take the smaller number of jumbo frame size minus 30 bytes (30 bytes kept for header) or 1488 bytes.

Use “**show lldp tlv-overloading**” command to display the length of LLDP TLVs and if the TLVs overload the PDU length. The TLVs with status marked “overload” would not be transmitted.

Example

This example display the LLDP TLVs overloading status of port gi1.

```
Switch# show lldp interfaces gi1 tlvs-overloading
```

gi1:

TLVs Group	Bytes	Status
Mandatory	21	Transmitted
LLDP-MED Capabilities	9	Transmitted
LLDP-MED Location	53	Transmitted
LLDP-MED Network Policies	20	Transmitted
LLDP-MED POE	9	Transmitted
802.3	30	Transmitted
Optional	38	Transmitted
LLDP-MED Inventory	97	Transmitted
802.1	8	Transmitted

Total: 285 bytes

Example

Left: 1203 bytes

The following example shows the global logging configuration.

```
Switch# show logging
Logging service is enabled
```

TARGET	STATUS	Server (PORT)
FACILITY	LOG LEVEL	
buffered	enabled	
emerg, alert, crit, error, warning, notice		
console	enabled	
emerg, alert, crit, error, warning, notice		

The following table describes the significant fields shown in the example:

Field	Description
TARGET	The destinations where the logging messages are stored.
STATUS	The status of logging destinations.
Server (PORT)	Server address and port number for the remote logging.
FACILITY	The facility of the log messages.
LOG LEVEL	The severity level of the log messages.

The following example shows the log messages stored in the RAM.

```
Switch# show logging buffered
Log messages in buffered
```

NO.	Timestamp	Category	Severity	Message
1	Jan 01 2000 08:14:47	AAA	notice	New console connection for user admin, source asyncACCEPTED
2	Jan 01 2000 08:03:12	AAA	notice	New console connection for user admin, source async ACCEPTED
3	Jan 01 2000 08:01:13	System	notice	System Startup!
4	Jan 01 2000 08:01:13	System	notice	Logging is enabled

The following table describes the significant fields shown in the example:

Field	Description
NO	The number of log entry.
Timestamp	Time when the message was generated.
Category	The category of the message.
Severity	The severity level of the messages.
Message	The message content.

14. Logging

clear logging

Syntax **clear logging (buffered|file)**

Parameter	buffered Buffered logging.
	file File logging.

Default	N/A
----------------	-----

Mode	Privileged EXEC
-------------	-----------------

Usage	To clear the log messages from the internal logging buffer and flash, use the command clear logging in the Privileged EXEC mode.
--------------	---

Example	The following example clear the log messages stored in RAM and Flash.
----------------	---

```
Switch# clear logging buffered
Switch# clear logging file
```

logging

Syntax	logging no logging
---------------	-------------------------------------

Parameter	N/A
------------------	-----

Default	Logging service is enabled.
----------------	-----------------------------

Mode	Global Configuration
-------------	----------------------

Usage	To enable logging service on the switch, use the command logging in the Global Configuration mode. Otherwise, use the no form of the command to disable the logging service on the switch.
--------------	--

The status of global logging server is available from the command **show logging** in the Privileged EXEC mode. When the logging service is enabled, logging on and off at each destination rule can be individually configured by the command **logging console**, **logging buffered**, **logging file**, and **logging host** in the Global Configuration mode. If the logging service is disabled, no messages will be sent to these destinations.

Example	The following example disables and enables the logging service on the switch.
----------------	---

```
Switch(config)# no logging
Switch(config)# logging
```

logging host

Syntax	logging host (<i>ip-addr hostname</i>) [facility <i>facility</i>] [port <i>port</i>] [severity <i>sev</i>] no logging host (<i>ip-addr hostname</i>)
Parameter	
<i>ipv4-addr</i>	IPv4 address of the remote logging server.
<i>hostname</i>	Host name.
facility <i>facility</i>	Specify the facility of the logging messages. It can be one of the following value: local0, local1, local2, local3, local4, local5, local6, and local7. The default value of facility is local7.
port <i>port</i>	Specify the port number of the remote logging server. The valid range is from 0 to 65535, and the default value is 512.
severity <i>sev</i>	Specify the minimum severity of the logging messages. The valid range is from 0 to 7, and the number 0 to 7 represents emerg, alert, critical, error, warning, notice, info, and debug individually. The default value of minimum severity level is 5 (emerg, alert, crit, error, warning, notice).
Default	No remote logging destination is configured.
Mode	Global Configuration
Usage	To define the logging server, use the command logging host to add the remote logging server in the Global Configuration mode. Otherwise, use the command no logging host to remove the remote logging rules. For the host name configuration, logging service would try translating the host name to IP address directly. Add the logging host would be failed on the failure of host name translating.
Example	The following example adds the remote logging rules by IP and Hostname.
	<pre>Switch(config)# logging host 1.2.3.4 Switch(config)# logging host SYSLOG</pre>

logging severity

Syntax	logging (buffered console file) [severity <i>sev</i>] no logging (buffered console file)

Parameter	buffered	Log messages to RAM.
	console	Log messages to console buffer.
	file	Log messages to Flash.
	severity <i>sev</i>	Specify the minimum severity of the logging messages. The valid range is from 0 to 7, and the number 0 to 7 represents emerg, alert, critical, error, warning, notice, info, and debug individually. The default minimum severity of the logging severity configuration is 5 (emerg, alert, crit, error, warning, notice).
Default	Logging to buffered and console is enabled, and the default minimum severity level is 5 (emerg, alert, crit, error, warning, notice).	
Mode	Global Configuration	
Usage	To set the minimum severity for the messages that are logged to RAM, console, or Flash, use the command logging severity in the Global Configuration mode. Use the no form of the command to remove the mechanism of logging to RAM, console, or Flash individually.	
Example	The following example sets the minimum severity level of logging to RAM and Flash as debugging.	
	<pre>Switch(config)# logging buffered 7 Switch(config)# logging flash 7</pre>	

show logging

Syntax	show logging [buffered file]
Parameter	
	buffered Buffered logging.
	file File logging.
Default	N/A
Mode	Previleged EXEC
Usage	To display the global logging configuration, and the logging messages stored in the RAM and Flash, use the command show logging in the Privileged EXEC mode.
Example	The following example shows the global logging configuration.
	<pre>Switch# show logging Logging service is enabled</pre>

Command Line Interface

User Guide

TARGET	STATUS	Server (PORT)	
FACILITY	LOG LEVEL		
buffered	enabled		
emerg, alert, crit, error, warning, notice			
console	enabled		
emerg, alert, crit, error, warning, notice			

The following table describes the significant fields shown in the example:

Field	Description
TARGET	The destinations where the logging messages are stored.
STATUS	The status of logging destinations.
Server (PORT)	Server address and port number for the remote logging.
FACILITY	The facility of the log messages.
LOG LEVEL	The severity level of the log messages.

The following example shows the log messages stored in the RAM.

```
Switch# show logging buffered

Log messages in buffered

NO. | Timestamp | Category | Severity | Message
-----+-----+-----+-----+
-----+
1 | Jan 01 2000 08:14:47 | AAA | notice | New
console connection for user admin, source async ACCEPTED
2 | Jan 01 2000 08:03:12 | AAA | notice | New
console connection for user admin, source async ACCEPTED
3 | Jan 01 2000 08:01:13 | System | notice | System
Startup!
4 | Jan 01 2000 08:01:13 | System | notice | Logging
is enabled
```

The following table describes the significant fields shown in the example:

Field	Description
NO	The number of log entry.

Timestamp	Time when the message was generated.
Category	The category of the message.
Severity	The severity level of the messages.
Message	The message content.

15. MAC Address Table

clear mac address-table

Syntax	clear mac address-table dynamic [interfaces <i>IF_PORTS vlan vlan-id</i>]
Parameter	interfaces <i>IF_PORTS</i> Interface status and configuration. vlan <i>vlan-id</i> VLAN configuration.
Default	N/A
Mode	Privileged EXEC
Usage	To clear the dynamic (learned) MAC entries from the MAC address table, the specific interface, or the specific VLAN, use the command clear mac address-table in the Privileged EXEC mode.
Example	The following example clears the learned MAC addresses on the interface gi1. Switch# <u>clear mac address-table dynamic interfaces gi1</u>
mac address-table aging-time	
Syntax	mac address-table aging-time <i>seconds</i>
Parameter	<i><10-630></i> Aging-time range in seconds indicating how long an entry remain in mac address table
Default	The default aging time is 300 seconds.
Mode	Global Configuration
Usage	To set the aging time of the MAC address table, use the command mac

address-table aging-time in the Global Configuration mode.

Example

The following example set the aging time to 500 seconds.

```
Switch(config) # mac address-table aging-time 500
```

mac address-table static

Syntax

```
mac address-table static mac-addr vlan vlan-id interfaces IF_PORTS  
mac address-table static mac-addr vlan vlan-id drop  
no mac address-table static mac-addr vlan vlan-id
```

Parameter

<i>mac-addr</i>	MAC address xx:xx:xx:xx:xx:xx.
<i>vlan</i> <i>vlan-id</i>	VLAN ID (e.g. 100).
Interface	Interface status and configuration.
<i>IF_PORTS</i>	
drop	Drop packets with the specified source or destination unicast mac address
.	.

Default

No static addresses are configured

Mode

Global Configuration

Usage

To add a static address to the MAC address table, use the command **mac address-table static** in the Global Configuration mode. For the unicast MAC address filtering, use the command **mac address-table static** with parameter **drop** to drop the packets with the specified source or destination unicast MAC address. To delete the static entry from the MAC address table, use the **no** form of the command.

Example

The following example adds a static address into MAC address table.

```
Switch# mac address-table static 00:11:22:33:44:55 vlan 1  
interfaces fa5
```

The following example adds a rule of unicast address filtering into MAC address table.

```
Switch# mac address-table static 00:11:22:33:44:55 vlan 1 drop
```

show mac address-table

Syntax	show mac address-table [dynamic static] [interface <i>IF_PORTS</i>] [vlan <i>vlan-id</i>] show mac address-table [<i>mac-addr</i>] [vlan <i>vlan-id</i>]
---------------	---

Parameter	dynamic Dynamic entries static Static entries Interface Interface status and configuration. <i>IF_PORTS</i> vlan VLAN configuration. <i>A:B:C:D:E:F</i> MAC address xx:xx:xx:xx:xx:xx
------------------	--

Default	N/A
----------------	-----

Mode	Privileged EXEC
-------------	-----------------

Usage	To show the entry in the MAC address table, use the command show mac address-table in the Privileged EXEC mode.
--------------	--

Example	The following example displays the entire MAC address table.
----------------	--

```
Switch# show mac address-table
  VID |      MAC Address |      Type |      Ports
-----+-----+-----+-----+
  -   |
    1 | DE:AD:BE:EF:01:02 | Management | CPU
    1 | 00:01:02:03:04:05 | Static   | All
   100 | 00:11:22:33:44:55 | Static   | g1
    1 | 1C:E6:C7:8F:10:02 | Dynamic  | fa3
    1 | AA:BB:CC:DD:EE:FF | Static   | All
    1 | DE:AD:BE:EF:01:0C | Dynamic  | g1

Total number of entries: 6
Switch#
```

The following example displays the static MAC address configuration for the interface fa1.

```
Switch# show mac address-table static interfaces fa1
  VID |      MAC Address |      Type |      Ports
-----+-----+-----+-----+
  -   |
    1 | 00:01:02:03:04:05 | Filtering | All
    1 | AA:BB:CC:DD:EE:FF | Filtering | All

Total number of entries: 2
Switch#
```

The following example displays address table entries containing the specified MAC address.

```
Switch# show mac address-table 00:11:22:33:44:55 vlan 100
  VID |      MAC Address |      Type |      Ports
-----+-----+-----+-----+
  100 | 00:11:22:33:44:55 |  Static | gi1

Total number of entries: 1
```

show mac address-table counters

Syntax **show mac address-table counters**

Parameter N/A

Default N/A

Mode Privileged EXEC

Usage To display the total entries in the MAC address table, use the command **show mac address-table counters** in the Privileged EXEC mode.

Example The following example display numbers of addresses in the address table.

```
Switch# show mac address-table counters
Total number of entries: 5
```

show mac address-table aging-time

Syntax **show mac address-table aging-time**

Parameter N/A

Default N/A

Mode Privileged EXEC

Usage	To show MAC address aging time, use the command show mac address-table aging-time in the Privileged EXEC mode.
--------------	---

Example	The following example displays aging time for the MAC address table.
----------------	--

```
Switch# show mac address-table aging-time
Mac Address Table aging time: 300 sec
```

16. MAC VLAN

vlan mac-vlan group (Global)

Syntax	vlan mac-vlan group <1- 2147483647> mac-address mask <9-48> no vlan mac-vlan group mac-address mask <9-48>
---------------	---

<Parameter	<1-2147483647> Specify the group ID Mac-address MAC address mask. <9-48> 9 to 48 bits. 48 bits means full match.
----------------------	---

Default	No MAC Groups are configured.
----------------	-------------------------------

Mode	Global Configuration
-------------	----------------------

Usage	Use the “ vlan mac-vlan group ” command to create MAC address group. Use the no form of this command to delete specify group.
--------------	--

Example	The following example shows how to create a MAC group with group ID 3.
----------------	--

```
Switch(config)# vlan mac-vlan group 333 22:33:44:55:66:77 mask 48
```

vlan mac-vlan group (Interface)

Syntax	vlan mac-vlan group <1- 2147483647> vlan <1-4094> no vlan mac-vlan [group <1- 2147483647>]
---------------	---

Parameter	<1-2147483647> Specify group ID to map.
------------------	--

vlan	Specify mapping VLAN ID
-------------	-------------------------

Default	No mappings are configured.
Mode	Interface Configuration
Usage	<p>Use the “vlan mac-vlan group” to create mapping of group and VLAN ID of an interface.</p> <p>Use the no form of this command to delete mapping.</p>
Example	<p>The following example shows how to mapping group id 333 to VLAN 100 on interface fa1.</p> <pre>Switch(config)# Interface g1 Switch(config-if) # vlan mac-vlan group 333 VLAN 100</pre>

show vlan mac-vlan groups

Syntax	show vlan mac-vlan groups
Default	N/A
Mode	Privileged EXEC
Usage	<p>Use the show vlan mac-vlan groups command to display mac groups configuration</p>
Example	<p>This following example shows how to display mac group.</p> <pre>Switch# show vlan mac-vlan groups Mac Address Mask Group Id ----- 22:33:44:55:66:77 48 222 44:55:66:77:88:99 48 333 88:99:00:aa:bb:cc 40 444 88:99:00:ab:bb:10 48 111</pre>

show vlan mac-vlan interfaces

Syntax	show vlan mac-vlan [interfaces IF_PORTS]	
Parameter	IF_PORTS	(Optional) Specify interfaces mac vlan to display. Display all ports if not specify.
Default	N/A	
Mode	Privileged EXEC	
Usage	Use the show vlan mac-vlan interface command in EXEC mode to display the mac-vlan interfaces setting	
Example	<p>The following example shows how to display the MAC-Based VLAN interfaces setting</p> <pre>Switch# show vlan mac-vlan interfaces g1 Port fa1 : Mac based VLANs: Group ID Vlan ID ----- ----- 333 444 444 1</pre>	

17. Management ACL

management access-list

Syntax	management access-list NAME no management access-list NAME	
Parameter	NAME	Specifies the access list name
Default	No management ACL is configured.	
Mode	Global Configuration	

Usage	Use the management access-list command to create a management access list and to enter management access-list configuration mode. The name of ACL must be unique that cannot have same name with other management ACL. Use the no form of this command to delete
--------------	---

Example	The following example shows how to add a management ACL with name “test”
----------------	--

```
Switch(config)# management access-list test
```

management access-class

Syntax	management access-class NAME no management access-class
---------------	--

Parameter	NAME	Specifies the access list name
------------------	-------------	--------------------------------

Default	Default is no management ACL restrictions
----------------	---

Mode	Global Configuration
-------------	----------------------

Usage	Use the management access-class command to activate a management ACL. Use the no form of this command to delete
--------------	--

Example	The following example shows how to add a management ACL with name “test”
----------------	--

```
Switch(config)# management access-list test
```

deny

Syntax	[sequence <1-65535>] deny interfaces IF_PORTS service (all http https snmp ssh telnet) [sequence <1-65535>] deny ip A.B.C.D/A.B.C.D interfaces IF_PORTS service (all http https snmp ssh telnet) [sequence <1-65535>] deny ipv6 X:X::X:X/<0-128> interfaces IF_PORTS service (all http https snmp ssh telnet)
---------------	--

Parameter	<u><1-65535></u> <u>interfaces IF_PORTS</u> <u>ip A.B.C.D/A.B.C.D</u> <u>ipv6 X:X::X:X/<0-128></u> <u>(all http https snmp ssh telnet)</u>	Value of sequence ,that is from 1 to 65535 Interface status and configuration. Global IP configuration commands. IPV6 configuration. Specify the type of services.
Default	No rules are configured.	
Mode	Management Access-List Configuration	
Usage	Use the deny command to add deny rules that drop those packets hit the rule.	
Example	The following example shows how to add a deny rule to drop all types of services packets that source ip is 1.1.1.1 from interface g1. <pre>Switch(config)# management access-list test Switch(config-macl)# sequence 1 deny ip 1.1.1.1/255.255.255.255 interfaces g1 service all</pre>	

permit

Syntax	[sequence <1-65535>] permit interfaces IF_PORTS service (all http https snmp ssh telnet) [sequence <1-65535>] permit ip A.B.C.D/A.B.C.D interfaces IF_PORTS service (all http https snmp ssh telnet) [sequence <1-65535>] permit ipv6 X:X::X:X/<0-128> interfaces IF_PORTS service (all http https snmp ssh telnet)
Parameter	<u><1-65535></u> <u>interfaces IF_PORTS</u> <u>ip A.B.C.D/A.B.C.D</u> <u>ipv6 X:X::X:X/<0-128></u> <u>(all http https snmp ssh telnet)</u>
Default	No rules are configured.
Mode	Management Access-List Configuration
Usage	Use the permit command to add permit rules that bypass those packets hit the rule.

Example	The following example shows how to add a permit rule to bypass http service packets that source ip is 2.2.2.2 from interface gi1.
----------------	---

```
Switch(config)# management access-list test
Switch(config-macl)# sequence 2 permit ip
2.2.2.2/255.255.255.255 interfaces gi1 service http
```

no sequence

Syntax	no sequence <1-65535>
---------------	------------------------------------

Parameter	<1-65535>	Specify sequence index of ACL entry to delete.
------------------	------------------------	--

Default	No rules are configured.
----------------	--------------------------

Mode	Management Access-List Configuration
-------------	--------------------------------------

Usage	Use the no sequence command to delete an entry in management ACL.
--------------	--

Example	The following example shows how to delete an entry.
----------------	---

```
Switch(config)# management access-list test
Switch(config-macl)# sequence 10 deny interfaces gi1 service
all
Switch(config-macl)# no sequence 10
```

show management access-class

Syntax	show management access-class
---------------	-------------------------------------

Parameter	
------------------	--

Default	No default is defined
----------------	-----------------------

Mode	Privileged EXEC
-------------	-----------------

Usage	Use the show management access-class command to show the active management access-list.
--------------	--

Example	The example shows how to show management access-class
----------------	---

Switch# **show management access-class**
Management access-class is enabled, using access-list test

show management access-list

Syntax	show management access-list [NAME]		
Parameter	<table border="1"> <tr> <td>NAME</td><td>Specifies the access list name.</td></tr> </table>	NAME	Specifies the access list name.
NAME	Specifies the access list name.		
Default	No default is defined		
Mode	Privileged EXEC		
Usage	Use the show management access-list command to show management ACL.		
Example	<p>The example shows how to show management access-list</p> <pre>Switch# show management access-list 1 management access-list is created test ---- sequence 1 deny ip 1.1.1.1/255.255.255.255 interfaces gi1 service all ! (Note: all other access implicitly denied)</pre>		

18. Mirror

mirror session destination interface

Syntax	mirror session <1-4> destination interface <i>IF_NMLPORT</i> [allow-ingress] no mirror session <1-4> destination interface <i>IF_NMLPORT</i> no mirror session (<1-4> all)						
Parameter	<table border="1"> <tr> <td><1-4></td><td>Specify the mirror session to configure</td></tr> <tr> <td><i>IF_NMLPORT</i></td><td>Specify the SPAN destination. A destination must be a physical port</td></tr> <tr> <td>allow-ingress</td><td>Enable ingress traffic forwarding.</td></tr> </table>	<1-4>	Specify the mirror session to configure	<i>IF_NMLPORT</i>	Specify the SPAN destination. A destination must be a physical port	allow-ingress	Enable ingress traffic forwarding.
<1-4>	Specify the mirror session to configure						
<i>IF_NMLPORT</i>	Specify the SPAN destination. A destination must be a physical port						
allow-ingress	Enable ingress traffic forwarding.						
Default	No monitor sessions are configured.						
Mode	Global Configuration						

Usage

Use the “**mirror session destination interface**” command to start a destination interface of a port mirror session.

Use the **no** form of this command to stop a destination interface of a port mirroring session.

Use the “**no mirror session**” command to disable all mirror sessions or specific mirror session.

Example

The following example shows how to create a local session 1 to monitor both sent and received traffic on source port fa1.

```
Switch(config)# mirror session 1 destination interface gi1
Switch# show mirror session 1
Session 1 Configuration
Source RX Port      : fa2-5
Source TX Port      : fa2-5
Destination port    : fa1
Ingress State: disabled
```

mirror session source interface

Syntax

mirror session <1-4> source interfaces IF_PORTS (both | rx | tx)
no mirror session <1-4> source interfaces IF_PORTS (both | rx | tx)
no mirror session (<1-4> | all)

<Parameter

<1-4>	Specify the mirror session to configure
IF_PORTS	Specify the source interface, Valid interfaces include physical ports and port channels.
both	Both
rx	RX only
tx	TX only

Default

No monitor sessions are configured.

Mode

Global Configuration

Usage

Use the “**mirror session source interface**” command to start a port mirror session.

Use the **no** form of this command to stop a port mirroring session.

Use the “**no mirror session**” command to disable all mirror sessions or specific mirror session.

Example

The following example shows how to create a local SPAN session 1 to monitor both sent and received traffic on source port fa1.

```
Switch(config)# mirror session 1 source interface gi2-5 both
Switch(config)# mirror session 1 destination interface gi1
Switch(config)# show mirror session 1
Session 1 Configuration
Source RX Port : gi2-5
Source TX Port : gi2-5
Destination port : gi1
Ingress State: disabled
```

show mirror

Syntax

show mirror [session <1-4>]

Parameter

<1-4>	Session ID (e.g. 1-4)configuraton
--------------------	-----------------------------------

Default

N/A

Mode

Privileged EXEC

Usage

Use the **show mirror** command to display mirror session configuration

Example

This following example shows how to display mirror session configuration

```
Switch(config)# show mirror
Session 1 Configuration
Source RX Port : gi2-5
Source TX Port : gi2-5
Destination port : gi1
Ingress State: disabled

Session 2 Configuration
Mirrored source : Not Config
Destination port : Not Config

Session 3 Configuration
Mirrored source : Not Config
Destination port : Not Config

Session 4 Configuration
Mirrored source : Not Config
Destination port : Not Config
```

19. MLD Snooping

ipv6 mld snooping

Syntax	ipv6 mld snooping no ipv6 mld snooping
Parameter	None
Default	Default is disabled
Mode	Global Configuration
Usage	<p>Use the ipv6 mld snooping command to enable MLD snooping function. Use the no form of this command to disable. Disable will clear all ipv6 mld snooping dynamic group and dynamic router port, and make the static ipv6 mld group invalid. No more dynamic group and router port by mld message will be learned.</p> <p>You can verify settings by the show ipv6 mld snooping command.</p>
Example	The following example specifies that set ipv6 mld snooping test. Switch(config)# ipv6 mld snooping

ipv6 mld snooping report-suppression

Syntax	ipv6 mld snooping report-suppression no ipv6 mld snooping report-suppression
Parameter	none
Default	Default is enabled
Mode	Global Configuration
Usage	<p>Use the ipv6 mld snooping report-suppression command to enable MLD snooping report-suppression function. Use the no form of this command to disable. Disable report-supression will forward all received reports to the vlan router ports.</p> <p>You can verify settings by the show ipv6 mld snooping command</p>

Example	The following example specifies that disable ipv6 mld snooping report-suppression test. Switch(config)# no ipv6 mld snooping report-suppression
----------------	---

ipv6 mld snooping version

Syntax	ipv6 mld snooping version (1 2)
Parameter	(1 2) Ipv6 mld snooping running version 1 or 2
Default	Default is version 1
Mode	Global Configuration
Usage	Use the ipv6 mld snooping version command to change MLD support version. Version 2 packet won't be processed if choose version 1. You can verify settings by the show ip igmp snooping command.
Example	The following example specifies that set ipv6 mld snooping version 2. Switch(config)# ipv6 mld snooping version 2

ipv6 mld snooping unknown-multicast action

Syntax	ipv6 mld snooping unknown-multicast action (drop flood router-port) no ipv6 mld snooping unknown-multicast action						
Parameter	<table border="0"> <tr> <td>drop</td> <td>Drop the packets</td> </tr> <tr> <td>flood</td> <td>Flood the packets</td> </tr> <tr> <td>router- port</td> <td>Forward to router ports</td> </tr> </table>	drop	Drop the packets	flood	Flood the packets	router- port	Forward to router ports
drop	Drop the packets						
flood	Flood the packets						
router- port	Forward to router ports						
Default	Default is flood.						
Mode	Global Configuration						
Usage	When igmp and mld snooping disabled, it can't set action router-port. When disable igmp snooping & mld snooping, it set unknown multicast action flood. When action is router-port to flood or drop, it will delete the unknown multicast group entry.						
	Use the ipv6 mld snooping unknown-multicast action command to change						

action.

Use the **no** form of this command to restore to default.

You can verify settings by the **show ipv6 mld snooping** command.

Example

The following example specifies that set ipv6 mld unknown multicast action router-port test.

Switch(config)# **ipv6 mld snooping unknown-multicast action router-port**

ipv6 mld snooping vlan

Syntax

ipv6 mld snooping vlan VLAN-LIST

no ipv6 mld snooping vlan VLAN-LIST

Parameter

VLAN-LIST VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094

Default

Default is disabled for all VLANs

Mode

Global Configuration

Usage

Disable will clear all ipv6 mld snooping dynamic group and dynamic router port and make all static ip igmp group invalid of this vlan. Will not learn dynamic group and router port by igmp message any more.

Use the **ipv6 mld snooping vlan** command to enable MLD on VLAN.

Use the **no** form of this command to disable

You can verify settings by the **show ipv6 mld snooping vlan** command.

Example

The following example specifies that set ipv6 mld snooping vlan test.

Switch(config)# **ipv6 mld snooping vlan 1**

ipv6 mld snooping vlan parameters

Syntax

ipv6 mld snooping vlan <VLAN-LIST> last-member-query-count <1-7>

no ipv6 mld snooping vlan <VLAN-LIST> last-member-query-count

ipv6 mld snooping vlan <VLAN-LIST> last-member-query-interval <1-60>

no ipv6 mld snooping vlan <VLAN-LIST> last-member-query-interval

[no] ipv6 mld snooping vlan <VLAN-LIST> router learn pim-dvmrp

[no] ipv6 mld snooping vlan <VLAN-LIST> fastleave

ipv6 mld snooping vlan <VLAN-LIST> query-interval <30-18000>

```

no ipv6 mld snooping vlan <VLAN-LIST> query-interval
ipv6 mld snooping vlan <VLAN-LIST> response-time <5-20>
no ipv6 mld snooping vlan <VLAN-LIST> response-time
ipv6 mld snooping vlan <VLAN-LIST> robustness-variable <1-7>
no ipv6 mld snooping vlan <VLAN-LIST> robustness-variable

```

Parameter	<table border="0"> <tr> <td>VLAN-LIST</td><td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094</td></tr> <tr> <td>last-member-query-count <1-7></td><td>Last Member Query Count</td></tr> <tr> <td colspan="2"><hr/></td></tr> <tr> <td colspan="2">last-member-query-interval <1-60> Last Member Query Interval</td></tr> <tr> <td colspan="2"><hr/></td></tr> <tr> <td>query-interval <30-18000></td><td>Query Interval</td></tr> <tr> <td>response-time <5-20></td><td>Response time</td></tr> <tr> <td>robustness-variable <1-7></td><td>Robustness Variable</td></tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094	last-member-query-count <1-7>	Last Member Query Count	<hr/>		last-member-query-interval <1-60> Last Member Query Interval		<hr/>		query-interval <30-18000>	Query Interval	response-time <5-20>	Response time	robustness-variable <1-7>	Robustness Variable
VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094																
last-member-query-count <1-7>	Last Member Query Count																
<hr/>																	
last-member-query-interval <1-60> Last Member Query Interval																	
<hr/>																	
query-interval <30-18000>	Query Interval																
response-time <5-20>	Response time																
robustness-variable <1-7>	Robustness Variable																
Default	<pre> no ipv6 mld snooping vlan 1-4094 last-member-query-count no ipv6 mld snooping vlan 1-4094 last-member-query-interval ipv6 mld snooping vlan 1-4094 router learn pim-dvmrp no ipv6 mld snooping vlan 1-4094 fastleave no ipv6 mld snooping vlan 1-4094 query-interval no ipv6 mld snooping vlan 1-4094 response-time no ipv6 mld snooping vlan 1-4094 robustness-variable </pre>																
Mode	Global Configuration																
Usage	<p>‘no ipv6 mld snooping vlan 1 (last-member-query-count last-member-query-interval query-interval response-time robustness-variable)’ will set the vlan parameters to default.</p> <p>The cli setting will change the ipv6 mld vlan parameters admin settings.</p> <p>The configure can use ‘show ipv6 mld snooping vlan 1’.</p>																
Example	<p>The following example specifies that set ipv6 mld snooping vlan parameters test.</p> <pre> Switch(config)# ipv6 mld snooping vlan 1 fastleave Switch(config)# ipv6 mld snooping vlan 1 last-member-query-count 5 Switch(config)# ipv6 mld snooping vlan 1 last-member-query-interval 3 Switch(config)# ipv6 mld snooping vlan 1 query-interval 100 Switch(config)# ipv6 mld snooping vlan 1 response-time 12 Switch(config)# ipv6 mld snooping vlan 1 robustness-variable 4 Switch# show ipv6 mld snooping vlan 1 MLD Snooping is globaly enabled MLD Snooping VLAN 1 admin : disabled MLD Snooping oper mode : disabled </pre>																

MLD Snooping robustness: admin 4 oper 2
MLD Snooping query interval: admin 100 sec oper 125 sec
MLD Snooping query max response : admin 12 sec oper 10 sec
MLD Snooping last member query counter: admin 5 oper 2
MLD Snooping last member query interval: admin 3 sec oper 1 sec
MLD Snooping last immediate leave: enabled
MLD Snooping automatic learning of multicast router ports: enabled

ipv6 mld snooping vlan last-member-query-count

Syntax	ipv6 mld snooping vlan <VLAN-LIST> last-member-query-count <1-7> no ipv6 mld snooping vlan <VLAN-LIST> last-member-query-count				
Parameter	<table border="0"> <tr> <td>VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094</td> </tr> <tr> <td>last-member-query-count <1-7></td> <td>Last Member Query Count</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094	last-member-query-count <1-7>	Last Member Query Count
VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094				
last-member-query-count <1-7>	Last Member Query Count				
Default	Default is 2				
Mode	Global Configuration				
Usage	<p>Use the ipv6 mld snooping vlan last-member-query-count command to change how many query packets will send.</p> <p>Use the no form of this command to restore to default.</p> <p>You can verify settings by the show ipv6 mld snooping vlan command</p>				
Example	<p>The following example specifies that set ipv6 mld snooping vlan last-member-query-count test.</p> <pre>Switch(config)# ipv6 mld snooping vlan 1 last-member-query-count 5</pre>				

ipv6 mld snooping vlan last-member-query-interval

Syntax	ipv6 mld snooping vlan <VLAN-LIST> last-member-query-interval <1-60> no ipv6 mld snooping vlan <VLAN-LIST> last-member-query-interval				
Parameter	<table border="0"> <tr> <td>VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094</td> </tr> <tr> <td>last-member-query-interval <1-60></td> <td>Last Member Query Interval</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094	last-member-query-interval <1-60>	Last Member Query Interval
VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094				
last-member-query-interval <1-60>	Last Member Query Interval				

Default	Default is 1
Mode	Global Configuration
Usage	<p>Use the ipv6 mld snooping vlan last-member-query-interval command to set interval between each query packet.</p> <p>Use the no form of this command to restore to default</p> <p>You can verify settings by the show ipv6 mld snooping vlan command</p>
Example	<p>The following example specifies that set ipv6 mld snooping vlan last-member-query-interval test.</p> <pre>Switch(config)# ipv6 mld snooping vlan 1 last-member-query-interval 3</pre>

ipv6 mld snooping vlan query-interval

Syntax	ipv6 mld snooping vlan <VLAN-LIST> query-interval <30-18000> no ipv6 mld snooping vlan <VLAN-LIST> query-interval				
Parameter	<table border="0"> <tr> <td>VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094</td> </tr> <tr> <td>query-interval <30-18000></td> <td>Query Interval</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094	query-interval <30-18000>	Query Interval
VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094				
query-interval <30-18000>	Query Interval				
Default	Default is 125				
Mode	Global Configuration				
Usage	<p>Use the ipv6 mld snooping vlan query-interval command to set interval between each query.</p> <p>Use the no form of this command to restore to default</p> <p>You can verify settings by the show ipv6 mld snooping vlan command</p>				
Example	<p>The following example specifies that set ipv6 mld snooping vlan query-interval test.</p> <pre>Switch(config)# ipv6 mld snooping vlan 1 query-interval 100</pre>				

ipv6 mld snooping vlan response-time

Syntax	ipv6 mld snooping vlan <VLAN-LIST> response-time <5-20> no ipv6 mld snooping vlan <VLAN-LIST> response-time				
Parameter	<table border="0"> <tr> <td>VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.</td> </tr> <tr> <td>response-time <5-20></td> <td>Response time</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.	response-time <5-20>	Response time
VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.				
response-time <5-20>	Response time				
Default	Default is 10				
Mode	Global Configuration				
Usage	<p>Use the ipv6 mld snooping vlan response-time command to set response time.</p> <p>Use the no form of this command to restore to default.</p> <p>You can verify settings by the show ipv6 mld snooping vlan command</p>				
Example	<p>The following example specifies that set ipv6 mld snooping vlan response-time test.</p> <pre>Switch(config)# ipv6 mld snooping vlan 1 response-time 12</pre>				

ipv6 mld snooping vlan robustness-variable

Syntax	ipv6 mld snooping vlan <VLAN-LIST> robustness-variable <1-7> no ipv6 mld snooping vlan <VLAN-LIST> robustness-variable				
Parameter	<table border="0"> <tr> <td>VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.</td> </tr> <tr> <td>robustness-variable <1-7></td> <td>Robustness Variable</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.	robustness-variable <1-7>	Robustness Variable
VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.				
robustness-variable <1-7>	Robustness Variable				
Default	Default is 2				
Mode	Global Configuration				
Usage	<p>Use the ipv6 mld snooping vlan robustness-variable command to times to retry.</p> <p>Use the no form of this command to restore to default</p> <p>You can verify settings by the show ipv6 mld snooping vlan command</p>				

Example	The following example specifies that set ipv6 mld snooping vlan parameters test. Switch(config)# ip igmp snooping vlan 1 robustness-variable 2
----------------	--

ipv6 mld snooping vlan router

Syntax	ipv6 mld snooping vlan VLAN-LIST router learn pim-dvmrp no ipv6 mld snooping vlan VLAN-LIST router learn pim-dvmrp
Parameter	VLAN-LIST VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.
Default	Default is enabled
Mode	Global Configuration
Usage	Use the ipv6 mld snooping vlan router command to enable learning router port by routing protocol packets such as PIM/PIMv2, DVMRP, MOSPF. Use the no form of this command to disable. You can verify settings by the show ipv6 mld snooping vlan command
Example	The following example specifies that set ipv6 mld snooping vlan router learn pim-dvmrp test. Switch(config)# ipv6 mld snooping vlan 99 router learn pim-dvmrp

ipv6 mld snooping vlan static-port

Syntax	ipv6 mld snooping vlan <VLAN-LIST> static-port IF_PORTS no ipv6 mld snooping vlan <VLAN-LIST> static-port IF_PORTS
Parameter	VLAN-LIST VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094. IF_PORTS specifies a port list to set or remove
Default	No static port by default
Mode	Global Configuration

Usage	Use the ipv6 mld snooping vlan static-port command to add static forwarding port, all known vlan 1 ipv6 group will add the static ports. Use the no form of this command to delete static port. You can verify settings by the show ipv6 mld snooping forward-all command.
Example	The following example specifies that set ipv6 mld snooping static port test. Switch(config)# ipv6 mld snooping vlan 1 static -port gi1-2

ipv6 mld snooping vlan forbidden-router-port

Syntax	ipv6 mld snooping vlan <VLAN-LIST> forbidden-router-port IF_PORTS no ipv6 mld snooping vlan <VLAN-LIST> forbidden-router-port IF_PORTS				
Parameter	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.</td> </tr> <tr> <td>IF_PORTS</td> <td>specifies a port list to set or remove</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.	IF_PORTS	specifies a port list to set or remove
VLAN-LIST	VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.				
IF_PORTS	specifies a port list to set or remove				
Default	No forbidden router ports by default				
Mode	Global Configuration				
Usage	Use the ipv6 mld snooping vlan forbidden-router-port command to add static forbidden router port. This will also remove port from static router port. The forbidden router port will not forward received query packet .Use the no form of this command to delete forbidden router port. You can verify settings by the show ipv6 mld snooping router command.				
Example	The following example specifies that set ipv6 mld snooping forbidden test. Switch(config)# ipv6 mld snooping vlan 1 forbidden-router-port gi2				

ipv6 mld snooping vlan forbidden-router-port

Syntax	ipv6 mld snooping vlan <VLAN-LIST> forbidden-router-port IF_PORTS no ipv6 mld snooping vlan <VLAN-LIST> forbidden-router-port IF_PORTS				
Parameter	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.</td> </tr> <tr> <td>IF_PORTS</td> <td>specifies a port list to set or remove</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.	IF_PORTS	specifies a port list to set or remove
VLAN-LIST	VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.				
IF_PORTS	specifies a port list to set or remove				
Default	No forbidden router ports by default				

Mode	Global Configuration
Usage	<p>Use the ipv6 mld snooping vlan forbidden-router-port command to add static forbidden router port. This will also remove port from static router port. The forbidden router port will not forward received query packet .Use the no form of this command to delete forbidden router port. You can verify settings by the show ipv6 mld snooping router command.</p>
Example	<p>The following example specifies that set ipv6 mld snooping forbidden test.</p> <pre>Switch(config)# ipv6 mld snooping vlan 1 forbidden-router-port gi2</pre>

ipv6 mld snooping vlan static router port

Syntax	ipv6 mld snooping vlan <VLAN-LIST> static-router-port IF_PORTS no ipv6 mld snooping vlan <VLAN-LIST> static-router-port IF_PORTS				
Parameter	<table border="1"> <tr> <td>VLAN-LIST</td> <td>VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.</td> </tr> <tr> <td>IF_PORTS</td> <td>specifies a port list to set or remove</td> </tr> </table>	VLAN-LIST	VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.	IF_PORTS	specifies a port list to set or remove
VLAN-LIST	VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.				
IF_PORTS	specifies a port list to set or remove				
Default	None static router ports by default				
Mode	Global Configuration				
Usage	<p>Use the ipv6 mld snooping vlan static-router-port command to add static router port. All query packets will forward to this port. Use the no form of this command to delete static router port. You can verify settings by the show ipv6 mld snooping router command..</p>				
Example	<p>The following example specifies that set ipv6 mld snooping static test.</p> <pre>Switch(config)# ipv6 mld snooping vlan 1 static-router-port gi1-2</pre>				

ipv6 mld snooping vlan static-group

Syntax	ipv6 mld snooping vlan <VLAN-LIST> static-group [<ipv6-addr>] interfaces IF_PORTS no ipv6 mld snooping vlan <VLAN-LIST> static-group <ipv6-addr> interfaces IF_PORTS
---------------	---

Parameter	VLAN-LIST	VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.
	X:X::X:X	IPv6 multicast address
	IF_PORTS	specifies port list to set or remove
Default	No static group by default	
Mode	Global Configuration	
Usage	<p>Use the ipv6 mld snooping vlan static-group command to add a static group. The static group will not learn other dynamic ports. If the dynamic group exists, then the static group will overlap the dynamic group. The static group set to valid unless igmp snooping global and vlan enable.</p> <p>Use the no form of this command to delete a port in static group. If remove the last member of static group, the static group will be delete.</p> <p>You can verify settings by the show ipv6 mld snooping group command.</p>	
Example	<p>The following example specifies that set ipv6 mld snooping static group test.</p> <pre>Switch(config)# ipv6 mld snooping vlan 1 static-group ff13::1 interfaces gi1-2</pre>	

ipv6 mld snooping vlan group

Syntax	no ipv6 mld snooping vlan <VLAN-LIST> group <ipv6-addr>	
Parameter	VLAN-LIST	VLAN List (e.g. 3,6-8): The rangeof VLAN ID is 1 to 4094.
	X:X::X:X	IPv6 multicast address
Default	None	
Mode	Global Configuration	
Usage	<p>Use the no ipv6 mld snooping vlan group command to delete a group which could be static or dynamic.</p> <p>You can verify settings by the show ipv6 mld snooping group command.</p>	

Example	The following example specifies that set ip igmp snooping static group test. Switch(config)# no ipv6 igmp snooping vlan 1 group ff13::1
----------------	---

profile range

Syntax	profile range ipv6 <ipv6-addr> [ipv6-addr] action (permit deny)
---------------	--

Parameter	<ipv6-addr>	IPv6 information
	[ipv6-addr]	End ipv6 multicast address
	(permit deny)	Permit: Action permit deny: Action deny

Default	None
----------------	------

Mode	mld profile configuration mode
-------------	--------------------------------

Usage	Use the profile command to generate MLD profile. You can verify settings by the show ipv6 mld profile command
--------------	--

Example	The following example specifies that set ipv6 mld profile test. Switch(config)# ipv6 mld profile 1 Switch(config-mld-profile)# profile range ipv6 ff13::1 ff13::10 action permit
----------------	--

ipv6 mld profile

Syntax	ipv6 mld profile <1-128> no ipv6 mld profile <1-128>
---------------	---

Parameter	<1-128>	specifies profile ID
------------------	---------	----------------------

Default	No profie exist by default
----------------	----------------------------

Mode	Global Configuration
-------------	----------------------

Usage	Use the ipv6 mld profile command to enter profile configuration Use the no form of this command to delete profile You can verify settings by the show ipv6 mld profile command
--------------	---

Example	The following example specifies that set ipv6 mld profile test. Switch(config)# ipv6 mld profile 1 Switch(config-mld-profile)# profile range ipv6 ff13::1 ff13::10 action permit
----------------	--

ipv6 mld filter

Syntax	ipv6 mld filter <1-128> no ipv6 mld filter				
Parameter	<table border="0"> <tr> <td><1-128></td> <td>IPv6 filter profile index</td> </tr> <tr> <td>[interfaces IF_PORTS]</td> <td>Specifies interfaces to display</td> </tr> </table>	<1-128>	IPv6 filter profile index	[interfaces IF_PORTS]	Specifies interfaces to display
<1-128>	IPv6 filter profile index				
[interfaces IF_PORTS]	Specifies interfaces to display				
Default	None				
Mode	Port Configuration				
Usage	Use the ipv6 mld filter command to bind a profile for port. When the port bind a profile. Then the port learning group will update, if the group is not match the profile rule it will remove the port from the group. Static group is excluded. Use the no form of this command to delete profile You can verify settings by the show ipv6 mld filter command				
Example	The following example specifies that set ipv6 mld filter test. Switch(config)# interface gi1 Switch(config-if)# ipv6 mld filter 1				

ipv6 mld max-groups

Syntax	ipv6 mld max-groups <0-1024> no ipv6 mld max-groups
Parameter	<0-256> MLD snooping max group number 0~256.

Default	Default is 256
Mode	Port Configuration
Usage	<p>Use the ipv6 mld max-groups command to limit port learning max group number. When the port has reach limitation, new group will not add this port. Static group is excluded.</p> <p>Use the no form of this command to restore to default You can verify settings by the show ipv6 mld max-groups command.</p>
Example	<p>The following example specifies that set ipv6 mld max-groups test.</p> <pre>Switch(config)# interface gi1 Switch(config-if)# ipv6 mld max-groups 10</pre>

ip igmp max-groups action

Syntax	ipv6 mld max-groups action (deny replace)
Parameter	(deny replace) Deny: MLD max-group action deny. Replace: MLD max-group action replace
Default	Default action is deny
Mode	Interface mode
Usage	<p>Use the ipv6 mld max-groups action command to set the action when the numbers of groups reach the limitation.</p> <p>Use the no form of this command to restore to default You can verify settings by the show ipv6 mld max-groups command.</p>
Example	<p>The following example specifies that set action replace test.</p> <pre>Switch(config-if)#ipv6 mld max-groups action replace</pre>

clear ipv6 mld snooping groups

Syntax	clear ipv6 mld snooping groups [(dynamic static)]
---------------	--

Parameter	None (dynamic static)	Clear ipv6 mld groups include dynamic and static ipv6 mld group type is dynamic or static
Default	None	
Mode	Privileged EXEC	
Usage	This command will clear the ipv6 mld groups for dynamic or static or all of type. You can verify settings by the show ipv6 mld snooping groups command..	
Example	The following example specifies that clear ipv6 mld snooping groups test. Switch# clear ipv6 mld snooping groups static	

clear ipv6 mld snooping statistics

Syntax	clear ipv6 mld snooping statistics
Parameter	none
Default	None
Mode	Privileged EXEC
Usage	This command will clear the igmp statistics. You can verify settings by the show ipv6 mld snooping command.
Example	The following example specifies that clear ipv6 mld snooping statistics test. Switch# clear ipv6 mld snooping statistics

show ipv6 mld snooping groups counters

Syntax	show ipv6 mld snooping groups counters
---------------	---

Parameter	none
Default	None
Mode	Privileged EXEC
Usage	This command will display the ipv6 mld group counter include static group.
Example	<p>The following example specifies that display ipv6 mld snooping group counter test.</p> <pre>Switch# show ipv6 mld snooping group counters Total ipv6 mld snooping group number: 2</pre>

show ipv6 mld snooping groups

Syntax	show ipv6 mld snooping groups [(dynamic static)]				
Parameter	<table border="1"> <tr> <td>counters</td> <td>Ipv6 group total entries</td> </tr> <tr> <td>(dynamic static)</td> <td>Display ipv6 mld group type is dynamic or static</td> </tr> </table>	counters	Ipv6 group total entries	(dynamic static)	Display ipv6 mld group type is dynamic or static
counters	Ipv6 group total entries				
(dynamic static)	Display ipv6 mld group type is dynamic or static				
Default	display all ipv6 mld groups				
Mode	Privileged EXEC				
Usage	This command will display the ipv6 mld groups for dynamic or static or all of type.				
Example	<p>The following example specifies that show ipv6 mld snooping groups test.</p> <pre>Switch# show ipv6 mld snooping groups VLAN Group IP Address Type Life(Sec) Port -----+-----+-----+-----+ 1 ff13::1 Static -- fa1 1 ff13::2 Static -- fa2</pre> <p>Total Number of Entry = 2</p>				

show ipv6 mld snooping router

Syntax	show ipv6 mld snooping router [(dynamic forbidden static)]				
Parameter	<table border="0"> <tr> <td>none</td><td>Show ipv6 mld router include dynamic and static and forbidden</td></tr> <tr> <td>(dynamic forbidden static)</td><td>Display ipv6 mld router info for different type</td></tr> </table>	none	Show ipv6 mld router include dynamic and static and forbidden	(dynamic forbidden static)	Display ipv6 mld router info for different type
none	Show ipv6 mld router include dynamic and static and forbidden				
(dynamic forbidden static)	Display ipv6 mld router info for different type				
Default	None				
Mode	Privileged EXEC				
Usage	This command will display the ipv6 mld router info.				
Example	<p>The following example specifies that show ipv6 mld snooping router test.</p> <pre>Switch# show ipv6 mld snooping router Dynamic Router Table VID Port Expiry Time(Sec) -----+-----+ </pre> <p>Total Entry 0</p> <pre>Static Router Table VID Port Mask -----+ 1 fa5 -----+</pre> <p>Total Entry 1</p> <pre>Forbidden Router Table VID Port Mask -----+ -----+</pre> <p>Total Entry 0</p>				

show ipv6 mld snooping

Syntax **show ipv6 mld snooping**

Parameter none

Default None

Mode Privileged EXEC

Usage This command will display ipv6 mld snooping global info.

Example The following example specifies that show ipv6 mld snooping test.

Switch# **show ipv6 mld snooping**

MLD Snooping Status

```
-----  
Snooping : Disabled  
Report Suppression : Enabled  
Operation Version : v1  
Forward Method : mac  
Unknown Multicast Action : Flood
```

Packet Statistics

```
Total RX : 0  
Valid RX : 0  
Invalid RX : 0  
Other RX : 0  
Leave RX : 0  
Report RX : 0  
General Query RX : 0  
Specail Group Query RX : 0  
Specail Group & Source Query RX : 0  
Leave TX : 0  
Report TX : 0  
General Query TX : 0  
Specail Group Query TX : 0  
Specail Group & Source Query TX : 0
```

show ipv6 mld snooping vlan

Syntax	show ipv6 mld snooping vlan [VLAN-LIST]				
Parameter	<table border="1"> <tr> <td>none</td> <td>Show all ipv6 mld snooping vlan info</td> </tr> <tr> <td>[VLAN-LIST]</td> <td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094</td> </tr> </table>	none	Show all ipv6 mld snooping vlan info	[VLAN-LIST]	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094
none	Show all ipv6 mld snooping vlan info				
[VLAN-LIST]	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094				
Default	Show all ipv6 mld snooping vlan info				
Mode	Privileged EXEC				
Usage	This command will display ipv6 mld snooping vlan info.				
Example	<p>The following example specifies that show ipv6 mld snooping vlan test.</p> <pre>Switch# show ipv6 mld snooping vlan 1 MLD Snooping is globaly disabled MLD Snooping VLAN 1 admin : disabled MLD Snooping oper mode : disabled MLD Snooping robustness: admin 2 oper 2 MLD Snooping query interval: admin 125 sec oper 125 sec MLD Snooping query max response : admin 10 sec oper 10 sec MLD Snooping last member query counter: admin 2 oper 2 MLD Snooping last member query interval: admin 1 sec oper 1 sec MLD Snooping last immediate leave: disabled MLD Snooping automatic learning of multicast router ports: enabled</pre>				

show ipv6 mld snooping forward-all

Syntax	show ipv6 mld snooping forward-all [vlan VLAN-LIST]				
Parameter	<table border="1"> <tr> <td>none</td> <td>Show all ipv6 mld snooping vlan forward-all info</td> </tr> <tr> <td>[vlan VLAN-LIST]</td> <td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.</td> </tr> </table>	none	Show all ipv6 mld snooping vlan forward-all info	[vlan VLAN-LIST]	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.
none	Show all ipv6 mld snooping vlan forward-all info				
[vlan VLAN-LIST]	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094.				
Default	Show all vlan ipv6 mld forward all info				
Mode	Privileged EXEC				
Usage	This command will display ipv6 mld snooping forward all info.				

Example	The following example specifies that show ipv6 mld snooping forward-all test. Switch# show ipv6 mld snooping forward-all MLD Snooping VLAN 1 MLD Snooping static port : None MLD Snooping forbidden port : None
----------------	--

show ipv6 mld profile

Syntax	show ipv6 mld profile [<1-128>]
Parameter	none Show all ipv6 mld snooping profile info [<1-128>] MLD profile index
Default	Show all ipv6 mld profile info
Mode	Privileged EXEC
Usage	This command will display ipv6 mld profile info.

Example	The following example specifies that show ipv6 mld profile test. Switch# show ipv6 mld profile IPv6 mld profile index: 1 IPv6 mld profile action: permit Range low ip: ff13::1 Range high ip: ff13::10
----------------	--

show ipv6 mld filter

Syntax	show ipv6 mld filter [interfaces IF_PORTS]
Parameter	none Show all port filter [interfaces IF_PORTS] Show specifies ports filter
Default	None
Mode	Privileged EXEC

Usage	This command will display ipv6 mld port filter info.
--------------	--

Example	The following example specifies that show ipv6 mld filter test.
----------------	---

Switch# **show ipv6 mld filter**

Port ID | Profile ID

-----+-----

gi1 : 1
gi2 : None
gi3 : None
gi4 : None
gi5 : None

--More--

show ipv6 mld max-group

Syntax	show ipv6 mld max-group [interfaces IF_PORTS]
---------------	--

Parameter	none Show all port max-group
	[interfaces IF_PORTS] Show specifies ports max-group

Default	None
----------------	------

Mode	Privileged EXEC
-------------	-----------------

Usage	This command will display ipv6 mld port max-group.
--------------	--

Example	The following example specifies that show ipv6 mld max-group test.
----------------	--

Switch(config-if)# **ipv6 mld max-groups 50**

Switch# **show ipv6 mld max-group**

Port ID | Max Group

-----+-----

gi1 : 50
gi2 : 256
gi3 : 256
gi4 : 256
gi5 : 256

--More--

show ipv6 mld port max-group action

Syntax	show ipv6 mld max-group action [interfaces IF_PORTS]				
Parameter	<table border="0"> <tr> <td>none</td> <td>Show all port max-group action</td> </tr> <tr> <td>[interfaces IF_PORTS]</td> <td>Show specifies ports max-group action</td> </tr> </table>	none	Show all port max-group action	[interfaces IF_PORTS]	Show specifies ports max-group action
none	Show all port max-group action				
[interfaces IF_PORTS]	Show specifies ports max-group action				
Default	Show all ports ipv6 mld max-group action				
Mode	Privileged EXEC				
Usage	This command will display ipv6 mld port max-group action.				
Example	<p>The following example specifies that show ipv6 mld max-group action test.</p> <pre>Switch(config-if)# ipv6 mld max-groups action replace Switch# show ipv6 mld max-group action Port ID Max-groups Action -----+ gi1 : replace gi2 : deny gi3 : deny gi4 : deny gi5 : deny</pre>				

20. MVR

Mvr

Syntax	mvr no mvr
Parameter	None
Default	Default is disabled
Mode	Global Configuration

Usage	Use the mvr command to enable MVR function. The command will clear all mvr VLAN ID multicast snooping group. Use the no form of this command to disable. Disable will clear all mvr group. You can verify settings by the show mvr command.
Example	The following example specifies that set mvr test. <pre>Switch(config)# mvr Switch(config)# no mvr Switch# show mvr MVR Running : Disabled MVR Multicast VLAN : 1 MVR Group Range : None MVR Max Multicast Groups : 128 MVR Current Multicast Groups : 0 MVR Global query response time : 1 sec MVR Mode : compatible</pre>

mvr vlan

Syntax	mvr vlan <VLAN-ID>
Parameter	<VLAN-ID> The exist static vlan id
Default	Default mvr vlan id is 1
Mode	Global Configuration
Usage	Use the mvr vlan command to modify mvr vlan id when the mvr status is enabled. Change mvr vlan id will delete the old mvr vlan and new mvr vlan group. If there have configure source or receiver port, there will check the source must only in the mvr vlan , and receiver port must not in the mvr vlan member. You can verify settings by the show mvr command.
Example	The following example specifies that configure mvr vlan 2 test. <pre>Switch(config)# vlan 2 Switch(config)# mvr The operation will delete groups of VLAN ID is MVR VLAN include static groups. Continue? [yes/no]:y Switch(config)# mvr vlan 2 The operation will delete the old and new MVR VLAN groups include static MVR groups.Continue? [yes/no]:y</pre>

Switch# show mvr

MVR Running : Enabled MVR Multicast VLAN : 2 MVR Group Range : None
 MVR Max Multicast Groups : 128 MVR Current Multicast Groups : 0 MVR Global
 query response time : 1 sec
 MVR Mode : compatible

mvr group

Syntax **mvr group <ip-address> [<1-128>]**

Parameter	< ip-address>	IPV4 multicast address
	[<1-128>]	Contiguous series of IP addresses.

Default None

Mode Global Configuration

Usage Use the **mvr group** command to configure mvr group address range when mvr is enabled. The command will delete all mvr vlan ipv4 group entry You can verify settings by the **show mvr** command

Example The following example specifies that set mvr group range is 224.1.1.1 ~ 224.1.1.8 test.

```
Switch(config)# mvr
Switch(config)# mvr group 224.1.1.1 8
The operation will delete the MVR VLAN groups include static MVR
groups. Continue? [yes/no]:y
Switch# show mvr
MVR Running : Enabled MVR Multicast VLAN : 2
MVR Group Range : 224.1.1.1 ~ 224.1.1.8
MVR Max Multicast Groups : 128
MVR Current Multicast Groups : 0
MVR Global query response time : 1 sec
MVR Mode : compatible
```

mvr mode

Syntax **mvr mode (dynamic | compatible)**

Parameter	(dynamic compatible)	dynamic: Allows dynamic MVR membership on source ports compatible: does not support IGMP dynamic joins on source ports.
------------------	----------------------	--

Default Default is compatible.

Mode	Global Configuration
-------------	----------------------

Usage	Use the mvr mode command to change mvr mode when mvr is enabled. You can verify settings by the show mvr command.
--------------	--

Example	The following example specifies that set mvr mode dynamic test. Switch(config)# mvr Switch(config)# mvr mode dynamic Switch# show mvr MVR Running : Enabled MVR Multicast VLAN : 2 MVR Group Range : 224.1.1.1 ~ 224.1.1.8 MVR Max Multicast Groups : 128 MVR Current Multicast Groups : 0 MVR Global query response time : 1 sec MVR Mode : dynamic
----------------	--

mvr query-time

Syntax	mvr query-time <1-10> no mvr query-time
---------------	--

Parameter	<1-10> specifies query response time is 1~10 sec.
------------------	--

Default	Default is 1 sec
----------------	------------------

Mode	Global Configuration
-------------	----------------------

Usage	Use the mvr query-time command to configure when mvr is enabled. Use the no form of this command to set query-time default value. You can verify settings by the show mvr command.
--------------	---

Example	The following example specifies that set mvr query-time 10 sec test. Switch(config)# mvr Switch(config)# mvr query-time 10 Switch# show mvr MVR Running : Enabled MVR Multicast VLAN : 2 MVR Group Range : 224.1.1.1 ~ 224.1.1.8 MVR Max Multicast Groups : 128
----------------	---

MVR Current Multicast Groups : 0
MVR Global query response time : 10 sec
MVR Mode : dynamic

mvr port type

Syntax	mvr type (source receiver) no mvr type
Parameter	(source receiver) Source: Configure uplink ports that receive and send multicast data as source ports. Subscribers cannot be directly connected to source ports. All source ports on a switch belong to the single multicast VLAN. Receiver: Configure a port as a receiver port if it is a subscriber port and should only receive multicast data. It does not receive data unless it becomes a member of the multicast group, either statically or by using IGMP leave and join messages. Receiver ports cannot belong to the multicast VLAN.
Default	None
Mode	Port Configuration
Usage	Use the mvr type command to configure mvr port type when mvr is enabled. The source port must only belong to mvr vlan. The receiver port must not belong to mvr vlan, and port mode must be access mode. Use the no form of this command to set mvr type none You can verify settings by the show mvr interface command
Example	The following example specifies that set gi1 fa1 is source port , fa2 is receiver port test. <pre>Switch(config)# vlan 2 Switch(config-vlan)#exit Switch(config)#mvr Switch(config)#mvr vlan 2 Switch(config)#mvr group 224.1.1.1 8 Switch(config)# interface gi1 Switch(config-if)# switchport trunk allowed vlan 2 Switch(config-if)# mvr type source Switch(config-if)#exit Switch(config)# interface gi2 Switch(config-if)# switchport mode access</pre>

```
Switch(config-if)#mvr type receiver
Switch# show mvr interface
  Port | Type | Immediate Leave
  -----+-----+
    gi1 | Source| Disabled
    gi2 | Receiver| Disabled
```

mvr port immediate

Syntax	mvr immediate no mvr immediate
Parameter	None
Default	Default is disabled
Mode	Port Configuration
Usage	<p>Use the mvr immediate command to configure mvr support immediate leave when mvr is enabled.</p> <p>Note This command applies to only receiver ports and should only be enabled on receiver ports to which a single receiver device is connected.</p> <p>Use the no form of this command to disable immediate leave.</p> <p>You can verify settings by the show mvr interface command</p>
Example	<p>The following example specifies that set gi2 immediate enable test. The configure should configure mvr receiver port firstly.(eg. mvr port type)</p> <pre>Switch(config)# interface gi2 Switch(config-if)#mvr immediate Switch(config-if)#exit Switch(config)# exit Switch# show mvr interface Port Type Immediate Leave -----+-----+ gi1 Source Disabled gi2 Receiver Enabled</pre>

mvr static group

Syntax	mvr vlan <VLAN-ID> group <ip-addr> interfaces IF_PORTS no mvr vlan < VLAN-ID> group <ip-addr> interfaces IF_PORTS
---------------	--

Parameter	VLAN-ID ip-addr IF PORTS	VLAN ID (e.g. 100) IPV4 multicast address specifies port list to set or remove
Default	None	
Mode	Global Configuration	
Usage	<p>Use the mvr vlan group command to add a static group or configure static group member ports when mvr is enabled.</p> <p>This command applies to only receiver ports.</p> <p>In compatible mode, this command applies to only receiver ports. In dynamic mode, it applies to receiver ports and source ports.</p> <p>When remove static mvr group all ports, the static group will be delete. Or can use no ip igmp vlan VLAN-ID group to delete the mvr static group.</p> <p>Static group can't learn dynamic port by igmp message.</p> <p>Use the no form of this command to delete a port in static group. If remove the last member of static group, the static group will be delete.</p>	
	<p>You can verify settings by the show mvr members command.</p>	

Example	The following example specifies that set mvr static group test. The configure must configure mvr receiver port firstly.(eg. mvr port type) Switch(config)# mvr vlan 2 group 224.1.1.1 interfaces gi2 Switch# show mvr members
	<pre>Gourp IP Address Type Life(Sec) Port -----+-----+-----+ 224.1.1.1 Static -- gi2</pre>

Total Number of Entry = 1

clear mvr members

Syntax	clear mvr members [dynamic static]
Parameter	dynamic MVR dynamic groups
Default	static MVR static groups
Mode	Clear all of mvr group

Usage	This command will clear the mvr groups for selected type.
--------------	---

Example	The following example specifies that clear all mvr groups test. Switch# clear mvr members
----------------	---

show mvr members

Syntax	show mvr members
---------------	-------------------------

Parameter	None
------------------	------

Default	None
----------------	------

Mode	Privileged EXEC
-------------	-----------------

Usage	This command will display the mvr groups for all of type.
--------------	---

Example	The following example specifies that show mvr groups test. Switch# show mvr members
----------------	---

show mvr interface

Syntax	show mvr interface [IF_PORTS]
---------------	--------------------------------------

Parameter	IF_PORTS Show specifies port list configurationt
------------------	---

Default	None
----------------	------

Mode	Privileged EXEC
-------------	-----------------

Usage	This command will display mvr port type and port immediate status.
--------------	--

Example	The following example specifies that show mvr interface test. Switch# show mvr interface
----------------	--

show mvr

Syntax	show mvr
Parameter	None
Default	None
Mode	Privileged EXEC
Usage	This command will display mvr global information.
Example	<pre>Switch# show mvr MVR Running : Enabled MVR Multicast VLAN : 100 MVR Group Range : 224.1.1.1 ~ 224.1.1.128 MVR Max Multicast Groups : 128 MVR Current Multicast Groups : 0 MVR Global query response time : 1 sec MVR Mode : compatible</pre>

21. Port

back-pressure

Syntax	back-pressure no back-pressure
Parameter	
Default	Default back pressure state is enabled.
Mode	Interface Configuration
Usage	<p>Use “back-pressure” command to make port to enable back pressure feature.</p> <p>Use no form of this command to disable back pressure feature.</p> <p>The only way to show this configuration is using “show running-config” command.</p>

Example	This example shows how to configure port fa1 and fa2 to be protected port. Switch(config)# interface gi1 Switch(config-if)# no back-pressure
----------------	--

This example shows how to show current jumbo-frmae size Switch# show running-config interface gi1 interface gi1 no back-pressure
--

clear interface

Syntax	clear interfaces <i>IF_PORTS</i> counters
---------------	--

Parameter	<i>IF_PORTS</i>	Specify port to clear counters.
------------------	-----------------	---------------------------------

Default	No default value for this command.
----------------	------------------------------------

Mode	Privileged EXEC
-------------	-----------------

Usage	Use “ clear interface ” command to clear statistic counters on specific ports.
--------------	---

Example	This example shows how to clear counters on port gi1. Switch(config)# clear interfaces gi1 counters
----------------	---

This example shows how to show current counters Switch# show interfaces gi1
<pre>Hardware is Fast Ethernet Auto-duplex, Auto-speed, media type is Copper flow-control is off 0 packets input, 0 bytes, 0 throttles Received 0 broadcasts (0 multicasts) 0 runts, 0 giants, 0 throttles 0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored 0 multicast, 0 pause input 0 input packets with dribble condition detected 0 packets output, 0 bytes, 0 underrun 0 output errors, 0 collisions, 0 interface resets 0 babbles, 0 late collision, 0 deferred 0 PAUSE output</pre>

description

Syntax

description WORD<1-32>

no description

Parameter

WORD<1-32>	Up to 32 characters describing this interface.
-------------------------	--

Default

Default port description is empty.

Mode

Interface Configuration

Usage

Use “**description**” command to give the port a name to identify it easily.

If description includes space character, please use double quoted to wrap it.

Use **no** form to restore description to empty string.

Example

This example shows how to modify port descriptions.

```
Switch(config)# interface gi1
Switch(config-if)# description userport
Switch(config-if)# exit
Switch(config)# interface gi2
Switch(config-if)# description "uplink port"
```

This example shows how to show current port description on interface gi1 and gi2

```
Switch# show interfaces gi1-2 status
Port Name Status Vlan Duplex Speed
```

Type		Status	Vlan	Duplex	Speed
gi1	userport	notconnect	1	auto	auto
Copper					
gi2	uplink port	notconnect	1	auto	auto
Copper					

duplex

Syntax

duplex (auto | full | half)

Parameter

auto	Enable AUTO duplex configuration.
-------------	-----------------------------------

full	Force full duplex operation.
-------------	------------------------------

half	Force half-duplex operation.
-------------	------------------------------

Default

Default port duplex is auto.

Mode

Interface Configuration

Usage	Use “ duplex ” command to change port duplex configuration.
--------------	--

Example	This example shows how to modify port duplex configuration.
----------------	---

```
Switch(config)# interface gi1
Switch(config-if)# duplex full
Switch(config-if)# exit
Switch(config)# interface gi2
Switch(config-if)# duplex half
```

This example shows how to show current speed configuration

```
Switch# show running-config interfaces gi1-2
interface gi1
  duplex full
interface gi2
  duplex half
```

This example shows how to show current interface link speed

```
Switch# show interfaces fa1-2 status
Port  Name          Status   Vlan Duplex  Speed    Type
Gi1           connected  1      full    a-100M  Copper
Gi2           connected  1      half    a-100M  Copper
```

eee

Syntax

```
eee
no eee
```

Parameter

Default

Default eee state is disabled.

Mode

Interface Configuration

Usage

Use “eee” command to make port to enable the energy efficient Ethernet feature.

Use **no** form of this command to disable eee.

The only way to show this configuration is using “**show running-config**” command.

Example	This example shows how to configure port fa1 and fa2 to be protected port. Switch(config)# interface gi1 Switch(config-if)# eee
----------------	---

This example shows how to show current jumbo-frmae size
Switch# show running-config interface gi1 interface gi1 eee

flowcontrol

Syntax	flowcontrol (auto off on) no flowcontrol
---------------	---

Parameter	auto Enable AUTO flow-control configuration.
	off Force flow-control as disabled.
	on Force flow-control as enabled.

Default	Default port flow control is off.
----------------	-----------------------------------

Mode	Interface Configuration
-------------	-------------------------

Usage	Use “ flowcontrol ” command to change port flow control configuration. Use no form to restore flow control to default (off) configuration.
--------------	---

Example	This example shows how to modify port duplex configuration. Switch(config)# interface gi1 Switch(config-if)# flowcontrol on
----------------	---

This example shows how to show current flow control configuration

```
Switch# show interfaces gi1
Hardware is Fast Ethernet
Full-duplex, Auto-speed, media type is Copper
flow-control is on
0 packets input, 0 bytes, 0 throttles Received 0 broadcasts (0 multicasts)
0 runts, 0 giants, 0 throttles
0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
0 multicast, 0 pause input
0 input packets with dribble condition detected
379 packets output, 31981 bytes, 0 underrun
0 output errors, 0 collisions, 0 interface resets
0 babbles, 0 late collision, 0 deferred
0 PAUSE output
```

jumbo-frame

Syntax

jumbo-frame <1518-9216>

Parameter

<1518-10000> Maximum frame size

Default

Default maximum frame size is 1522.

Mode

Global Configuration

Usage

Use “**jumbo-frame**” command to modify maximum frame size.

The only way to show this configuration is using “**show running-config**” command.

Example

This example shows how to modify maximum frame size on fa1 to 9216 bytes.

```
Switch(config)# jumbo-frame 9216
```

This example shows how to show current jumbo-frame size

```
Switch# show running-config
jumbo-frame 9216
```

protected

Syntax

protected no

protected

Default

Default protected state is no protected.

Mode

Interface Configuration

Usage

Use “**protected**” command to make port to be protected. Protected port is only allowed to communicate with unprotected port. In other words, protected port is not allowed to communicate with another protected port.

Use **no** form to make port unprotected.

Example

This example shows how to configure port fa1 and fa2 to be protected port.

```
Switch(config)# interface range fa1-2
Switch(config-if-range)# protected
```

This example shows how to show current protected port state.

```
Switch# show interfaces fa1-2 protected
```

Port	Protected State
------	-----------------

-----+-----	
-------------	--

gi1	enabled
-----	---------

gi2	enabled
-----	---------

show interface

Syntax

```
show interfaces IF_PORTS
show interfaces IF_PORTS status
show interfaces IF_PORTS protected
```

Parameter

<i>IF_PORTS</i>	Specify port to show.
-----------------	-----------------------

Default

No default value for this command.

Mode

Privileged EXEC

Usage

Use “**show interface**” command to show detail port counters, parameters and status.

Use “**show interface status**” command to show brief port status.

Use “**show interface protected**” command to show protected status.

Example

This example shows how to show current counters

```
Switch# show interfaces gi1
Hardware is Fast Ethernet
Auto-duplex, Auto-speed, media type is Copper
flow-control is off
  0 packets input, 0 bytes, 0 throttles
  Received 0 broadcasts (0 multicasts)
  0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
  0 multicast, 0 pause input
  0 input packets with dribble condition detected
  0 packets output, 0 bytes, 0 underrun
  0 output errors, 0 collisions, 0 interface resets
  0 babbles, 0 late collision, 0 deferred
  0 PAUSE output
```

This example shows how to show current protected port state.

```
Switch# show interfaces gi1-2 protected
Port      | Protected State
-----+-----
Gi1     | enabled
Gi2     | enabled
```

This example shows how to show current port status

```
Switch# show interfaces gi1-2 status
Port  Name          Status   Vlan Duplex Speed    Type
fa1           connected   1   full   a-100M  Copper
```

speed

Syntax

```
speed (10 | 100 | 1000)
speed auto [(10 | 100 | 1000 | 10/100)]
```

```
speed nonegotiate
no speed nonegotiate
```

Parameter

10	Force 10 Mbps operation.
100	Force 100 Mbps operation.
1000	Force 1000 Mbps operation.
auto	Enable AUTO speed configuration

Default

Default port speed is auto with all available abilities.

Mode

Interface Configuration

Usage

Use “**speed**” command to change port speed configuration. The speed is only able to configure to the physical maximum speed. For example, in fast Ethernet port, speed 1000 is not available.

You cannot configure the speed on the SFP module ports, but you can configure the speed to not negotiate (nonegotiate) if it is connected to a device that does not support autonegotiation.

Example

This example shows how to modify port speed configuration.

```
Switch(config)# interface gi1
Switch(config-if)# speed 100
Switch(config-if)# exit
Switch(config)# interface gi2
Switch(config-if)# speed auto 10/100
```

This example shows how to show current speed configuration

```
Switch# show running-config interfaces gi1-2
interface gi1
  speed 100
interface gi2
  speed auto 10/100
```

This example shows how to show current interface link speed

Port	Name	Status	Vlan	Duplex	Speed	Type
gi1		connected	1	a-full	a-100M	Copper
gi2		connected	1	a-full	a-100M	Copper

shutdown

Syntax

```
shutdown
no shutdown
```

Parameter

Default

Default port admin state is no shutdown.

Mode

Interface Configuration

Usage

Use “**shutdown**” command to disable port and use “**no shutdown**” to enable port. If port is error disabled by some reason, use “no shutdown” command can also recovery the port manually.

Example

This example shows how to modify port duplex configuration.

```
Switch(config)# interface g1
Switch(config-if)# shutdown
```

This example shows how to show current admin state configuration

```
Switch# show running-config interfaces g1
interface g1
    shutdown
```

This example shows how to show current link status

Port	Name	Status	Vlan	Duplex	Speed	Type
g1		disable	1	full	auto	Copper

22. Port Error Disable

errdisable recovery cause

Syntax

```
errdisable recovery cause (all|acl|arp-inspection|bpdu-guard|broadcast-flood|dhcp-rate-limit|psecure-violation|self-loop|unicast-flood|unknown-multicast-flood)
no errdisable recovery cause (all|acl|arp-inspection|bpdu-guard|broadcast-flood|dhcp-rate-limit|psecure-violation|self-loop|unicast-flood|unknown-multicast-flood)
```

Parameter

all	Enable timer to recover from acl causes.
acl	Enable timer to recover from all causes.
arp-inspection	Enable timer to recover from arp rate limit causes.

bpduguard	Enable timer to recover from bpdu guard causes.
broadcast-flood	Enable timer to recover from broadcast flood causes.
dhcp-rate-limit	Enable timer to recover from dhcp rate limit causes.
psecure-violation	Enable timer to recover from port security causes.
selfloop	Enable timer to recover from selfloop causes.
unicast-flood	Enable timer to recover from unicast flood causes.
unknown-multicastflood	Enable timer to recover from unknown multicast flood causes.

Default Error disable recovery is disabled for all cause.

Mode Global Configuration

Usage Ports would be disabled because of the invalid actions detected by protocols. To enable the port error disable recovery from the specific cause, use the command **errdisable recovery cause** in the Global Configuration mode.

Example The following example enables the port error disable recovery for the STP BPDU Guard and self-loop cause.

```
Switch(config) # errdisable recovery cause bpduguard
Switch(config) # errdisable recovery cause selfloop
```

errdisable recovery interval

Syntax **errdisable recovery interval** *seconds*

Parameter <30-86400> Interval with the number of seconds

Default The default recovery time is 300 seconds.

Mode Global Configuration

Usage To set the recovery time of the error disabled ports, use the command **errdisable recovert interval** in the Global Configuration mode.

Example The following example set the agimg time to 500 seconds.

```
Switch(config) # errdisable recovery interval 60
```

show errdisable recovery

Syntax **show errdisable recovery**

Parameter N/A

Default N/A

Mode Privileged EXEC

Usage To show the error disable configuration and the interfaces in the error disabled state, use the command **show errdisable recovery** in the Privileged EXEC mode.

Example The following example shows the error disable configuration, and the interfaces in the error disabled state.

```
Switch# show errdisable recovery
  ErrDisable Reason      | Timer Status
-----+-----
        bpduguard | enabled
        selfloop   | enabled
        broadcast-flood | disabled
unknown-multicast-flood | disabled
        unicast-flood | disabled
            acl     | disabled
psecure-violation | disabled
    dhcp-rate-limit | disabled
    arp-inspection | disabled

Timer Interval : 60 seconds

Interfaces that will be enabled at the next timeout:

  Port | Error Disable Reason      | Time Left
-----+-----+-----
```

23. Port Security

port-security (Global)

Syntax **port-security**
 no port-security

Parameter None

Default	Default is disabled
Mode	Global Configuration
Usage	<p>The “port-security” command enables the port security functionality globally.</p> <p>Use the no form of this command to disable.</p> <p>You can verify settings by the show port-security command.</p>
Example	<p>The following example shows how to enable port security</p> <pre>switch(config)# port-security switch# show port-security port-security is: Enabled</pre>

port-security (Interface)

Syntax	port-security no port-security
Parameter	None
Default	Default is disabled
Mode	Port Configuration
Usage	<p>The “port-security” command enables the port security functionality on this port.</p> <p>Use the no form of this command to disable</p> <p>You can verify settings by the show port-security interface command.</p>
Example	<p>The following example shows how to enable port security on interface fa1</p> <pre>switch(config)# interface fa1 switch(config-if)# port-security switch# show port-security interfaces fa1 Port Security CurrentAddr Action +---+-----+-----+ fa1 Enabled (1) 0 Discard</pre>

port-security address-limit

Syntax	port-security address-limit <1-256> action (forward discard shutdown) no port-security address-limit
---------------	---

Parameter	<1-256> Number of limitation.
------------------	-------------------------------

forward	Forward.
----------------	----------

discard	Discard.
----------------	----------

shutdown	Shutdown Port
-----------------	---------------

Default	The address-limit default is 1 and action is “drop”.
----------------	--

Mode	Port Configuration
-------------	--------------------

Usage	<p>Use the “port-security address-limit” command to set the learning-limit number and the violation action.</p> <p>Use the no form of this command to restore the default settings.</p> <p>You can verify settings by the show port-security interface command.</p>
--------------	--

Example	The following example shows how to enable port security on port 1 and set the learning limit number to 10.
----------------	--

switch(config)# interface gi1
switch(config-if)# port-security address-limit 10 action discard
switch(config-if)# port-security
switch# show port-security interfaces gi1

Port Mode Security CurrentAddr Action
-----+-----+-----+-----+
gi1 Dynamic Enabled (10) 0 Discard

show port-security

Syntax	show port-security
---------------	---------------------------

Parameter	None
------------------	------

Default	No default value for this command.
----------------	------------------------------------

Mode	Privileged EXEC
Usage	Use “ show port-security ” command to show port-security global information.
Example	This example shows how to show port-security configurations. Switch# show port-security port-security is: Enabled

show port-security interface

Syntax	show port-security interface <i>IF_PORTS</i>								
Parameter	<i>IF_PORTS</i> Select port to show port-security configurations.								
Default	No default value for this command.								
Mode	Privileged EXEC								
Usage	Use “ show port-security interfaces ” command to show port-security information of the specified port.								
Example	This example shows how to show port-security configurations on interface fa1. Switch# show port-security interfaces g1 <table border="1"><thead><tr><th>Port</th><th>Security</th><th>CurrentAddr</th><th>Action</th></tr></thead><tbody><tr><td>g1</td><td>Enabled (10)</td><td>0</td><td>Discard</td></tr></tbody></table>	Port	Security	CurrentAddr	Action	g1	Enabled (10)	0	Discard
Port	Security	CurrentAddr	Action						
g1	Enabled (10)	0	Discard						

24. Protocol VLAN

vlan protocol-vlan group (Global)

Syntax	vlan protocol-vlan group <1-8> frame-type (ethernet_ii llc_other snap_1042) protocol-value VALUE no vlan protocol-vlan group <1-8>						
Parameter	<table border="1"> <tr> <td><1-8></td> <td>Group index</td> </tr> <tr> <td>(ethernet_ii llc_other snap_1042)</td> <td>Specify protocol based frame type</td> </tr> <tr> <td>protocol-value</td> <td>Protocol value</td> </tr> </table>	<1-8>	Group index	(ethernet_ii llc_other snap_1042)	Specify protocol based frame type	protocol-value	Protocol value
<1-8>	Group index						
(ethernet_ii llc_other snap_1042)	Specify protocol based frame type						
protocol-value	Protocol value						

Default	no protocol vlan group are configured																																				
Mode	Global Configuration																																				
Usage	<p>Use the vlan protocol-vlan group Global Configuration mode command to add protocol vlan group with specified proto type and value.</p> <p>Use the no form of this command to remove protocol vlan group setting.</p> <p>You can verify your setting by entering the show vlan protocol-vlan Privileged EXEC command</p>																																				
Example	<p>The following example show how to configure protocol vlan group:</p> <pre>Switch(config)# vlan protocol-vlan group 1 frame-type ethernet_ii protocol-value 0x806 Switch(config)# vlan protocol-vlan group 2 frame-type llc_other protocol- value 0x800 Switch# show vlan protocol-vlan</pre> <table border="1"> <thead> <tr> <th>Group ID</th> <th>Status</th> <th>Type</th> <th>value</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Enabled</td> <td>Ethernet</td> <td>0x0806</td> </tr> <tr> <td>2</td> <td>Enabled</td> <td>LLC other</td> <td>0x0800</td> </tr> <tr> <td>3</td> <td>Disabled</td> <td>--</td> <td>--</td> </tr> <tr> <td>4</td> <td>Disabled</td> <td>--</td> <td>--</td> </tr> <tr> <td>5</td> <td>Disabled</td> <td>--</td> <td>--</td> </tr> <tr> <td>6</td> <td>Disabled</td> <td>--</td> <td>--</td> </tr> <tr> <td>7</td> <td>Disabled</td> <td>--</td> <td>--</td> </tr> <tr> <td>8</td> <td>Disabled</td> <td>--</td> <td>--</td> </tr> </tbody> </table>	Group ID	Status	Type	value	1	Enabled	Ethernet	0x0806	2	Enabled	LLC other	0x0800	3	Disabled	--	--	4	Disabled	--	--	5	Disabled	--	--	6	Disabled	--	--	7	Disabled	--	--	8	Disabled	--	--
Group ID	Status	Type	value																																		
1	Enabled	Ethernet	0x0806																																		
2	Enabled	LLC other	0x0800																																		
3	Disabled	--	--																																		
4	Disabled	--	--																																		
5	Disabled	--	--																																		
6	Disabled	--	--																																		
7	Disabled	--	--																																		
8	Disabled	--	--																																		

vlan protocol-vlan group (Interface)

Syntax	vlan protocol-vlan group <1-8> vlan <1-4094> no vlan protocol-vlan group <1-8>				
Parameter	<table border="0"> <tr> <td style="padding-right: 20px;"><1-8></td> <td>Group index</td> </tr> <tr> <td><1-4094></td> <td>VLAN ID (e.g. 100).</td> </tr> </table>	<1-8>	Group index	<1-4094>	VLAN ID (e.g. 100).
<1-8>	Group index				
<1-4094>	VLAN ID (e.g. 100).				
Default	In default all group are not binding to any interface.				
Mode	Interface configuration				

Usage	Use the vlan protocol-vlan binding Interface Configuration mode command to binding protocol VLAN Group on specified interfaces,
--------------	--

Use the **no** form of this command to cancel protocol VLAN Group Binding.
You can verify your setting by entering the **show vlan protocol-vlan
interfaces IF_PORTS Privileged EXEC** command

Example

The following example how to configure Protocol VLAN function on specified interfaces..

```
Switch(config)# interface g1
Switch(config-if)# vlan protocol-vlan group 1 vlan 2
Switch(config-if)# vlan protocol-vlan group 2 vlan 3
Switch# show vlan protocol-vlan interfaces fa1
```

Port fa1 :

```
  Group 1
    Status : Enabled
    VLAN ID : 2
  Group 2
    Status : Enabled
    VLAN ID : 3
  Group 3
    Status : Disabled
  Group 4
    Status : Disabled
  Group 5
    Status : Disabled
  Group 6
    Status : Disabled
  Group 7
    Status : Disabled
  Group 8
    Status : Disabled
```

show vlan protocol-vlan

Syntax

show vlan protocol-vlan [group <1-8>]

Parameter

<1-8> Specify protocol vlan group to display

Default

N/A

Mode

Privileged EXEC

Usage

Use the **show vlan proto-vlan** command in EXEC mode to display Proto VLAN group configuration

Example

The following example how to display Proto VLAN group configuration

Switch# **show vlan protocol-vlan**

Group ID	Status	Type	value
1	Enabled	Ethernet	0x0806
2	Enabled	LLC other	0x0800
3	Disabled	--	--
4	Disabled	--	--
5	Disabled	--	--
6	Disabled	--	--
7	Disabled	--	--
8	Disabled	--	--

show vlan protocol-vlan interfaces

Syntax

show vlan protocol-vlan interfaces IF_PORTS

Parameter

IF_PORTS Specify interfaces protocol vlan to display

Default

N/A

Mode

Privileged EXEC

Usage

Use the **show vlan protocol-vlan interface** command in EXEC mode to display the Protocol VLAN interfaces setting

Example

The following example shows how to display the Protocol VLAN interfaces setting

Switch# **show vlan protocol-vlan interfaces g1**

Port g1 :

Group 1

 Status : Enabled
 VLAN ID : 2

Group 2

 Status : Enabled
 VLAN ID : 3

Group 3

 Status : Disabled

Group 4

 Status : Disabled

Group 5

 Status : Disabled

Group 6

Status	: Disabled
Group 7	
Status	: Disabled
Group 8	
Status	: Disabled

25. QoS

qos

Syntax

qos

Default

Default qos is disabled.

Mode

Global Configuration

Usage

Use “**qos**” command to enable quality of service which according to basic trust type to assign queue for packets, and packets with higher priority are able to send first.

Use no form of this command to disable quality of service.

Example

This example shows how to change qos to basic mode.

```
Switch(config)# qos
```

This example shows how to check current qos mode.

```
Switch# show qos
```

QoS Mode: basic

Basic trust: cos

qos cos

Syntax

qos cos <0-7>

Parameter

cos <0-7>	Specify the default VPT value.
------------------------	--------------------------------

Default

Default CoS value for interface is 0.

Mode

Interface Configuration

Usage

Sometimes, there is no qos information in the packets, such as CoS, DSCP, IP Precedence. But we still can give the priority for packets by configuring the interface default cos value. If there is no qos information in the packets, the device will use this default cos value and find the cos-queue map to get the final destination queue.

Use “**qos cos**” command to assign port default cos value.

Example

This example shows how to configure default cos value 7 on interface g1.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# qos cos 7
Switch(config-if)# end
Switch# show qos interface GigabitEthernet 1
  Port | CoS | Trust State | Remark Cos | Remark DSCP | Remark IP Prec
-----+-----+-----+-----+-----+-----+
    g1 |   7 |     enabled |      disabled |      disabled |      disabled |
```

qos map

Syntax

qos map (cos-queue dscp-queue precedence-queue) SEQUENCE to <1-8>
qos map (queue-cos queue-precedence) SEQUENCE to <0-7>
qos map queue-dscp SEQUENCE to <0-63>

Parameter

cos-queue	Map assigned CoS values to select an egress queue. Use the command no form to return to the default value
dscp-queue	Modify the DSCP to queue map
precedence-queue	Modify the IP Precedence to queue map
queue-cos	Modify the queue to CoS map
queue-dscp	Modify the queue to DSCP map
queue-precedence	Modify the queue to ip precedence map
SEQUENCE	Specify the cos, dscp, precedence or queue with one or multiple values.
<1-8>	Specify the queue id
<0-7>	Specify the cos or precedence values
<0-63>	Specify the dscp values

Default

The default values of cos-queue are showing in the following table.

CoS	Queue ID
0	2
1	1
2	3
3	4
4	5
5	6
6	7
7	8

The default values of dscp-queue are showing in the following table.

DSCP	Queue ID
0~7	1
8~15	2
16~23	3
24~31	4
32~39	5
40~47	6
48~55	7
56~63	8

The default values of ip precedence are showing in the following table.

IP Precedence	Queue ID
0	1
1	2
2	3
3	4
4	5
5	6
6	7
7	8

The default values of queue-cos are showing in the following table.

Queue ID	CoS
1	1
2	0
3	2
4	3
5	4
6	5
7	6
8	7

The default values of queue-dscp are showing in the following table.

Queue ID	DSCP
1	0
2	8
3	16
4	24
5	32
6	40
7	48
8	56

The default values of queue-precedence are showing in the following table.

Queue ID	IP Precedence
1	0
2	1
3	2
4	3
5	4
6	5
7	6
8	7

Mode

Global Configuration

Usage

According to different trust type, packets will be assigned to different queue based on the specific qos map. For example, if the trust type is trust cos, the

device will get the cos value in packet and reference the cos-queue mapping to assign the correct queue.

The queue to cos, dscp or precedence maps are used by remarking function. If the port remarking feature is enabled, the remarking function will reference these 3 tables to remark packets.

Example

This example shows how to map cos 6 and 7 to queue 1.

```
Switch(config)# qos map cos-queue 6 7 to 1
Switch# show qos map cos-queue
Cos to Queue mappings
  COS   0   1   2   3   4   5   6   7
-----
  Queue  2   1   3   4   5   6   1   1
```

This example shows how to map queue 4 and 5 to cos 7.

```
Switch(config)# qos map queue-cos 4 5 to 7
Switch# show qos map queue-cos
Queue to CoS mappings
  Queue  1   2   3   4   5   6   7   8
-----
  CoS    1   0   2   7   7   5   6   7
```

qos queue

Syntax

```
qos queue strict-priority-num <0-8>
qos queue weight SEQUENCE
show qos queueing
```

Parameter

strict-priority-num <0-8>	Specify the strict priority queue number
weight SEQUENCE	Specify the non-strict priority queue weight value. The valid queue weight value is from 1 to 127.

Default

Default strict priority queue number is 8, it means all queues are strict priority queue.

The default queue weight for each queue is shown in following table.

Queue ID	Queue Weight
1	1
2	2
3	3
4	4
5	5
6	9
7	13
8	15

Mode	Global Configuration						
Usage	<p>The device support total 8 queues for QoS queueing. It is able to set the queue to be strict priority queue or weighted queue to prevent starvation. The queue with higher id value has higher priority.</p> <p>First, you need to decide how many strict priority queue you need. The strict priority queue will always occupy the higher priority queue. For example, if you specify the strict priority number to be 2, then the queue 7 and 8 will be the strict priority queues and the others are weighted queues.</p> <p>After you setup the number of strict priority queue, you need to setup the weight for the weighted queues by using “qos queue weight” command. And the bandwidth will shared by the weight you configured between these weighted queues.</p>						
Example	<p>This example shows how to setup device with 3 strict priority queues and give other weighted queues with weight 5, 10, 15, 20, 25.</p> <pre>Switch(config)# qos queue strict-priority-num 3 Switch(config)# qos queue weight 5 10 15 20 25 Switch# show qos queueing qid-weights Ef - Priority 1 - 5 dis- N/A 2 - 10 dis- N/A 3 - 15 dis- N/A 4 - 20 dis- N/A 5 - 25 dis- N/A 6 - N/A ena- 6 7 - N/A ena- 7 8 - N/A ena- 8</pre>						
qos remark							
Syntax	<p>qos remark (cos dscp precedence) no qos remark (cos dscp precedence)</p>						
Parameter	<table border="1"> <tr> <td>cos</td><td>Remark CoS value.</td></tr> <tr> <td>dscp</td><td>Remark DSCP value.</td></tr> <tr> <td>precedence</td><td>Remark ip precedence value.</td></tr> </table>	cos	Remark CoS value.	dscp	Remark DSCP value.	precedence	Remark ip precedence value.
cos	Remark CoS value.						
dscp	Remark DSCP value.						
precedence	Remark ip precedence value.						
Default	<p>Default CoS remarking is disabled. Default DSCP remarking is disabled. Default IP Precedence remarking is disabled.</p>						
Mode	Interface Configuration						
Usage	<p>QoS remarking feature allow you to change priority information in packets based on egress queue. For example, you want all packets egress from interface fa1 queue 1 to remark the cos value to be 5 for next tier of device, you can enable the cos remarking feature on fa1 and configure the queue-cos</p>						

map for queue 1 map to cos 5.

Use “**qos remark**” command to enable remarking feature on specific type.
And use “**no qow remark**” command to disable it.

Example

This example shows how to enable remarking features on interface fa1.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# qos remark cos
Switch(config-if)# qos remark dscp
Switch(config-if)# qos remark precedence
Switch(config-if)# end
Switch# show qos interface GigabitEthernet 1
  Port | CoS | Trust State | Remark Cos | Remark DSCP | Remark IP Prec
-----+-----+-----+-----+-----+-----+
    g1 |   0 |     enabled |     enabled |     enabled |     enabled |
```

qos trust

Syntax

qos trust (cos | cos-dscp | dscp | precedence)

Parameter

cos	Specify trust mode cos
cos-dscp	Specify trust mode Cos-DSCP.
dscp	Specify trust mode DSCP
precedence	Specify trust mode precedence

Default

Default QoS trust type is cos.

Mode

Global Configuration

Usage

In QoS basic mode, there are 4 trust types for device to judge the appropriate queue of the packets. This command is able to switch between these trust types.

CoS:

IEEE 802.1p defined 3bits priority value in vlan tag. Trust this value in packets and assign queue according to cos-queue map.

DSCP:

IETF RFC2474 defined 6bits priority value in IP packet (highest 6bits in ToS field). Trust this value in packets and assign queue according to dscp-queue map.

IP Precedence:

The highest 3bits priority value in IP packet ToS field. Trust this value in packets and assign queue according to precedence-queue map.

CoS-DSCP:

Trust DSCP for IP packets and assign queue according to dscp-queue map.
Trust CoS for non-IP packets and assign queue according to cos-queue map.

Example

This example shows how to change qos basic mode trust types.

```
Switch(config)# qos trust cos
Switch(config)# qos trust cos-dscp
```

```
Switch(config)# qos trust dscp
Switch(config)# qos trust precedence
```

This example shows how to check current qos trust type.

```
Switch# show qos
QoS Mode: basic
Basic trust: ip-precedence
```

qos trust (Interface)

Syntax

```
qos trust
no qos trust
```

Parameter

Default

Default interface qos trust state is enabled.

Mode

Interface Configuration

Usage

After QoS function is enabled in basic mode, the device also support per interface enable/disable the qos function. If the trust state on interface is enabled, all ingress packets of this interface will remap according to the trust type and the qos maps. Otherwise, all ingress packets will assign to queue 1.

Use “**qos trust**” to enable trust state on interface and use “**no qos trust**” to disable trust state on interface.

Example

This example shows how to disable qos trust state on interface fa1.

```
Switch(config)# interface GigabitEthernet 1
Switch(config-if)# no qos trust
Switch(config-if)# end
Switch# show qos interface GigabitEthernet 1
  Port | CoS | Trust State | Remark Cos | Remark DSCP | Remark IP Prec
-----+-----+-----+-----+-----+-----+
    g1 |   0 |      disabled |      disabled |      disabled |      disabled |
```

show qos

Syntax

```
show qos
```

Parameter

Default

No default value for this command.

Mode

Privileged EXEC

Usage	Use “ show qos ” command to show qos state and trust type.
--------------	---

Example	This example shows how to check current qos mode.
----------------	---

```
Switch# show qos
QoS Mode: basic
Basic trust: cos
```

show qos interface

Syntax	show qos interface <i>IF_PORTS</i>
---------------	---

Parameter	<i>IF_PORTS</i>	Select port to show qos configurations.
------------------	-----------------	---

Default	No default value for this command.
----------------	------------------------------------

Mode	Privileged EXEC
-------------	-----------------

Usage	Use “ show qos interfaces ” command to show port default cos ,remarking state and remarking type state informations.
--------------	---

Example	This example shows how to show qos configurations on interface fa1.
----------------	---

```
Switch# show qos interface GigabitEthernet 1
Port | CoS | Trust State | Remark Cos | Remark DSCP | Remark IP Prec
-----+-----+-----+-----+-----+-----+
     g1 |    7 |       enabled |      disabled |      disabled |      disabled |
```

show qos map

Syntax	show qos map [(cos-queue dscp-queue precedence-queue queue-cos queue-dscp queue-precedence)]
---------------	---

Parameter	cos-queue CoS to Queue mapping. dscp-queue DSCP to Queue mapping. precedence-queue IP Precedence to Queue mapping. queue-cos Queue to CoS mapping. queue-dscp Queue to DSCP mapping. queue-precedence Queue to IP Precedence mapping.
------------------	--

Default	No default value for this command.
----------------	------------------------------------

Mode	Privileged EXEC																																																																																																																																																																								
Usage	Use “ show qos map ” command to show all kinds of mapping for qos remapping and remarking features.																																																																																																																																																																								
Example	<p>This example shows how to show all qos maps.</p> <pre>Switch(config)# show qos map</pre> <p>CoS to Queue mappings</p> <table border="1"> <thead> <tr> <th>COS 0</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> </tr> </thead> <tbody> <tr> <td>Queue</td> <td>2</td> <td>1</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> <td>7</td> <td>8</td> </tr> </tbody> </table> <p>DSCP to Queue mappings</p> <table border="1"> <thead> <tr> <th>d1: d2</th> <th>0</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> <th>8</th> <th>9</th> </tr> </thead> <tbody> <tr> <td>0:</td> <td>1</td> </tr> <tr> <td>1:</td> <td>2</td> <td>2</td> <td>2</td> <td>2</td> <td>2</td> <td>3</td> <td>3</td> <td>3</td> <td>3</td> <td>3</td> </tr> <tr> <td>2:</td> <td>3</td> <td>3</td> <td>3</td> <td>3</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td> </tr> <tr> <td>3:</td> <td>4</td> <td>4</td> <td>5</td> <td>5</td> <td>5</td> <td>5</td> <td>5</td> <td>5</td> <td>5</td> <td>5</td> </tr> <tr> <td>4:</td> <td>6</td> <td>6</td> <td>6</td> <td>6</td> <td>6</td> <td>6</td> <td>6</td> <td>7</td> <td>7</td> <td>7</td> </tr> <tr> <td>5:</td> <td>7</td> <td>7</td> <td>7</td> <td>7</td> <td>7</td> <td>8</td> <td>8</td> <td>8</td> <td>8</td> <td>8</td> </tr> <tr> <td>6:</td> <td>8</td> <td>8</td> <td>8</td> <td>8</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>IP Precedence to Queue mappings</p> <table border="1"> <thead> <tr> <th>IP Precedence</th> <th>0</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> </tr> </thead> <tbody> <tr> <td>Queue</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> <td>7</td> <td>8</td> </tr> </tbody> </table> <p>Queue to CoS mappings</p> <table border="1"> <thead> <tr> <th>Queue</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> <th>8</th> </tr> </thead> <tbody> <tr> <td>CoS</td> <td>1</td> <td>0</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> <td>7</td> </tr> </tbody> </table> <p>DSCP</p> <table border="1"> <thead> <tr> <th>DSCP</th> <th>0</th> <th>8</th> <th>16</th> <th>24</th> <th>32</th> <th>40</th> <th>48</th> <th>56</th> </tr> </thead> <tbody> <tr> <td>Queue to IP Precedence mappings</td> <td>7</td> <td>8</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> </tr> </tbody> </table> <p>ipprec</p> <table border="1"> <thead> <tr> <th>ipprec</th> <th>0</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> </tr> </thead> </table>	COS 0	1	2	3	4	5	6	7	Queue	2	1	3	4	5	6	7	8	d1: d2	0	1	2	3	4	5	6	7	8	9	0:	1	1	1	1	1	1	1	1	1	1	1:	2	2	2	2	2	3	3	3	3	3	2:	3	3	3	3	4	4	4	4	4	4	3:	4	4	5	5	5	5	5	5	5	5	4:	6	6	6	6	6	6	6	7	7	7	5:	7	7	7	7	7	8	8	8	8	8	6:	8	8	8	8							IP Precedence	0	1	2	3	4	5	6	7	Queue	1	2	3	4	5	6	7	8	Queue	1	2	3	4	5	6	7	8	CoS	1	0	2	3	4	5	6	7	DSCP	0	8	16	24	32	40	48	56	Queue to IP Precedence mappings	7	8	1	2	3	4	5	6	ipprec	0	1	2	3	4	5	6	7
COS 0	1	2	3	4	5	6	7																																																																																																																																																																		
Queue	2	1	3	4	5	6	7	8																																																																																																																																																																	
d1: d2	0	1	2	3	4	5	6	7	8	9																																																																																																																																																															
0:	1	1	1	1	1	1	1	1	1	1																																																																																																																																																															
1:	2	2	2	2	2	3	3	3	3	3																																																																																																																																																															
2:	3	3	3	3	4	4	4	4	4	4																																																																																																																																																															
3:	4	4	5	5	5	5	5	5	5	5																																																																																																																																																															
4:	6	6	6	6	6	6	6	7	7	7																																																																																																																																																															
5:	7	7	7	7	7	8	8	8	8	8																																																																																																																																																															
6:	8	8	8	8																																																																																																																																																																					
IP Precedence	0	1	2	3	4	5	6	7																																																																																																																																																																	
Queue	1	2	3	4	5	6	7	8																																																																																																																																																																	
Queue	1	2	3	4	5	6	7	8																																																																																																																																																																	
CoS	1	0	2	3	4	5	6	7																																																																																																																																																																	
DSCP	0	8	16	24	32	40	48	56																																																																																																																																																																	
Queue to IP Precedence mappings	7	8	1	2	3	4	5	6																																																																																																																																																																	
ipprec	0	1	2	3	4	5	6	7																																																																																																																																																																	

show qos queueing

Syntax	show qos queueing
---------------	--------------------------

Parameter

Default	No default value for this command.
----------------	------------------------------------

Mode	Privileged EXEC
-------------	-----------------

Usage	Use “ show qos queueing ” command to show qos queueing information.
--------------	--

Example	This example shows how to check current qos queueing information.
----------------	---

```
Switch# show qos queueing
qid-weights      Ef - Priority
1 -      3      dis- N/A
2 -      5      dis- N/A
3 -  N/A      ena- 3
4 -  N/A      ena- 4
5 -  N/A      ena- 5
6 -  N/A      ena- 6
7 -  N/A      ena- 7
8 -  N/A      ena- 8
```

26. Rate Limit

rate limit egress

Syntax	rate-limit egress <16-1000000> no rate-limit egress
---------------	--

Parameter	<0-1000000> The average traffic rate in Kbps, must be a multiple of 16.
------------------	--

Default	Default rate limit is disabled.
----------------	---------------------------------

Mode	Interface configuration
-------------	-------------------------

Usage	Use the “ rate-limit egress ” command to configure the egress port shaper.
--------------	---

Use the **no** form of this command to disable the shaper.

You can verify your setting by entering the **show running-config interfaces** command.

Example	The following example show how to configure ingress port rate limit and egress port shaper.
<pre>Switch(config) # interfaces g1 Switch(config-if) # rate-limit egress 2048 Switch# show running-config interfaces g1 interface g1 rate-limit egress 2048</pre>	

rate limit egress queue

Syntax	rate-limit egress queue <1-8> <16-1000000> no rate-limit egress queue <1-8>
---------------	--

Parameter	<1-8> queue id <0-1000000> The average traffic rate in Kbps, must be a multiple of 16.
------------------	---

Default	Default queue rate limit is disabled.
----------------	---------------------------------------

Mode	Interface configuration
-------------	-------------------------

Usage	Use the “ rate-limit egress queue ” command to configure the egress queue shaper.
--------------	--

Use the **no** form of this command to disable the queue shaper.

You can verify your setting by entering the **show running-config interfaces** command.

Example	The following example show how to configure ingress port rate limit and egress port shaper.
----------------	---

```
Switch(config) # interfaces g1
Switch(config-if) # rate-limit egress queue 3 2048
Switch# show running-config interfaces g1
interface g1
    rate-limit egress queue 3 2048
```

rate limit ingress

Syntax	rate-limit ingress <16-1000000> no rate-limit ingress
---------------	--

Parameter	<16-1000000> The average traffic rate in Kbps, must be a multiple of 16. <1-8> queue id
------------------	--

Default	Rate limiting is disabled.
Mode	Interface configuration
Usage	<p>Use the “rate-limit ingress” command to limit the incoming traffic rate on a port.</p> <p>Use the no form of this command to disable the rate limit.</p> <p>You can verify your setting by entering the show running-config interfaces command</p>
Example	The following example show how to configure ingress port rate limit.

```
Switch(config)# interfaces g1
Switch(config-if)# rate-limit ingress 128
Switch# show running-config interfaces g1
interface g1
    rate-limit ingress 128
```

27. RMON

rmon event

Syntax	rmon event <1-65535> [log] [trap COMMUNITY] [description DESCRIPTION] [owner NAME] no rmon event <1-65535>										
Parameter	<hr/> <table border="0"> <tr> <td><1-65535></td> <td>index of event.</td> </tr> <tr> <td>[log]</td> <td>enable log for event.</td> </tr> <tr> <td>[trap COMMUNITY]</td> <td>enable trap for event</td> </tr> <tr> <td>[description DESCRIPTION]</td> <td>description of event (0~127 characters)</td> </tr> <tr> <td>[owner NAME]</td> <td>owner name of event (0~31 characters).</td> </tr> </table> <hr/>	<1-65535>	index of event.	[log]	enable log for event.	[trap COMMUNITY]	enable trap for event	[description DESCRIPTION]	description of event (0~127 characters)	[owner NAME]	owner name of event (0~31 characters).
<1-65535>	index of event.										
[log]	enable log for event.										
[trap COMMUNITY]	enable trap for event										
[description DESCRIPTION]	description of event (0~127 characters)										
[owner NAME]	owner name of event (0~31 characters).										
Default	No default is defined.										
Mode	Global Configuration										

Usage	Use the rmon event command to add or modify a RMON event entry. Use the no form of this command to delete. You can verify settings by the show rmon event command.
Example	<p>The example shows how to add RMON event entry with log and trap action and then modify it action to log only.</p> <pre>switch(config)# rmon event 1 log trap public description test owner admin switch(config)# show rmon event 1 Rmon Event Index 1 Rmon Event Type : Log and Trap Rmon Event Community : public Rmon Event Description : test Rmon Event Last Sent : Rmon Event Owner : admin switch(config)# rmon event 1 log description test owner admin switch(config)# show rmon event 1 Rmon Event Index 1 Rmon Event Type : Log Rmon Event Community : public Rmon Event Description : test Rmon Event Last Sent : Rmon Event Owner : admin</pre>

rmon alarm

Syntax	rmon alarm <1-65535> interface IF_PORT (drop-events octets pkts broadcast-pkts multicast-pkts crc-align-errors undersize-pkts oversize-pkts fragments jabbers collisions pkts64octets pkts65to127octets pkts128to255octets pkts256to511octets pkts512to1023octets pkts1024to1518octets) <1-2147483647> (absolute delta) rising <0-2147483647> <0-65535> falling <0-2147483647> <0-65535> startup (rising rising-falling falling) [owner NAME] no rmon alarm <1-65535>														
Parameter	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;"><1-65535></td> <td style="padding: 2px;">index of event</td> </tr> <tr> <td style="padding: 2px;">IF_PORT</td> <td style="padding: 2px;">Specify the interface to sample</td> </tr> <tr> <td style="padding: 2px;">(variable)</td> <td style="padding: 2px;">Specify a mib object to sample</td> </tr> <tr> <td style="padding: 2px;"><1-2147483647></td> <td style="padding: 2px;">Specify the time in seconds that the alarm monitors the MIB variable.</td> </tr> <tr> <td style="padding: 2px;">(absolute delta)</td> <td style="padding: 2px;">Specify absolute to compare sample counter absolutely. Specify delta to compare delta counter between samples</td> </tr> <tr> <td style="padding: 2px;"><0-2147483647></td> <td style="padding: 2px;">Specify a number which the alarm trigger rising event</td> </tr> <tr> <td style="padding: 2px;"><0-65535></td> <td style="padding: 2px;">Specify event index when the rising threshold exceeds.</td> </tr> </table>	<1-65535>	index of event	IF_PORT	Specify the interface to sample	(variable)	Specify a mib object to sample	<1-2147483647>	Specify the time in seconds that the alarm monitors the MIB variable.	(absolute delta)	Specify absolute to compare sample counter absolutely. Specify delta to compare delta counter between samples	<0-2147483647>	Specify a number which the alarm trigger rising event	<0-65535>	Specify event index when the rising threshold exceeds.
<1-65535>	index of event														
IF_PORT	Specify the interface to sample														
(variable)	Specify a mib object to sample														
<1-2147483647>	Specify the time in seconds that the alarm monitors the MIB variable.														
(absolute delta)	Specify absolute to compare sample counter absolutely. Specify delta to compare delta counter between samples														
<0-2147483647>	Specify a number which the alarm trigger rising event														
<0-65535>	Specify event index when the rising threshold exceeds.														

<0-2147483647>	Specify a number which the alarm trigger falling event
<0-65535>	Specify event index when the falling threshold exceeds.
(rising rising- falling falling)	Specify only to how rising or falling startup event. Or show either rising or falling startup event.
[owner NAME]	(Optional) Specify owner of alarm.
Default	No default is defined.
Mode	Global Configuration
Usage	<p>Use the rmon alarm command to add or modify a RMON alarm entry. Before add alarm entry, at least one event entry must be added. Use the no form of this command to delete. You can verify settings by the show rmon alarm command.</p>
Example	<p>The example shows how to add RMON alarm entry that sample interface fa1 packets delta count every 300 seconds. Trigger event index 1 if over than rising threshold 10000, trigger event index 2 if lower than falling threshold.</p> <pre>switch(config)# rmon event 1 log switch(config)# rmon event 2 log Switch(config)# rmon alarm 1 interface gi1 pkts 300 delta rising 10000 1 falling 100 1 startup rising-falling owner admin Rmon Alarm Index 1 Rmon Alarm Sample Interval 300 Rmon Alarm Sample Interface : gi1 Rmon Alarm Sample Variable : Pkts Rmon Alarm Sample Type : delta Rmon Alarm Type : Rising or Falling Rmon Alarm Rising Threshold : 10000 Rmon Alarm Rising Event 1 Rmon Alarm Falling Threshold 100 Rmon Alarm Falling Event 1 Rmon Alarm Owner : admin</pre>

rmon history

Syntax	rmon history <1-65535> interface IF_PORT [buckets <1-65535>] [interval <1-3600>] [owner NAME] no rmon history <1-65535>				
Parameter	<table border="1"> <tr> <td><1-65535></td> <td>Specify history index to create or modify.</td> </tr> <tr> <td>IF_PORT</td> <td>Specify the interface to sample</td> </tr> </table>	<1-65535>	Specify history index to create or modify.	IF_PORT	Specify the interface to sample
<1-65535>	Specify history index to create or modify.				
IF_PORT	Specify the interface to sample				
<i>Managed Switch Software</i>	259				

	[bucket <1-65535>]	(Optional) Specify the maximum number of buckets.
	[interval <>1-3600]	(Optional) Specify time interval for each sample
	[owner NAME]	(Optional)Specify owner of history
Default	No default is defined.	
Mode	Global Configuration	
Usage	<p>Use the rmon history command to add or modify a RMON history entry. Use the no form of this command to delete. You can verify settings by the show rmon history command.</p>	
Example	<p>The example shows how to add RMON history entry that monitor interface gi1 every 60 seconds and then modify it to monitor every 30 seconds.</p> <pre>switch(config)# rmon history 1 interface gi1 interval 60 owner admin switch(config)# show rmon history 1 Rmon History Index 1 Rmon Collection Interface: gi1 Rmon History Bucket 50 Rmon history Interval 60 Rmon History Owner : admin</pre> <pre>switch(config)# rmon history 1 interface gi1 interval 30 owner admin switch(config)# show rmon history 1 Rmon History Index 1 Rmon Collection Interface: gi1 Rmon History Bucket 50 Rmon history Interval 30 Rmon History Owner : admin</pre>	

clear rmon interfaces statistics

Syntax	clear rmon interfaces IF_PORTS statistics	
Parameter	IF_PORTS specifies ports to clear	
Default	No default is defined	
Mode	Privileged EXEC	

Usage	Use the clear rmon interfaces statistics command to clear RMON etherStat statistics those are recorded on interface. You can verify results by the show rmon interface statistics command.
--------------	---

Example	The example shows how to clear RMON etherStat statistics on interface gi1.
----------------	--

```
switch# clear rmon interfaces gi1 statistics
switch# show rmon interfaces gi1 statistics
==== Port gi1 ====
etherStatsDropEvents      0
etherStatsOctets          0
etherStatsPkts            0
etherStatsBroadcastPkts   0
etherStatsMulticastPkts   0
etherStatsCRCAlignErrors  0
etherStatsUnderSizePkts   0
etherStatsOverSizePkts   0
etherStatsFragments       0
etherStatsJabbers         0
etherStatsCollisions      0
etherStatsPkts64Octets    0
etherStatsPkts65to127Octets 0
etherStatsPkts128to255Octets 0
etherStatsPkts256to511Octets 0
etherStatsPkts512to1023Octets 0
etherStatsPkts1024to1518Octets 0
```

show rmon interfaces statistics

Syntax	show rmon interfaces IF_PORTS statistics
Parameter	IF_PORTS specifies ports to show
Default	No default is defined
Mode	Privileged EXEC
Usage	Use the show rmon interfaces statistics command to show RMON etherStat statistics of interface.

Example	The example shows how to show RMON etherStat statistics of interface gi1.
----------------	---

```
switch(config)# show rmon interfaces gi1 statistics
==== Port gi1 ====
etherStatsDropEvents      0
etherStatsOctets          : 81882
```

etherStatsPkts	578
etherStatsBroadcastPkts	10
etherStatsMulticastPkts	0
etherStatsCRCAlignErrors	0
etherStatsUnderSizePkts	0
etherStatsOverSizePkts	0
etherStatsFragments	0
etherStatsJabbers	0
etherStatsCollisions	0
etherStatsPkts64Octets	355
etherStatsPkts65to127Octets	126
etherStatsPkts128to255Octets	0
etherStatsPkts256to511Octets	42
etherStatsPkts512to1023Octets	55
etherStatsPkts1024to1518Octets	0

show rmon event

Syntax

show rmon event (<1-65535> | all)

Parameter

<1-65535>	specifies event index to show
all	Show all existed event

Default

No default is defined

Mode

Privileged EXEC

Usage

Use the **show rmon event** command to show existed RMON event entry.

Example

The example shows how to show rmon event entry.

```
switch(config)# rmon event 1 log trap public description test owner admin
switch(config)# show rmon event 1
Rmon Event Index      1
Rmon Event Type      : Log and Trap
Rmon Event Community : public
Rmon Event Description : test
Rmon Event Last Sent :
Rmon Event Owner     : admin
```

show rmon event log

Syntax	show rmon event <1-65535> log
Parameter	<1-65535> specifies event index to show event log
Default	No entry and log is exist
Mode	Privileged EXEC
Usage	Use the show rmon event log command to show log triggered by RMON alarm.
Example	The example shows how to show rmon event log. switch(config)# show rmon event 1 log =====

```
Index      1
Alarm Index 1
Action     : Startup Falling
Time       : (32918334) 3 days, 19:26:23.34
Description : fa1.Pkts=0 <= 100
```

show rmon alarm

Syntax	show rmon alarm (<1-65535> all)
Parameter	<1-65535> specifies alarm index to show all Show all existed alarm
Default	No alarm is defined
Mode	Privileged EXEC
Usage	Use the show rmon alarm command to show existed RMON alarm entry.

Example	The example shows how to show rmon alarm entry.
----------------	---

```
Switch(config)# rmon alarm 1 interface gi1 pkts 300 delta rising 10000 1
falling 100 1 startup rising-falling owner admin
```

```
Rmon Alarm Index      1
Rmon Alarm Sample Interval  300
Rmon Alarm Sample Interface : gi1
Rmon Alarm Sample Variable : Pkts
Rmon Alarm Sample Type   : delta
Rmon Alarm Type        : Rising or Falling
Rmon Alarm Rising Threshold : 10000
Rmon Alarm Rising Event  1
Rmon Alarm Falling Threshold 100
Rmon Alarm Falling Event  1
Rmon Alarm Owner       : admin
```

show rmon history

Syntax	show rmon history (<1-65535> all)
---------------	--

Parameter	<1-65535> specifies history index to show
	all Show all existed history

Default	No history is defined
----------------	-----------------------

Mode	Privileged EXEC
-------------	-----------------

Usage	Use the show rmon history command to show existed RMON history entry.
--------------	--

Example	The example shows how to show RMON history entry.
----------------	---

```
switch(config)# rmon history 1 interface gi1 interval 30 owner admin
switch(config)# show rmon history 1
Rmon History Index      1
Rmon Collection Interface: gi1
Rmon History Bucket     50
Rmon history Interval   30
Rmon History Owner      : admin
```

show rmon history statistic

Syntax	show rmon history <1-65535> statistic
Parameter	<1-65535> specifies history index to show history statistic
Default	No history is defined
Mode	Privileged EXEC
Usage	Use the show rmon history statistic command to show statistics that are recorded by RMON history.
Example	The example shows how to show RMON history statistics switch(config)# show rmon history 1 statistics =====Sample Index 2 Interval Start : (32940466) 3 days, 19:30:04.66 DropEvents 0 Octets : 117226 Pkts 763 BroadcastPkts 9 MulticastPkts 0 CRCAliasErrors 0 UnderSizePkts 0 OverSizePkts 0 Fragments 0 Jabbers 0 Collisions 0 Utilization 1 =====Sample Index 1 Interval Start : (32939462) 3 days, 19:29:54.62 DropEvents 0 Octets 220 Pkts 3 BroadcastPkts 1 MulticastPkts 0 CRCAliasErrors 0 UnderSizePkts 0 OverSizePkts 0 Fragments 0

Jabbers	0
Collisions	0
Utilization	0

28. SNMP

show snmp

Syntax **show snmp**

Parameter N/A

Default N/A

Mode Privileged EXEC

Usage To show the status of Simple Network Management Protocol (SNMP), use the command **show snmp** in the Privileged EXEC mode.

Example The following example shows the SNMP status.

```
Switch# show snmp
SNMP is disabled.
```

show snmp community

Syntax **show snmp community**

Parameter N/A

Default N/A

Mode Privileged EXEC

Usage To show the configuration of snmp communities, use the command **show snmp community** in the Privileged EXEC mode.

Example

The following example shows the SNMP communities configuration.

```
Switch# show snmp community
Community Name      Group Name          View
Access
-----
-----
private             all
ro
public              all
rw

Total Entries: 2
```

show snmp engineid

Syntax

show snmp engineid

Parameter

N/A

Default

N/A

Mode

Privileged EXEC

Usage

To show the SNMPv3 engine IDs defined on the switch, use the command **show snmp engineid** in the Privileged EXEC mode.

Example

The following example shows the SNMP engind id information.

```
Switch# show snmp engineid
Local SNMPV3 Engine id: 00036d001122

IP address           Remote SNMP engineID
-----
----- 192.168.1.11
00036D10000A

Total Entries: 1
```

show snmp group

Syntax

show snmp group

Parameter

N/A

Default	N/A
Mode	Privileged EXEC
Usage	To show the SNMP group configuration on the switch, use the command show snmp group in the Privileged EXEC mode.
Example	<p>The following example shows the SNMP group configuration.</p> <pre>Switch# show snmp group Group Name Model Level ReadView WriteView Not ----- ----- private v2c noauth all all --- - v3 v3 auth all all all - Total Entries: 2</pre>

show snmp host

Syntax	show snmp host
Parameter	N/A
Default	N/A
Mode	Privileged EXEC
Usage	To show the SNMP trap notification recipients defined on the switch, use the command show snmp host in the Privileged EXEC mode.
Example	<p>The following example shows the configuration of SNMP notification recipients on the switch.</p> <pre>Switch# show snmp host Server Community Name Notification Version Notification Type ----- 192.168.1.11 private v1 trap Total Entries: 1</pre>

show snmp trap

Syntax **show snmp trap**

Parameter N/A

Default N/A

Mode Privileged EXEC

Usage To show the status of SNMP traps on the switch, use the command **show snmp trap** in the Privileged EXEC mode.

Example The following example shows the status of SNMP traps.

```
Switch# show snmp trap
SNMP auth failed trap : Enable
SNMP linkUpDown trap : Enable
SNMP cold-start trap : Enable
SNMP warm-start trap : Enable
```

show snmp view

Syntax **show snmp view**

Parameter N/A

Default N/A

Mode Privileged EXEC

Usage To show the SNMP view defined on the switch, use the command **show snmp view** in the Privileged EXEC mode.

Example The following example shows the configuration of SNMP view.

```
Switch# s how snmp view
View Name                                                  Subtree OID
OID Mask                                                  View Type
-----                                                          -----
-----                                                          -----
```

```
all          .1
all          included
private      .1.3.3.1
all          included
```

Total Entries: 2

show snmp user

Syntax **show snmp user**

Parameter N/A

Default N/A

Mode Privileged EXEC

Usage To show the SNMP users defined on the switch, use the command **show snmp user** in the Privileged EXEC mode.

Example The following example shows the configuration of SNMP user.

```
Switch# show snmp user
Username:           v3
Password:          *****
Privilege Mode:    rw
Access GroupName:  v3
Authentication Protocol: md5
Encryption Protocol: none
Access SecLevel:   auth
```

Total Entries: 1

snmp

Syntax **snmp**

Parameter N/A

Default SNMP is disabled by default

Mode Global Configuration

Usage	To enable the SNMP on the switch, use the command snmp in the Global Configuration mode. Otherwise, use the no form of the command to disable to SNMP.
--------------	--

Example	The following example enables the SNMP.
----------------	---

```
Switch(config) # snmp
```

snmp community

Syntax	snmp community <i>community-name</i> [view <i>view-name</i>] [(ro rw)] snmp community <i>community-name</i> group <i>group-name</i> no snmp community <i>community-name</i>
---------------	---

Parameter	community-name Community name (maximum length is 20 characters). view view-name Community assign the access view. ro Set community access read_only rw set community access read_write group group-name Community assign the access group
------------------	--

Default	No SNMP community is configured
----------------	---------------------------------

Mode	Global Configuration
-------------	----------------------

Usage	To define the SNMP community that permit access for SNMP v1 and v2, use the command snmp community in the Global Configuration mode.
--------------	---

Example	The following example defines the SNMP community named <i>private</i> with the default view <i>all</i> , and the access right is <i>read-only</i> .
----------------	---

```
Switch(config) # snmp community private ro
```

snmp engineid

Syntax	snmp engineid (default ENGINEID)
---------------	---

Parameter	Set snmp engine id default.
<i>ENGINEID</i>	Set snmp engineid engine id(10~64 hex, the hex num must be divided by 2) <u>must be divided by 2.</u>

Default	The default SNMP engine ID on the switch is based on switch MAC address.
----------------	--

Mode	Global Configuration
Usage	To define the SNMP engine on the switch, use the command snmp engineid in the Global Configuration mode.
Example	The following example configure the switch SNMP engine ID

```
Switch(config)# snmp engineid 00036D001122
```

snmp engineid rmote

Syntax	snmp engineid remote (ip-addr ipv6-addr) ENGINEID no snmp engineid remote (ip-addr ipv6-addr)						
Parameter	<table border="0"> <tr> <td><i>ENGINEID</i></td> <td>Specify SNMP engine ID. The engine ID is a 10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.</td> </tr> <tr> <td><i>ip-addr</i></td> <td>IP Address format is A.B.C.D where (A/B/C/D = 0 ~ 255)</td> </tr> <tr> <td><i>ipv6-addr</i></td> <td>IPv6 Address format is X:X::X:X</td> </tr> </table>	<i>ENGINEID</i>	Specify SNMP engine ID. The engine ID is a 10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.	<i>ip-addr</i>	IP Address format is A.B.C.D where (A/B/C/D = 0 ~ 255)	<i>ipv6-addr</i>	IPv6 Address format is X:X::X:X
<i>ENGINEID</i>	Specify SNMP engine ID. The engine ID is a 10 to 64 hexadecimal characters, and the hexadecimal number must be divided by 2.						
<i>ip-addr</i>	IP Address format is A.B.C.D where (A/B/C/D = 0 ~ 255)						
<i>ipv6-addr</i>	IPv6 Address format is X:X::X:X						
Default	N/A						
Mode	Global Configuration						

Usage	To define the remote host for SNMP engine, use the command snmp engineid remote in the Global Configuration mode; and use the no form of the command to delete the remote host from the SNMP engine.
Example	The following example adds the remote <i>192.168.1.11</i> into SNMP engine

```
Switch(config)# snmp engineid remote 192.168.1.11 00036D10000A
```

snmp group

Syntax	snmp group group-name (1 2c 3) (noauth auth priv) read-view read-view write-view write-view [notify-view notify-view] no snmp group group-name security-mode version (1 2c 3)
---------------	--

Parameter	<i>group-name</i>	Specify SNMP group name, and the maximum length is 30 characters.
	(1 2c 3)	Specify the SNMP version.
	noauth	Specify that no packet authentication is performed.
	auth	security level auth .
	priv	security level priv
	read-view <i>read- view</i>	Read view name
	write-view <i>write- view</i>	Write view name.
	notify-view <i>notify- view</i>	Notify view name.
Default	No group entry is existed.	
Mode	Global Configuration	
Usage	<p>To define the SNMP group, use the command snmp group in the Global Configuration mode, and use the no form of the command to delete the configuration.</p> <p>SNMP group configuration is used in the command snmp use to map SNMP users to the SNMP group. These users would be automatically mapped to the SNMP views defined in this command.</p> <p>The security level for SNMP v1 or v2 is always noauth.</p>	
Example	The following example adds SNMPv3 group	
	<pre>Switch(config)# snmp group v3 version 3 auth read-view all write-view all notify-view all</pre>	

snmp host

Syntax	snmp host (<i>ip-addr ipv6-addr hostname</i>) [traps informs] [version (1 2c)] <i>community-name</i> [udp-port <i>udp-port</i>] [timeout <i>timeout</i>] [retries <i>retries</i>] snmp host (<i>ip-addr ipv6-addr hostname</i>) [traps informs] version 3 [(auth noauth priv)] <i>community-name</i> [udp-port <i>udp-port</i>] [timeout <i>timeout</i>] [retries <i>retries</i>] no snmp host (<i>ip-addr ipv6-addr hostname</i>) [traps informs] [version (1 2c 3)]
Parameter	<i>ip-addr</i> The IP address of recipient. <i>ipv6-addr</i> IPv6 Address format is X:X::X:X. <i>hostname</i> Host name. traps Notification type is Traps. informs Notification type is informs. version (1 2c 3) Version of trap or inform. noauth Specify that no packet authentication is performed. It is

	applicable only to the SNMPv3 security mode.
auth	Specify that no packet authentication without encryption is performed. It is applicable only to the SNMPv3 security mode.
priv	Specify that no packet authentication with encryption is performed. It is applicable only to the SNMPv3 security mode.
<i>community-name</i>	The SNMP community sent with the notification.
udp-port <i>udp-port</i>	Udp port number.
timeout <i>timeout</i>	V2c inform timeout
retries <i>retries</i>	V2c inform retries.

Default No SNMP host is configured.
The default SNMP version for the command is SNMPv1.

Mode Global Configuration

Usage To configure the hosts to receive SNMP notifications, use the command **snmp host** in the Global Configuration mode; and use the **no** form of the command to delete the configuration.

Example The following example adds the recipient *192.168.1.11* for the SNMP traps notification.

```
Switch(config)# snmp host 192.168.1.11 private
```

snmp trap

Syntax **snmp trap (auth|cold-start|linkUpDown|port-security|warm-start)**
no snmp trap (auth|cold-start|linkUpDown|port-security|warm-start)

auth	Set snmp authentication failure trap.
cold-start	Set snmp bootup cold start-up trap.
linkUpDown	Set snmp link up and down trap.
port-security	Enable the SNMP port security trap.
warm-start	Set snmp bootup warm start-up trap.

Default All the SNMP traps are enabled.

Mode Global Configuration

Usage To send the SNMP traps, use the command **snmp trap** in the Global Configuration mode; and use the **no** form of the command to disable the SNMP traps.

Example	The following example disables and enables the SNMP link up and down traps individually.
----------------	--

```
Switch(config) # no snmp trap linkUpDown
Switch(config) # snmp trap linkUpDown
```

snmp user

Syntax

snmp user *username group-name [auth (md5|sha) AUTHPASSWD]*
snmp user *username group-name auth (md5|sha) AUTHPASSWD priv*
no snmp user *username*

Parameter

<i>username</i>	Specify the SNMP user name on the host that connects to the SNMP agent. The max character is 30 characters. For the SNMP v1 or v2c, the user name must match the community name by the command snmp host .
<i>group-name</i>	Specify the SNMP group to which the SNMP user belongs. The SNMP group should be SNMPv3 and configured by the command snmp group .
auth (md5)	Use md5 protocol.
auth (sha)	Use sha protocol.
<i>AUTHPASSWD</i>	The password for authentication and the range of length is from 8 to 32 characters.
Priv <i>PRIVPASSWD</i>	Use encryption protocol

Default

N/A

Mode

Global Configuration

Usage

To define a SNMP user, use the command **snmp user** in the Global Configuration mode; and use the **no** form to delete the SNMP user.

Example

The following example adds SNMP user *v3* into the group *v3* by the MD5 authentication.

```
Switch(config) # snmp user v3 v3 auth md5 12345678
```

snmp view

Syntax

snmp view *view-name subtree oid-tree oid-mask (all|oid-mask) viewtype (included|excluded)*
no snmp view *view-name subtree (all|oid-tree)*

Parameter	<i>view-name</i>	The SNMP view name. Its maximum length is 30 characters.
	subtree <i>oid-tree</i>	View subtree.
	oid-mask (all oid- mask)	
	viewtype Subtree oid mask.	
	(included excluded)	Include or exclude the selected MIBs in the view
Default	N/A	
Mode	Global Configuration	
Usage	To configure the SNMP view, use the command snmp view in the Global Configuration mode; and use the no form of the command to delete the SNMP view. The default SNMP view cannot be deleted and modified by users. By default, the maximum numbers of SNMP view is limited to 16.	
Example	The following example defines the SNMP view. Switch(config)# snmp view private subtree 1.3.3.1 oid-mask all viewtype included	

29. Spanning Tree instance (MST)

Syntax	instance <i>instance-id</i> vlan <i>vlan-list</i> no instance <i>instance-id</i> vlan <i>vlan-list</i>
Parameter	<i>instance-id</i> Instance ID (0~15) vlan <i>vlan-list</i> VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094
Default	All VLANs are mapped to the Common and Internal Spanning Tree (CIST) instance (instance 0).
Mode	MST Configuration
Usage	To map the VLAN to the Multiple Spanning Tree (MSTP) instances, use the command instance in the MST Configuration mode; and use the no form of the command to restore its default configuration. All VLANs that are not explicitly configured to an MSTP instance are mapped to the CIST instance (instance 0).

For two or more switches in the same MSTP region, their VLAN mapping, name and revision number configuration, must be the same.

Example

The following example maps the vlan 10-20 to the MSTP instance 1, and VLAN 100 to instance 2.

```
Switch(config)# spanning-tree mst configuration
Switch(config-mst)# instance 1 vlan 10-20
Switch(config-mst)# instance 2 vlan 100
```

revision (MST)

Syntax

revision *rev*
no revision

Parameter

rev The MSTP revision number. Its valid range is from 0 to 65535.

Default

The default revision number is 0.

Mode

MST Configuration

Usage

To define the revision for the MSTP configuration, use the command **revision** in the MST Configuration mode; and use the **no** form of the command to restore its default configuration.

Example

The following example defines the revision MSTP configuration to 1.

```
Switch(config)# spanning-tree mst configuration
Switch(config-mst)# revision 1
```

show spanning-tree

Syntax

show spanning-tree

Parameter

N/A

Default

N/A

Mode

Privileged EXEC

Usage	To display the spanning tree configuration, use the command <code>spanning-tree</code> in the Privileged EXEC mode
--------------	--

Example	The following example shows the spanning tree configuration.
----------------	--

```
Switch# show spanning-tree

Spanning tree enabled mode RSTP
Default port cost method: short

Root ID      Priority      32768
Address      00:11:22:33:44:55
This switch is the root
Hello Time   4 sec    Max Age 10 sec  Forward Delay
25 sec

Number of topology changes 2 last change occurred 20:34:30
ago
Times: hold 0, topology change 0, notification 0
hello 4, max age 10, forward delay 25

Interfaces
Name       State     Prio.Nbr     Cost     Sts     Role EdgePort
Type
-----
gi23      enabled     128.23      19      Blk     Desg      No P2P
(RSTP)
-----
```

show spanning-tree interface

Syntax	show spanning-tree interface <i>IF_PORTS</i> [<i>statistic</i>]
---------------	--

Parameter	interface An interface ID or the list of interface IDs. <i>IF_PORTS</i>
------------------	---

Default	statistic Display the STP statistic for an interface.
----------------	--

Mode	Privileged EXEC
-------------	-----------------

Usage	To show the STP configuration and statistics for an interface, use the command <code>show spanning-tree interface</code> in the Privileged EXEC mode.
--------------	---

Example	The following example shows the STP configuration for the interface fa23.
----------------	---

```
Switch# show spanning-tree interfaces GigabitEthernet 23

Port fa23 enabled
```

State: forwarding	Role:
designated	
Port id: 128.23	Port cost: 19
Type: P2P (RSTP)	Edge Port: No
Designated bridge Priority : 32768	Address:
00:11:22:33:44:55	
Designated port id: 128.23	Designated path
cost: 0	
BPDU Filter: Disabled	BPDU guard:
Disabled	
BPDU: sent 21886, received 0	

The following example shows the STP statistic for the interface fa23.

```
Switch# show spanning-tree interfaces fa23 statistic
      STP Port Statistic
=====
Port          : gi23
Configuration BDPUs Received   : 0
TCN BDPUs Received           : 0
MSTP BDPUs Received          : 0
Configuration BDPUs Transmitted: 0
TCN BDPUs Transmitted        : 0
MSTP BDPUs Transmitted       : 21917
=====
```

show spanning-tree mst

Syntax

show spanning-tree mst *instance-id*

Parameter

<i>instance-id</i>	The MSTP instance ID. Its valid range is from 0 to 15.
--------------------	--

Default

N/A

Mode

Privileged EXEC

Usage

To show the information for a specific MSTP instance, use the command **show spanning-tree mst** in the Privileged EXEC mode.

Example

The following example displays the information for the MSTP instance 0 and 1 individually.

```
Switch# show spanning-tree mst 0
      MST Instance Information
=====
      Instance Type : CIST (0)
      Bridge Identifier : 32768/ 0/00:11:22:33:44:55
```

```
-----
      Designated Root Bridge : 32768/ 0/00:11:22:33:44:55
      External Root Path Cost : 0
      Regional Root Bridge : 32768/ 0/00:11:22:33:44:55
      Internal Root Path Cost : 0
      Designated Bridge : 32768/ 0/00:11:22:33:44:55
      Root Port : 0/0
      Max Age : 10
      Forward Delay : 25
      Topology changes : 3
      Last Topology Change : 930
-----
      VLANs mapped: 1-99,111-4094
=====

Interface          Role  Sts  Cost      Prio.Nbr Type
-----  -----  -----  -----  -----
gi23              Desg  FWD  19       128.23   P2P (RSTP)

Switch# show spanning-tree mst 1
MST Instance Information
=====
      Instance Type : MSTI (1)
      Bridge Identifier : 32768/ 0/00:11:22:33:44:55
-----
      Regional Root Bridge : 32768/ 0/00:11:22:33:44:55
      Internal Root Path Cost : 0
      Remaining Hops : 10
      Topology changes : 3
      Last Topology Change : 933
-----
      VLANs mapped: 100-110
=====
Interface          Role  Sts  Cost      Prio.Nbr Type
-----  -----  -----  -----  -----
fa23              Desg  FWD  19       128.23   P2P (RSTP)
```

show spanning-tree mst configuration

Syntax	show spanning-tree mst configuration
---------------	---

Parameter	N/A
------------------	-----

Default	N/A
----------------	-----

Mode	Privileged EXEC
-------------	-----------------

Usage	To show the global MST configuration, use the command show spanning-tree mst configuration in the Privileged EXEC mode.
--------------	--

Example	The following example shows the global MST configuration.
----------------	---

```
Switch# show spanning-tree mst
configuration Name
[00:11:22:33:44:55]
Revision 0 Instances configured 2

Instance Vlans mapped
-----
--- 0 1-99,111-4094
1 100-110
-----
```

show spanning-tree mst interface

Syntax	show spanning-tree mst <i>instance-id</i> interface <i>IF_PORTS</i>
---------------	--

Parameter	<i>instance-id</i> Instance ID (0~15)
	interface An interface ID or the list of interface IDs.
	<i>IF_PORTS</i>

Default	N/A
----------------	-----

Mode	Privileged EXEC
-------------	-----------------

Usage	To show the MSTP instance information on the specific interface, use the command show spanning-tree mst interface in the Privileged EXEC mode.
--------------	---

Example	The following example shows the MSTP 0 and 1 information individually on the interface fa23.
----------------	--

```
Switch# show spanning-tree mst 0 interfaces
fa23 MST Port Information
=====
=====
Instance Type : CIST (0)
-----
-----
Port Identifier : 128/23
External Path-Cost : 0 /19
Internal Path-Cost : 0 /19
-----
Designated Root Bridge : 32768/00:11:22:33:44:55
External Root Cost : 0
```

```
Regional Root Bridge : 32768/00:11:22:33:44:55
    Internal Root Cost : 0
    Designated Bridge : 32768/00:11:22:33:44:55
Internal Port Path Cost : 19
    Port Role : Designated
    Port State : Forwarding
-----
Switch# show spanning-tree mst 1 interfaces GigabitEthernet 23

MST Port Information
=====
Instance Type : MSTI (1)
-----
    Port Identifier : 128/23
    Internal Path-Cost : 0      /19
-----
    Regional Root Bridge : 32768/00:11:22:33:44:55
    Internal Root Cost : 0
    Designated Bridge : 32768/00:11:22:33:44:55
Internal Port Path Cost : 19
    Port Role : Designated
    Port State : Forwarding
-----
```

spanning-tree

Syntax

spanning-tree
no spanning-tree

Parameter

N/A

Default

Spanning-Tree is disabled by default.

Mode

Global Configuration

Usage

To enable the spanning tree, use the command **spanning-tree** in the Global Configuration mode; and use the **no** form of the command to disable the spanning tree on the switch.

Example

The following example disables and enables the spanning tree individually.

```
Switch(config)# no spanning-tree
Switch(config)# spanning-tree
```

spanning-tree bpdu

Syntax	spanning-tree bpdu (filtering flooding) no spanning-tree bpdu
Parameter	filtering bpdu packets are filtered when stp is disabled on ports flooding bpdu packets are flooded to all ports with stp disabled and flooding mode
Default	The default configuration is flooding.
Mode	Global Configuration
Usage	To configure the action of Bridge Protocol Data Unit (BPDU) handling when STP is disabled, use the command spanning-tree bpdu in the Global Configuration mode. To restore the configuration to the default action, use the no form of the command.
Example	The following example configures the action of BPDU handling to filter when the STP is disabled.
	Switch(config)# spanning-tree bpdu filtering

spanning-tree bpdu-filter

Syntax	spanning-tree bpdu-filter no spanning-tree bpdu-filter
Parameter	N/A
Default	BPDU filter is disabled.
Mode	Interface Configuration
Usage	To enable the BPDU filter, use the command spanning-tree bpdu-filter in the Interface Configuration mode; and use no form of the command to disable the BPDU filter.
Example	The following example enables the BPDU filter for interface fa1.
	Switch(config)# interface GigabitEthernet 1 Switch(config-if)# spanning-tree bpdu-filter

spanning-tree bpdu-guard

Syntax	spanning-tree bpdu-guard no spanning-tree bpdu-guard
Parameter	N/A
Default	BPDU guard is disabled
Mode	Interface Configuration
Usage	To enable the BPDU filter, use the command spanning-tree bpdu-guard in the Interface Configuration mode; and use no form of the command to disable the BPDU filter.
Example	The following example enables the BPDU guard for interface gi1. Switch(config)# interface gi1 Switch(config-if)# spanning-tree bpdu-guard

spanning-tree cost

Syntax	spanning-tree cost <i>cost</i> no spanning-tree cost												
Parameter	<i>cost</i> The value of external path cost (0 = Auto)												
Default	The default port path cost is 0, and it is determined by the port speed and the path cost method (long or short).												
	<table border="1"><thead><tr><th>Interface</th><th>Long</th><th>Short</th></tr></thead><tbody><tr><td>Gigabit Ethernet (1000Mbps)</td><td>20000</td><td>4</td></tr><tr><td>Fast Ethernet (100Mbps)</td><td>200000</td><td>19</td></tr><tr><td>Ethernet (10Mbps)</td><td>2000000</td><td>100</td></tr></tbody></table>	Interface	Long	Short	Gigabit Ethernet (1000Mbps)	20000	4	Fast Ethernet (100Mbps)	200000	19	Ethernet (10Mbps)	2000000	100
Interface	Long	Short											
Gigabit Ethernet (1000Mbps)	20000	4											
Fast Ethernet (100Mbps)	200000	19											
Ethernet (10Mbps)	2000000	100											
Mode	Interface Configuration												
Usage	To configure the STP path cost for an interface, use the command spanning-tree cost in the Interface Configuration mode; and use the no form of the command to restore it to the default configuration.												
Example	The following example configures port path cost to 30000 for interface fa2.												

```
Switch(config)# interface g1  
Switch(config-if)# spanning-tree cost 30000
```

spanning-tree forward-time

Syntax	spanning-tree forward-delay <i>seconds</i> no spanning-tree forward-delay
Parameter	<i>seconds</i> Forward-delay interval
Default	The default forward delay time is 15 seconds.
Mode	Global Configuration
Usage	To configure the STP bridge forward delay time, which is the amount of time that a port remains in the Listening and Learning states before it enters the Forwarding state, use the command spanning-tree forward-time in the Global Configuration mode. To restore it to the default configuration, use the no form of the command. When the forward delay time is configured, the following relationship should be maintained: $2 * (\text{forward-time} - 1) \geq \text{Max-Age}$
Example	The following example configures STP forward delay time to 25. <code>Switch(config) # spanning-tree forward-time 25</code>

spanning-tree hello-time

Syntax	spanning-tree hello-time <i>seconds</i> no spanning-tree hello-time
Parameter	<i>seconds</i> specifies hello time of Spanning-tree
Default	The default STP hello time is 2 seconds.
Mode	Global Configuration
Usage	STP hello time is the time interval to broadcast its hello message to other bridges. To configure the STP hello time, use the command spanning-tree hello-time in the Global Configuration mode; and use the no form of the

command to restore the hello time to default configuration.

When the hello time is configured, the following relationship should be maintained:

$$\text{Max-Age} \geq 2 * (\text{hello-time} + 1)$$

Example

The following example configures BPDU hello time to 4.

```
Switch(config) # spanning-tree hello-time 4
```

spanning-tree edge

Syntax

spanning-tree edge
no spanning-tree edge

Parameter

N/A

Default

The default configuration is disabled.

Mode

Interface Configuration

Usage

To enable the edge mode for an interface, use the command **spanning-tree edge** in the Interface Configuration mode; and use the **no** form of the command to restore it to the default configuration.

In the edge mode, the interface would be put into the Forwarding state immediately upon link up. If the edge mode is enabled for the interface and there are BPDUs received on the interface, the loop might be occurred in the short time.

Example

The following example enables the edge mode for the interface fa1.

```
Switch(config) # interface GigabitEthernet 1
Switch(config-if) # spanning-tree edge
```

spanning-tree link-type

Syntax

spanning-tree link-type (point-to-point|shared)
no spanning-tree link-type

Parameter

point-to-point	Consider the interface as point-to-point
shared	Consider the interface as shared

Default	The default configuration link type is point-to-point for the ports with full duplex configuration, and shared for the ports with half duplex settings.
----------------	---

Mode	Interface Configuration
-------------	-------------------------

Usage	To set the RSTP link-type for an interface, use the command spanning-tree link in the Interface Configuration mode. For the default configuration, use the no form of the command.
--------------	--

Example	The following example configures the link-type to point-to-point for the interface fa1.
----------------	---

```
Switch(config)# interface fa1
Switch(config-if)# spanning-tree link-type point-to-point
```

spanning-tree max-hops

Syntax	spanning-tree max-hops <i>counts</i> no spanning-tree max-hops
---------------	---

Parameter	<i>counts</i> Specify the number of hops in an MSTP region before the BPDU is discarded. The valid range is 1 to 40.
------------------	--

Default	The default max-hops configuration is 20.
----------------	---

Mode	Global Configuration
-------------	----------------------

Usage	To specify the number of hops for a BPDU to be forwarded in the MSTP region, use the command spanning-tree max-hops in the Global Configuration mode; and restore the setting to default configuration by the no form of the command.
--------------	---

Example	The following example specifies the max hops for BPDU to 10.
----------------	--

```
Switch(config)# spanning-tree max-hops 10
```

spanning-tree maximum-age

Syntax	spanning-tree maximum-age <i>seconds</i> no spanning-tree maximum-age
---------------	--

Parameter	<i>seconds</i> Interval the switch waits between receiving BPDUs from the root switch
------------------	---

Default	The default maximum age is 20 seconds.
----------------	--

Mode	Global Configuration
-------------	----------------------

Usage	To set the interval in seconds that the switch can wait without receiving the configuration messages, before attempting to redefine its own configuration, use the command spanning-tree maximum-age in the Global Configuration mode. For the default configuration, use the no form of the commands.
--------------	--

When the maximum age is configured, the following relationship should be maintained:

$$2 * (\text{forward-time} - 1) \geq \text{Max-Age} \geq 2 * (\text{hello-time} + 1)$$

Example	The following example configures STP maximum age to 10.
----------------	---

```
Switch(config) # spanning-tree maximum-age 10
```

spanning-tree mcheck

Syntax	spanning-tree mecheck
---------------	------------------------------

Parameter	N/A
------------------	-----

Default	N/A
----------------	-----

Mode	Interface Configuration
-------------	-------------------------

Usage	To restart the Spanning Tree Protocol (STP) migration process (re-negotiate forcibly with its neighborhood) on the specific interface, use the command spanning-tree mcheck in the Interface Configuration mode
--------------	--

Example	The following example restarts the STP negotiation on the interface fa1.
----------------	--

```
Switch(config) # interface fa1
Switch(config-if) # spanning-tree mecheck
```

spanning-tree mode

Syntax	spanning-tree mode (mstp rstp stp) no spanning-tree force-version
---------------	--

Parameter	mstp	Configure IEEE 802.1S Multiple Spanning Tree
	rstp	Configure IEEE 802.1W Rapid Spanning Tree Protocol
	stp	Configure IEEE 802.1D Spanning Tree Protocol

Default The default mode is **rstp**.

Mode Global Configuration

Usage To specify the spanning tree operation mode, use the command of **spanning-tree mode** in the Global Configuration mode. For the default configuration, use the command **no spanning-tree force-version** in the Global Configuration mode.

When the switch is configured as MSTP mode, it can use STP and RSTP for the backward compatibility with switches working in STP and RSTP mode individually. For the RSTP configuration, the switch can also use STP for the switches working in the STP operation.

Example The following example sets the STP operation to MSTP.

```
Switch(config) # spanning-tree mode mstp
```

spanning-tree mst configuration

Syntax **spanning-tree mst configuration**

Parameter N/A

Default N/A

Mode Global Configuration

Usage To enter the MST configuration mode for the MSTP configuration modification, use the command **spanning-tree mst configuration** in the Global Configuration mode.

Example The following example modifies the MSTP configuration in the MST Configuration mode.

```
Switch(config) # spanning-tree mst configuration
Switch(config-mst) # instance 1 vlan 10-20
Switch(config-mst) # name Valkyrie
Switch(config-mst) # revision 1
```

spanning-tree mst cost

Syntax

spanning-tree mst *instance-id* cost *cost*
no spanning-tree mst *instance-id* cost *cost*

Parameter

<i>instance-id</i>	Instance ID (0~15)
<i>cost</i>	The value of internal path cost (0 = Auto)

Default

The default port path cost is 0, and it is determined by the port speed and the path cost method (long or short).

Interface	Long	Short
Gigabit Ethernet (1000Mbps)	20000	4
Fast Ethernet (100Mbps)	200000	19
Ethernet (10Mbps)	2000000	100

Mode

Interface Configuration

Usage

To configure the path cost for MSTP calculations, use the command **spanning-tree mst cost** in the Interface Configuration mode. If the loop occurs, the MSTP considers the path cost when selecting the interface into the Forwarding state. For the default configuration, use the no form of the command.

When configuring the path cost on the CIST (instance 0), it is equal to the command **spanning-tree cost** in the Interface Configuration mode.

Example

The following example configures the path cost of interface g1 on the instance 1 to 30000

```
Switch(config)# interface g1
Switch(config-if)# spanning-tree mst 1 cost 30000
```

spanning-tree mst port-priority

Syntax

spanning-tree mst *instance-id* port-priority *priority*
no spanning-tree mst *instance-id* port-priority

Parameter

<i>instance-id</i>	Instance ID (0~15)
<i>priority</i>	Priority (0~240)

Default

The default port priority on each instance is 128

Mode

Interface Configuration

Usage	To configure the interface priority on the specific instances, use the command spanning-tree mst port-priority in the Interface Configuration mode. For the default configuration, use the no form of the command.
	The priority value must be the multiple of 16. When the port priority on the CIST (instance 0) is configured, it is equal to the command spanning-tree port-priority in the Interface Configuration mode.

Example	The following example sets the port priority of g1 on the instance 1 to 144; and set the port priority of g1 on the CIST (instance 0) to 96
	<pre>Switch(config) # interface g1 Switch(config-if) # spanning-tree mst 1 port-priority 144 Switch(config-if) # spanning-tree mst 0 port-priority 96</pre>

spanning-tree mst priority

Syntax	spanning-tree mst instance <i>instance-id</i> priority <i>priority</i> no spanning-tree mst instance <i>instance-id</i> priority				
Parameter	<table border="0"> <tr> <td><i>instance-id</i></td> <td>Instance ID (0~15)</td> </tr> <tr> <td><i>priority</i></td> <td>Priority (0~61440)</td> </tr> </table>	<i>instance-id</i>	Instance ID (0~15)	<i>priority</i>	Priority (0~61440)
<i>instance-id</i>	Instance ID (0~15)				
<i>priority</i>	Priority (0~61440)				
Default	The default priority on each instance is 32768.				
Mode	Global Configuration				
Usage	To configure the bridge priority on the specific instance, use the command spanning-tree mst priority in the Global Configuration mode. To restore the default configuration, use the no form of the command.				
	The value of bridge priority must be the multiple of 4096. A switch with the lowest priority is the root of the STP topology. For the configuration of bridge priority on the CIST (instance 0), it is equal to the command spanning-tree priority in the Global Configuration mode.				
Example	The following example modifies the bridge priority to 4096 on instance 0 and instance 1 individually.				
	<pre>Switch(config) # spanning-tree mst 0 priority 4096 Switch(config) # spanning-tree mst 1 priority 4096</pre>				

spanning-tree pathcost method

Syntax

spanning-tree pathcost method (long|short)

Parameter

long	The range for the path cost is from 1 to 200000000.
-------------	---

Default

short	The range for the path cost is from 1 to 65535.
--------------	---

The default path cost method is long.

Mode

Global Configuration

Usage

To set the spanning tree path cost method, use the command **spanning-tree pathcost method** in the Global Configuration mode.

If the short method is specified, the switch calculates the path cost in the range 1 through 65535; Otherwise, it calculates the path cost in the range 1 to 200000000.

Example

The following example modifies path cost method to short.

```
Switch(config) # spanning-tree pathcost method short
```

spanning-tree pathcost method

Syntax

spanning-tree pathcost method (long|short)

Parameter

long	Specifies that the default port path costs are within the range: 1-200,000,000.
-------------	---

short	Specifies that the default port path costs are within the range: 1-65,535.
--------------	--

Default

The default path cost method is long.

Mode

Global Configuration

Usage

To set the spanning tree path cost method, use the command **spanning-tree pathcost method** in the Global Configuration mode.

If the short method is specified, the switch calculates the path cost in the range 1 through 65535; Otherwise, it calculates the path cost in the range 1 to 200000000.

Example	The following example modifies path cost method to short.
<pre>Switch(config)# spanning-tree pathcost method short</pre>	

spanning-tree port-priority

Syntax	spanning-tree port-priority <i>priority</i> no spanning-tree port-priority <i>priority</i>
Parameter	<i>priority</i> Priority (0~240)
Default	The default priority for each interface is 128.
Mode	Interface Configuration
Usage	To configure the STP priority for an interface, use the command spanning-tree port-priority in the Interface Configuration mode. For the default configuration, use the no form of the command. The priority value must be the multiple of 16.
Example	The following example modifies the port priority to 96 for the interface gi2 . <pre>Switch(config)# interface gi2 Switch(config-if)# spanning-tree port-priority 96</pre>

spanning-tree priority

Syntax	spanning-tree priority <i>priority</i> no spanning-tree priority
Parameter	<i>priority</i> Priority (0~61440)
Default	The default priority for the switch 32768.
Mode	Global Configuration
Usage	To configure the bridge priority, use the command spanning-tree mst priority in the Global Configuration mode. To restore the default configuration, use the no form of the command.

The value of bridge priority must be the multiple of 4096. A switch with the lowest priority is the root of the STP topology. When switches with the same priority configuration in the environment, the switch with lowest MAC address would be selected as the root bridge.

Example

The following example modifies the bridge priority to 4096.

```
Switch(config)# spanning-tree priority 4096
```

spanning-tree tx-hold-count

Syntax

spanning-tree tx-hold-count *count*
no spanning-tree tx-hold-count

Parameter

count Specifies the tx hold count

Default

The default value is 6.

Mode

Global Configuration

Usage

To limit the maximum numbers of packets transmission per second, use the command **spanning-tree tx-hold-count** in the Global Configuration mode. For the default configuration, use the **no** form of the command.

Example

The following example sets the tx-hold-count to 4.

```
Switch(config)# spanning-tree tx-hold-count 4
```

30. Storm Control

show storm-control

Syntax

show storm-control
show storm-control interface *IF_PORTS*

Parameter

IF_PORTS Specify port to show.

Default

No default value for this command

Mode	Privileged EXEC
Usage	<p>Use “show storm-control” command to show all storm control related configurations including global configuration and per port configurations.</p> <p>Use “show storm-control interface” command to show selected port storm control configurations.</p>
Example	<p>This example shows how to show storm control global configuration.</p> <pre>Switch# show storm-control Storm control preamble and IFG: Excluded Storm control unit: bps </pre> <p>This example shows how to show current storm control configuration on interface gi1</p> <pre>Switch# show storm-control interfaces GigabitEthernet 1 Port State Broadcast Unknown-Multicast Unknown-Unicast Action kbps kbps kbps -----+-----+-----+-----+-----+-----+-----+ --- gi1 disable Off(10000) Off(10000) Off(10000) Drop</pre>

storm-control

Syntax	storm-control no storm-control
Parameter	storm-control (broadcast unknown-unicast unknown-multicast) no storm-control (broadcast unknown-unicast unknown-multicast) broadcast Broadcast storm control unknown-unicast Unknown-unicast storm control unknown-multicast Unknown-multicast storm control
Default	Default storm control is disabled. Default broadcast storm control is disabled. Default unknown multicast storm control is disabled Default unknown unicast storm control is disabled
Mode	Interface Configuration
Usage	Storm control function is able to enable/disable on each single port. Use the “ storm control ” command to enable storm control feature on the selected ports. And use “ no storm control ” command to disable storm control feature. Not only port is able to enable/disable on the port. Each storm control type is also able to enable/disable on each single port.

Use the “**storm-control (broadcast|unknown-unicast|unknown-multicast)**” command to enable the storm control type you need and use no form to disable it.

Example

This example shows how to enable storm control on interface gi1.

```
Switch(config)# interface gi1
Switch(config-if)# storm-control
```

This example shows how to enable broadcast storm control and configure broadcast storm control rate to 200.

```
Switch(config)# interface gi1
Switch(config-if)# storm-control broadcast
```

This example shows how to show current storm control configuration on interface gi1

Switch# show storm-control interfaces gi1					
Action	Port	State	Broadcast	Unknown-Multicast	Unknown-Unicast
			pps	pps	pps
---	gi1	enable	200	Off(10000)	Off(10000)
	Shutdown				

storm-control action

Syntax

storm-control action (drop | shutdown)

no storm-control action

Parameter

drop Drop packets after exceed storm control threshold

shutdown Shut down port after exceed storm control threshold

Default

Default storm control action is drop.

Mode

Interface Configuration

Usage

Use “**storm-control action**” command to set the action when the received storm control packets exceed the maximum rate on an interface.

Use **no** form to restore to default action.

Example

This example shows how to configure storm control action to shutdown port on interface gi1.

```
Switch(config)# interface gi1
Switch(config-if)# storm-control action shutdown
```

This example shows how to show storm control action on interface gi1.

Switch# show storm-control interfaces gi1					
Action	Port	State	Broadcast	Unknown-Multicast	Unknown-Unicast
			pps	pps	pps
---	gi1	disable	Off(10000)	Off(10000)	Off(10000)
	Shutdown				

storm-control ifg

Syntax	storm-control ifg (include exclude)				
Parameter	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">include</td><td style="padding: 2px;">Include preamble and IFG</td></tr> <tr> <td style="padding: 2px;">exclude</td><td style="padding: 2px;">Exclude preamble and IFG</td></tr> </table>	include	Include preamble and IFG	exclude	Exclude preamble and IFG
include	Include preamble and IFG				
exclude	Exclude preamble and IFG				
Default	Default storm control inter frame gap is excluded.				
Mode	Global Configuration				
Usage	<p>Storm control mechanism will try to calculate ingress packets is exceed configured rate or not and do corresponding action. Use storm-control ifg command to include/exclude the preamble and inter frame gap into the calculating.</p>				
Example	<p>This example shows how to configure storm inter frame gap to include.</p> <pre>Switch(config)# storm-control ifg include</pre> <p>This example shows how to show storm control global configuration.</p> <pre>Switch# show storm-control Storm control preamble and IFG: Included Storm control unit: pps </pre>				

storm-control level

Syntax	storm-control (broadcast unknown-unicast unknown-multicast) level <1-1000000> no storm-control (broadcast unknown-unicast unknown-multicast) level						
Parameter	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">broadcast</td><td style="padding: 2px;">Select broadcast storm control type</td></tr> <tr> <td style="padding: 2px;">unknown-unicast</td><td style="padding: 2px;">Select unknown unicast storm control type</td></tr> <tr> <td style="padding: 2px;">unknown-multicast</td><td style="padding: 2px;">Select unknown multicast storm control type</td></tr> </table>	broadcast	Select broadcast storm control type	unknown-unicast	Select unknown unicast storm control type	unknown-multicast	Select unknown multicast storm control type
broadcast	Select broadcast storm control type						
unknown-unicast	Select unknown unicast storm control type						
unknown-multicast	Select unknown multicast storm control type						

<1-1000000> Rate value(bps:16-1000000,pps:1-262143)

Default	Default broadcast storm control rate is 10000. Default unknown multicast storm control rate is 10000. Default unknown unicast storm control rate is 10000.
----------------	--

Mode	Interface Configuration
-------------	-------------------------

Usage	Each control type is allowed to have different storm control rate.
--------------	--

Use “**storm-control (broadcast|unknown-unicast|unknown-multicast) level**” command to configure it

Use no form to restore to default rate.

Example	This example shows how to enable broadcast storm control and configure broadcast storm control rate to 200.
----------------	---

```
Switch(config)# interface g1
Switch(config-if)# storm-control broadcast
Switch(config-if)# storm-control broadcast level 200
```

This example shows how to show current storm control configuration on interface g1

```
Switch# show storm-control interfaces GigabitEthernet 1
  Port      | State | Broadcast   | Unkown-Multicast | Unknown-Unicast |
Action          |       | pps         |                 | pps             |
               |       |             |                 |                 |
-----+-----+-----+-----+-----+-----+-----+
---  g1       enable        200           Off( 10000)      Off( 10000)
Shutdowm
```

storm-control unit

Syntax	storm-control unit (bps pps)
---------------	---------------------------------------

Parameter	bps Bits per second
------------------	----------------------------

Parameter	pps Packets per second
------------------	-------------------------------

Default	Default storm control unit is bps.
----------------	------------------------------------

Mode	Global Configuration
-------------	----------------------

Usage	Storm control mechanism will try to calculate ingress packets is exceed configured rate or not and do corresponding action.
--------------	---

Use **storm-control unit** command to change the unit of calculating method.

Example	This example shows how to configure storm control rate unit as pps. Switch(config)# storm-control unit pps
----------------	--

This example shows how to show storm control global configuration.
Switch# show storm-control Storm control preamble and IFG: Excluded Storm control unit: pps

31. System File

boot system

Syntax	boot system (image0 image1)
---------------	--------------------------------------

Parameter	image0 Runtime image 0
	image1 Runtime image 1

Default	Default boot image is image0.
----------------	-------------------------------

Mode	Global Configuration
-------------	----------------------

Usage	Dual image allow user to have a backup image in the flash partition. Use “ boot system ” command to select the active firmware image. And another firmware image will become a backup one.
--------------	--

Example	This example shows how to select image1 as active image.
----------------	--

```
Switch(config)# boot system image1
Select "image1" Success
```

This example shows how to show active image partition.
--

```
Switch# show flash
-----
```

File Name	File Size	Modified
startup-config	1191	2000-01-01 00:00:23
backup-config	1607	2000-01-01 08:36:23
rsa1	974	2000-01-01 00:00:18
rsa2	1675	2000-01-01 00:00:18
dsa2	668	2000-01-01 00:00:18
ssl cert	993	2000-01-01 00:00:18
image0 (backup)	4372401	2012-09-24 01:57:29
image1 (active)	5555970	2012-06-12 12:17:46

copy

Syntax	copy (flash:// tftp://) (flash:// tftp://) copy tftp:// (backup-config running-config startup-config) copy (backup-config running-config startup-config) tftp://
copy (backup-config startup-config) running-config copy (backup-config running-config) startup-config	

copy (running-config | startup-config) backup-config

Parameter	flash://	Specify the file stored in flash to operation. Available files are: flash://startup-config flash://backup-config flash://rsa1 flash://rsa2 flash://dsa2 flash://image0 flash://image1 flash://ram.log flash://flash.log
	tftp://	Specify remote tftp server and remote file name. The format is “ tftp://192.168.1.111/remote_file_name ”
	running-config	Running configuration
	startup-config	Startup configuration
	backup-config	Backup configuration

Default No default value for this command.

Mode Privileged EXEC

Usage There are many types of files in system. These files are very important for administrator to manage the switch. The most common file operation is copy. By using these copy commands, we can upgrade, backup following type of files.

- **Firmware Image**
- **Configuration Files**
- **Syslog Files**
- **Language Files**
- **Security Certificate**

Example This example shows how to copy running configuration to startup configuration.

```
Switch# copy running-config startupst-config
```

This example shows how to backup running configuration to remote tftp server 192.168.111 with file name test1.cfg.

```
Switch# copy running-config tftp://192.168.1.111/test1.cfg
Uploading file. Please Wait...
Uploading Done
Success
```

This example shows how to upgrade startup configuration from remote tftp server 192.168.1.111 with file name test2.cfg.

```
Switch# copy tftp://192.168.1.111/test2.cfg startup-config
Downloading file. Please Wait...
Downloading Done
```

Upgrade config success. Do you want to reboot now? (y/n) n

This example shows how to backup security file dsa2 to remote tftp server 192.168.1.111 with file name dsa2.

```
Switch# copy flash://dsa2 tftp://192.168.1.111/dsa2
Uploading file. Please Wait...
Uploading Done
```

delete

Syntax

delete (startrup-config | backup-config | flash://)

delete system (image0 | image1)

Parameter

flash://	Specify the configuration file stored in flash to delete. Available files are: flash://startup-config flash://backup-config
startup-config	Delete startup configuration file
backup-config	Delete backup configuration file
image0	Delete flash image0.
image1	Delete flash image1.

Default

No default value for this command.

Mode

Privileged EXEC

Usage

Use “**delete**” command to delete configuration files or use “**delete system**” command to delete firmware image stored in flash.

The “**delete startup-config**” command is using to restore factory default and it is equal to command “**restore-defaults**”.

Example

This example shows how to delete backup configuration file.

```
Switch# delete backup-config
```

This example shows how to delete backup firmware image from flash.

```
Switch# delete system image1
```

This example shows how to show file status in flash.

```
Switch# show flash
```

File Name	File Size	Modified
startup-config	1191	2000-01-01 00:00:23
backup-config	1607	2000-01-01 08:36:23
rsa1	974	2000-01-01 00:00:18
rsa2	1675	2000-01-01 00:00:18

dsa2	668	2000-01-01 00:00:18
ssl_cert	993	2000-01-01 00:00:18
image0 (active)	4372401	2012-09-24 01:57:29
image1 (backup)	0	

restore-defaults

Syntax

restore-defaults [interfaces *IF_PORTS*]

Parameter

interfaces	Specify port to restore its' running config
<i>IF_PORTS</i>	

Default

No default value for this command.

Mode

Privileged EXEC

Usage

Use “**restore-defaults**” command to restore factory default of all system. The command is equal to “**delete startup-config**”,

Example

This example shows how to restore factory defaults.

```
Switch# restore-defaults
Restore Default Success. Do you want to reboot now? (y/n)n
```

save

Syntax

save

Parameter

Default

No default value for this command.

Mode

Privileged EXEC

Usage

Use “**save**” command to save running configuration to startup configuration file. This command is equal to “**copy running-config startup-config**”.

Example

This example shows how to save running configuration to startup configuration.

```
Switch# save
Success
```

This example shows how to show startup configuration

```
Switch# show startup-config
! System Description: RTK RTL8328-24FE-4GE Switch
! System Version: v2.5.0-beta.32811
! System Name: SwitchEF0102
! System Up Time: 0 days, 4 hours, 31 mins, 43 secs
!
!
!
!
username "" privilege user secret "dnXencJRwf1V6"
username "admin" secret "FzjrGO6vfbERY"
voice-vlan vpt 0
voice-vlan dscp 0
.....
```

show bootvar

Syntax	show bootvar															
Parameter																
Default	No default value for this command.															
Mode	Privileged EXEC															
Usage	Use “ show bootvar ” command to show image information in both flash partitions. It also shows current active image and active image on next booting.															
Example	<p>This example shows how to show dual image information</p> <pre>Switch# show bootvar</pre> <table border="1"> <thead> <tr> <th>Image</th> <th>Version</th> <th>Date</th> <th>Status</th> <th>File Name</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>3.0.5</td> <td>2014-09-22 16:53:53</td> <td>Active</td> <td>v3.0.5.bix</td> </tr> <tr> <td>1</td> <td>3.1.0</td> <td>2014-10-09 18:32:26</td> <td>Not active*</td> <td>v3.1.0.bix</td> </tr> </tbody> </table>	Image	Version	Date	Status	File Name	0	3.0.5	2014-09-22 16:53:53	Active	v3.0.5.bix	1	3.1.0	2014-10-09 18:32:26	Not active*	v3.1.0.bix
Image	Version	Date	Status	File Name												
0	3.0.5	2014-09-22 16:53:53	Active	v3.0.5.bix												
1	3.1.0	2014-10-09 18:32:26	Not active*	v3.1.0.bix												

show config

Syntax	show (running-config startup-config backup-config)								
	show running-config interfaces <i>IF_PORTS</i>								
Parameter	<table border="1"> <tr> <td>running-config</td> <td>Running configuration</td> </tr> <tr> <td>startup-config</td> <td>Startup configuration</td> </tr> <tr> <td>backup-config</td> <td>Backup configuration</td> </tr> <tr> <td><i>IF_PORTS</i></td> <td>Specify port to show its' running config</td> </tr> </table>	running-config	Running configuration	startup-config	Startup configuration	backup-config	Backup configuration	<i>IF_PORTS</i>	Specify port to show its' running config
running-config	Running configuration								
startup-config	Startup configuration								
backup-config	Backup configuration								
<i>IF_PORTS</i>	Specify port to show its' running config								

Default	No default value for this command.
----------------	------------------------------------

Mode	Privileged EXEC
-------------	-----------------

Usage	Our configuration file is text based. Therefore, we can show the configuration on terminal and read it by this command.
--------------	---

Use “**show config**” command to show configuration files stored in system.

Use “**show config interfaces**” command to show specific port configurations.

Example	This example shows how to show startup configuration
	<pre>Switch# show startup-config ! System Description: RTK RTL8328-24FE-4GE Switch ! System Version: v2.5.0-beta.32811 ! System Name: SwitchEF0102 ! System Up Time: 0 days, 4 hours, 31 mins, 43 secs ! ! ! ! username "" privilege user secret "dnXencJRwf1V6" username "admin" secret "FzjrGO6vfbERY" voice-vlan vpt 0 voice-vlan dscp 0</pre>

This example shows how to show running configuration

```
Switch# show running-config
! System Description: RTK RTL8328-24FE-4GE Switch
! System Version: v2.5.0-beta.32811
! System Name: SwitchEF0102
! System Up Time: 0 days, 5 hours, 23 mins, 42 secs
!
!
!
!
username "" privilege user secret "dnXencJRwf1V6"
username "admin" secret "FzjrGO6vfbERY"
voice-vlan vpt 0
voice-vlan dscp 0
.....
```

This example shows how to display running configuraiton on specific port.

```
Switch# show running-config interfaces g1
interface g1
    rate-limit ingress 128
```

show flash

Syntax

show flash

Parameter

Default

No default value for this command.

Mode

Privileged EXEC

Usage

Use “**show flash**” command to show all files’ status which stored in flash.

Example

This example shows how to show all files status stored in flash.

Switch# **show flash**

File Name	File Size	Modified
startup-config	1191	2000-01-01 00:00:23
backup-config	1607	2000-01-01 08:36:23
rsa1	974	2000-01-01 00:00:18
rsa2	1675	2000-01-01 00:00:18
dsa2	668	2000-01-01 00:00:18
ssl_cert	993	2000-01-01 00:00:18
image0 (active)	4372401	2012-09-24 01:57:29
image1 (backup)	0	

32. Surveillance VLAN

surveillance-vlan (Global)

Syntax

surveillance-vlan
no surveillance -vlan

Parameter

Default

Surveillance VLAN is disabled

Mode

Global Configuration

Usage

Use the **surveillance vlan** global configuration command to enable the functional Surveillance VLAN on the device.

Use the **no** form of this command to disable Surveillance VLAN function. You can verify your setting by entering the **show surveillance vlan** Privileged EXEC command.

Example

The following example shows how to enable Surveillance VLAN.

Switch(config)# **surveillance -vlan**

```
Switch# show surveillance -vlan
Administate Surveillance VLAN state : disabled
Surveillance VLAN ID      : none (disable)
Surveillance VLAN Aging   : 1440 minutes
Surveillance VLAN CoS     : 6
Surveillance VLAN 1p Remark: disabled
```

OUI table	
OUI MAC	Description
-----+-----	

surveillance-vlan (Interface)

Syntax

```
surveillance-vlan
no surveillance-vlan
```

Parameter

N/A

Default

Disable by default.

Mode

Interface Configuration

Usage

Use the **surveillance vlan** Interface configuration command to enable OUI surveillance VLAN configuration on an interface

Use the **no** form of this command to disable Surveillance VLAN on an interfaces

You can verify your setting by entering the **show surveillance vlan** **Privileged EXEC** command

Example

The following example how to enable Surveillance VLAN function in oui mode on an interface

```
Switch(config)#interface range GigabitEthernet 3
```

```
Switch(config-if)#surveillance-vlan
```

```
Switch# show surveillance-vlan interfaces GigabitEthernet 1-3
```

Port	State	Port Mode	Cos Mode
-----+-----+-----			

```
gi1 | Disabled | Auto | Src
```

```
gi2 | Disabled | Auto | Src
```

```
gi3 | Enabled | Auto | Src
```

surveillance-vlan vlan

Syntax

```
surveillance-vlan vlan <1-4094>
no surveillance-vlan vlan
```

Parameter	<1-4094>	Specify the Surveillance VLAN ID
Default	The default Surveillance VLAN ID is None.	
Mode	Global Configuration	
Usage	<p>Use the surveillance vlan id global configuration command to configure the VLAN identifier of the surveillance VLAN statically.</p> <p>Use the no form of this command to restore surveillance VLAN id to default.</p> <p>You can verify your setting by entering the show surveillance vlan Privileged EXEC command</p>	
Example	<p>The following example shows how to set Surveillance VLAN id. The VLAN id must be created first.</p> <pre>Switch(config)# surveillance-vlan vlan 128 Switch# show surveillance-vlan Administate Surveillance VLAN state : enabled Surveillance VLAN ID 128 Surveillance VLAN Aging : 1440 minutes Surveillance VLAN CoS 6 Surveillance VLAN 1p Remark: disabled</pre>	

surveillance-vlan oui-table

Syntax	surveillance-vlan oui-table A:B:C [DESCRIPTION] no surveillance-vlan oui-table [A:B:C]				
Parameter	<table border="0"> <tr> <td>A:B:C</td> <td>OUI address(xx:xx:xx)</td> </tr> <tr> <td>DESCRIPTION</td> <td>OUI description string</td> </tr> </table>	A:B:C	OUI address(xx:xx:xx)	DESCRIPTION	OUI description string
A:B:C	OUI address(xx:xx:xx)				
DESCRIPTION	OUI description string				
Default	Default has no pre-defined OUI.				
Mode	Global Configuration				
Usage	<p>Use the surveillance vlan oui-table global configuration command to add OUI mac address to OUI Table</p> <p>Use the no form of this command to remove all or specified OUI mac address..</p> <p>You can verify your setting by entering the show surveillance vlan Privileged EXEC command</p>				

Example	<p>This following example shows how to add OUI Mac.</p> <pre>Switch(config)# surveillance-vlan oui-table 00:01:02 "Test" Switch# show surveillance-vlan</pre> <p>Administratve Surveillance VLAN state : enabled Surveillance VLAN ID : 3 Surveillance VLAN Aging : 1440 minutes Surveillance VLAN CoS : 6 Surveillance VLAN 1p Remark: disabled</p> <p>OUI table</p> <table border="1"> <thead> <tr> <th>OUI MAC</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>00:01:02</td> <td> Test</td> </tr> </tbody> </table>	OUI MAC	Description	00:01:02	Test
OUI MAC	Description				
00:01:02	Test				

surveillance-vlan cos (Global)

Syntax	surveillance-vlan cos <0-7> [remark] no surveillance-vlan cos				
Parameter	<table border="0"> <tr> <td><0-7></td> <td>Specify the Surveillance VLAN Class Of Service</td> </tr> <tr> <td>remark</td> <td>Surveillance VLAN Remark setting</td> </tr> </table>	<0-7>	Specify the Surveillance VLAN Class Of Service	remark	Surveillance VLAN Remark setting
<0-7>	Specify the Surveillance VLAN Class Of Service				
remark	Surveillance VLAN Remark setting				
Default	The default cos value is 6, remark is disabled.				
Mode	Global Configuration				
Usage	<p>Use the surveillance vlan cos global configurations command to configure the surveillance VLAN cos value and 1p remark function.</p> <p>Use the “no” form to restore to default mode.</p> <p>You can verify your setting by entering the show surveillance vlan Privileged EXEC command</p>				
Example	<p>The following example show how to set cos value and enable 1p remark function</p> <pre>Switch(config)# surveillance-vlan cos 7 remark Switch# show surveillance-vlan</pre> <p>Administratve Surveillance VLAN state : disabled Surveillance VLAN ID : 128 Surveillance VLAN Aging : 1440 minutes Surveillance VLAN CoS : 7 Surveillance VLAN 1p Remark: enabled</p> <p>OUI table</p> <table border="1"> <thead> <tr> <th>OUI MAC</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>00:11:22</td> <td> desc</td> </tr> </tbody> </table>	OUI MAC	Description	00:11:22	desc
OUI MAC	Description				
00:11:22	desc				

surveillance-vlan cos (Interface)

Syntax	surveillance-vlan cos (src all) no surveillance-vlan cos				
Parameter	<table border="1"> <tr> <td>src</td><td>Specify QoS attributes are applied to packets with OUIs in the source MAC address.</td></tr> <tr> <td>All</td><td>Specify QoS attributes are applied to packets that are classified to the Surveillance VLAN.</td></tr> </table>	src	Specify QoS attributes are applied to packets with OUIs in the source MAC address.	All	Specify QoS attributes are applied to packets that are classified to the Surveillance VLAN.
src	Specify QoS attributes are applied to packets with OUIs in the source MAC address.				
All	Specify QoS attributes are applied to packets that are classified to the Surveillance VLAN.				
Default	The default all port in Src mode.				
Mode	Interface configuration				
Usage	<p>Use the surveillance vlan cos mode Interface configuration command to configure OUI surveillance VLAN cos mode configuration on an interface. Use the “no” form to restore to default mode.</p> <p>You can verify your setting by entering the show surveillance-vlan interfaces Privileged EXEC command</p>				
Example	<p>The following example how to configure surveillance packet QoS attributes on an interface</p> <pre>Switch(config)#interface range GigabitEthernet 1-3 Switch(config-if -range)#surveillance-vlan cos all Switch# show surveillance-vlan interfaces fa1-3 Port State Port Mode Cos Mode -----+-----+-----+ gi1 Disabled Auto All gi2 Disabled Auto All gi3 Disabled Auto All</pre>				

surveillance-vlan mode

Syntax	surveillance-vlan mode (auto manual) no surveillance-vlan mode				
Parameter	<table border="1"> <tr> <td>auto</td><td>Surveillance Member Port Join Voice VLAN Automatically</td></tr> <tr> <td>manual</td><td>Voice Member Port Join Voice VLAN Manually By Administrator</td></tr> </table>	auto	Surveillance Member Port Join Voice VLAN Automatically	manual	Voice Member Port Join Voice VLAN Manually By Administrator
auto	Surveillance Member Port Join Voice VLAN Automatically				
manual	Voice Member Port Join Voice VLAN Manually By Administrator				
Default	The default is auto mode.				
Mode	Interface Configuration				

Usage	<p>Use the surveillance-vlan mode global configuration command to configure the surveillance VLAN mode for interface.</p> <p>Use the “no” form to restore to default mode.</p> <p>You can verify your setting by entering the show surveillance-vlan interfaces Privileged EXEC command.</p>
--------------	---

Example	<p>The following example how to configure surveillance mode to manual</p> <pre>Switch(config)#interface range GigabitEthernet 1-3 Switch(config-if)#surveillance-vlan mode manual Switch# show surveillance-vlan interfaces GigabitEthernet 1-3 Port State Port Mode Cos Mode -----+-----+-----+ gi1 Disabled Manual Src gi2 Disabled Manual Src gi3 Disabled Manual Src</pre>
----------------	--

surveillance-vlan aging-time

Syntax	surveillance-vlan aging-time <30-65536> no surveillance-vlan aging-time
Parameter	<30-65536> Specify the Surveillance VLAN aging timeout interval in minutes
Default	The default aging-timeout value is 1440 minutes
Mode	Global Configuration
Usage	<p>Use the surveillance vlan aging-time global configuration command to configure the surveillance VLAN aging timeout.</p> <p>Use the “no” form to restore to default time.</p> <p>You can verify your setting by entering the show surveillance vlan Privileged EXEC command</p>
Example	<p>The following example shows how to set aging time.</p> <pre>Switch(config)# surveillance-vlan aging-time 720 Switch# show surveillance-vlan Administratve Surveillance VLAN state : disabled Surveillance VLAN ID : 1 Surveillance VLAN Aging : 720 minutes Surveillance VLAN CoS : 5 Surveillance VLAN 1p Remark: enabled</pre>

```
OUI table
OUI MAC | Description
-----+
00:11:22 | desc
```

show surveillance-vlan

Syntax	show surveillance-vlan show surveillance-vlan interfaces [IF_PORTS]
Parameter	IF_PORTS Specifies interfaces to display surveillance VLAN settings in OUI mode
Default	N/A
Mode	Privileged EXEC
Usage	Use the show surveillance vlan command in EXEC mode to display the surveillance VLAN status for all interfaces or for a specific interface if the surveillance VLAN type is OUI
Example	<p>The following example show how to display surveillance vlan OUI mode settings</p> <pre>Switch# show surveillance-vlan Administate Surveillance VLAN state : disabled Surveillance VLAN ID : none (disable) Surveillance VLAN Aging : 720 minutes Surveillance VLAN CoS : 6 Surveillance VLAN 1p Remark: disabled</pre> <p>Switch# show surveillance-vlan interfaces GigabitEthernet 1-4</p> <pre>Surveillance VLAN Aging : 720 minutes Surveillance VLAN CoS : 5 Surveillance VLAN 1p Remark: enabled</pre> <p>OOUI table</p> <pre>OUI MAC Description -----+ 00:01:02 Test</pre>

33. Time

clock set

Syntax	clock set HH:MM:SS (jan feb mar apr may jun jul aug sep oct nov dec) <1-31> <2000-2035>	
Parameter	HH:MM:SS(jan feb mar apr may jun jul aug sep oct nov dec) <1-31> <2000-2035>	Specify static time of year, month, day, hour, minute,second
Default	No default is defined. The clock set to 2000/01/01 08:00:00 by default at startup.	
Mode	Privileged EXEC	
Usage	Use the clock set command to set static time. The static time won't save to configuration file. You can verify your setting by entering the show clock Privileged EXEC command.	
Example	The example shows how to set static time of switch. Switch# clock set 00:00:00 dec 1 2000 2000-12-01 00:00:00 UTC+8 switch# show clock 2000-12-01 00:02:10 UTC+8 Time set manually	

clock timezone

Syntax	clock timezone ACRONYM HOUR-OFFSET [minutes <0-59>] no clock timezone	
Parameter	ACRONYM	The acronym of the time zone (1-4 chars)
	HOUR-OFFSET	<-12-13> Hours difference from UTC
	Minutes <1-59>	Minutes difference from UTC
Default	Default time zone is UTC+8.	
Mode	Global Configuration	
Usage	Use the clock timezone command to set timezone setting. Use the no form of this command to restore to default setting.	

You can verify your setting by entering the **show clock detail Privileged EXEC** command.

Example

The example shows how to set time zone of switch and then restore to default time zone.

```
switch(config)# clock timezone test +5
switch# show clock detail
```

2000-11-30 21:27:58 test(UTC+5)
Time set manually

Time zone:
Acronym is test
Offset is UTC+5

```
switch(config)# no clock timezone
switch# show clock detail
```

2000-12-01 00:30:59 UTC+8
Time set manually

Time zone:
Acronym is
Offset is UTC+8

clock source

Syntax

clock source (local|ntp)

Parameter

local	Local
ntp	SNTP Server

Default

Default is using local time.

Mode

Global Configuration

Usage

Use the **clock source** command to set the source of time.
Use the **no** form of this command to restore to default setting.
You can verify your setting by entering the **show clock detail Privileged EXEC** command.

Example

The example shows how to set clock source of switch.

```
switch(config)# clock source ntp
```

switch# **show clock detail**

2000-12-01 00:35:47 UTC+8

Time source is sntp

Time zone:

Acronym is

Offset is UTC+8

clock summer-time

Syntax

```
clock summer-time ACRONYM date
(jan|feb|mar|apr|may|jun|jul|aug|sep|oct|nov|dec) <1-31><2000-2037>
HH:MM (jan|feb|mar|apr|may|jun|jul|aug|sep|oct|nov|dec) <1-31><2000-
2037> HH:MM [<1-1440>]
clock summer-time ACRONYM recurring (usa|eu) [<1-1440>]
clock summer-time ACRONYM recurring (<1-5>|first|last)
(sun|mon|tue|wed|thu|fri|sat)
(jan|feb|mar|apr|may|jun|jul|aug|sep|oct|nov|dec) HH:MM (<1-
5>|first|last) (sun|mon|tue|wed|thu|fri|sat)
(jan|feb|mar|apr|may|jun|jul|aug|sep|oct|nov|dec) HH:MM [<1-1440>]
no clock summer-time
```

Parameter

ACRONYM	Specify acronym name of time zone
(jan feb mar apr may jun jul aug sep oct nov dec) <1-31> <2000-2037> HH:MM	Specify non-recurring daylight saving time duration.
(jan feb mar apr may jun jul aug sep oct nov dec) <1-31><2000- 2037> HH:MM <1-1440>	Specify adjust offset of daylight saving time
usa	Summer time rules are the United States rules. Start: Second Sunday in March End: First Sunday in November Time: 2 am local time
eu	Summer time rules are the European Union rules. Start: Last Sunday in March End: Last Sunday in October Time: 1 am local time
(<1-5> first last) (sun mon tue wed thu fri sat) (jan feb mar apr may jun jul aug sep oct nov dec) HH:MM (<1-5> first last) (sun mon tue wed thu fri sat) (jan feb mar apr may jun jul aug sep oct nov dec)	Specify recurring daylight saving time duration.

HH:MM

Default No default daylight saving time is defined.

Mode Global Configuration

Usage Use the **clock summer-time** command to set daylight saving time for system time. The “**usa**” or “**eu**” means that use the global daylight saving policy which defined by international organization. In both the “**date**” and “**recurring**”, the first part of the command specifies when summer time begins, and the second part specifies when it ends. All times are relative to the local time zone. The “**recurring**” means that adjust time every year within the month.

Use the no form of this command to default setting.

You can verify your setting by entering the **show clock detail**

Privileged EXEC command.

Example The example shows how to set clock summer time of switch. You can verify settings by the following show show clock command.

```
switch(config)# clock summer-time test recurring usa
switch# show clock detail
```

Time zone:

Acronym is

Offset is UTC+8

Summertime:

Acronym is test

Recurring every year.

Begins at 2 0 3 2:0

Ends at 1 0 11 2:0

Offset is 60 minutes.

show clock

Syntax **show clock [detail]**

Parameter **detail** Show timezone and summertime configuration

Default No default is defined

Mode Privileged EXEC

Usage	Use the show clock command to show clock of switch. The “ detail ” means that show more information of clock such as time zone and daylight saving time.
--------------	--

Example	The example shows how to show clock of switch and detail information.
----------------	---

```
Switch334455(config)# clock source sntp
Switch334455(config)# clock summer-time DLS recurring usa
Switch334455(config)# sntp host 192.168.1.100
Switch334455# show clock
```

2000-12-01 01:33:24 UTC+8
Time source is sntp

```
Switch334455# show clock detail
2000-12-01 01:34:15 UTC+8
Time source is sntp
```

Time zone:
Acronym is
Offset is UTC+8

Summertime:
Acronym is DLS
Recurring every year.
Begins at 2 0 3 2:0
Ends at 1 0 11 2:0
Offset is 60 minutes.

sntp

Syntax	sntp host HOSTNAME [port <1-65535>] no sntp
---------------	--

Parameter	HOSTNAME Hostname String
------------------	---------------------------------

Default	No default SNTP server defined. Default server port is 123 when server created.
----------------	---

Mode	Global Configuration
-------------	----------------------

Usage	Use the sntp command to set remote SNTP server. Use the no form of this command to default setting. You can verify your setting by entering the show sntp Privileged EXEC command.
--------------	---

Example	The example shows how to set remote SNTP server of switch. switch(config)# clock source sntp switch(config)# sntp host 192.168.1.100 switch# show sntp SNTP is Enabled SNTP Server address: 192.168.1.100 SNTP Server port: 123
----------------	--

show sntp

Syntax	show sntp
Parameter	None
Default	No default is defined

Mode	Privileged EXEC
-------------	-----------------

Usage	Use the show sntp command to remote SNTP server information.
--------------	---

Example	The example shows how to show remote SNTP server. Switch334455# show sntp SNTP is Enabled SNTP Server address: 192.168.1.100 SNTP Server port: 123
----------------	---

34. UDLD

errdisable recovery cause udld

Syntax	errdisable recovery cause udld no errdisable recovery cause udld
Parameter	N/A
Default	Error disable auto recovery is disabled by default.

Mode	Global EXEC
-------------	-------------

Usage	Use the errdisable recovery cause udld to enable auto recovery of UniDirectional Link Detection (UDLD). Use the “ no ” to disable it.						
Example	The example shows how to enable auto recovery of UniDirectional Link Detection (UDLD).						
	<pre>switch(config)# errdisable recovery cause udld switch# show errdisable recovery ErrDisable Reason Timer Status -----+ bpduguard disabled udld enabled selfloop disabled broadcast-flood disabled unknown-multicast-flood disabled unicast-flood disabled acl disabled psecure-violation disabled dhcp-rate-limit disabled arp-inspection disabled</pre>						
	Timer Interval : 300 seconds						
	Interfaces that will be enabled at the next timeout:						
	<table border="0"> <thead> <tr> <th>Port</th> <th>Error Disable Reason</th> <th>Time Left</th> </tr> </thead> <tbody> <tr> <td>-----+-----+-----+</td> <td></td> <td></td> </tr> </tbody> </table>	Port	Error Disable Reason	Time Left	-----+-----+-----+		
Port	Error Disable Reason	Time Left					
-----+-----+-----+							
udld							
Syntax	udld no udld						
Parameter	N/A						
Default	UDLD is disabled by default.						
Mode	Interface Configuration						
Usage	<p>Use the udld command to enable UniDirectional Link Detection (UDLD) normal mode of interface. Use the no form of this command to restore to default setting. You can verify your setting by entering the show udld interface Privileged EXEC command.</p>						

Example	The example shows how to enable UniDirectional Link Detection (UDLD) normal mode in interface GigabitEthernet 1.
----------------	--

```
switch(config)# interface GigabitEthernet 1
switch(config-if)# udld
switch# show udld interfaces GigabitEthernet 1
Port enable administrative configuration setting: Enabled
Port enable operational state: Enabled
Current bidirectional state: Unknown
Current operational state: Link up
Message interval: 7
Time out interval: 5
No neighbor cache information stored
```

udld aggressive

Syntax	udld aggressive no udld aggressive
Parameter	N/A
Default	UDLD aggressive mode is disabled by default.
Mode	Interface Configuration
Usage	<p>Use the udld aggressive command to enable UniDirectional Link Detection (UDLD) aggressive mode of interface.</p> <p>Use the no form of this command to restore to default setting.</p> <p>You can verify your setting by entering the show udld interface Privileged EXEC command.</p>
Example	<p>The example shows how to enable udld aggressive mode in interface gi1.</p> <pre>switch(config)# interface gi1 switch(config-if)# udld switch# show udld interfaces gi1 Port enable administrative configuration setting: Enabled / in aggressive mode Port enable operational state: Enabled / in aggressive mode Current bidirectional state: Bidirectional Current operational state: Advertisement - SINGLE NEIGHBOR DETECTED</pre>

udld message time

Syntax	udld message time <i>message-time-interval</i>
Parameter	<i>message-time-interval</i> Specify the interval for sending message. Range is 1 -90 seconds.
Default	Default interval is 15 seconds.
Mode	Global Configuration
Usage	Use the udld message time to set interval of UniDirectional Link Detection (UDLD) sent message.
Example	The example shows how to set interval of UniDirectional Link Detection (UDLD) message.

switch(config)# udld message time 30

udld reset

Syntax	udld reset
Parameter	N/A
Default	No default is defined
Mode	Privileged EXEC
Usage	Use the udld reset command to reset all interfaces disabled by the UniDirectional Link Detection (UDLD) and permit traffic to begin passing through them again. If the interface configuration is still enabled for UDLD, these ports begin to run UDLD again and are disabled for the same reason if the problem has not been corrected.
Example	The example shows how to reset all interfaces disabled by UDLD Switch# udld reset 1 ports shutdown by UDLD were reset.

show udld

Syntax

show udld
show udld interfaces *IF_NMLPORTS*

Parameter

IF_NMLPORTS Specify the normal interfaces to display udld information

Default

No default is defined

Mode

Privileged EXEC

Usage

Use the **show udld** command to display UniDirectional Link Detection (UDLD) administrative and operational status for all ports or the specified port.

Example

The example shows how to show UniDirectional Link Detection (UDLD) settings and operational status of interface gi1.

```
Switch334455(config)# show udld interfaces gi1  
Interface gi1
```

```
---  
Port enable administrative configuration setting: Enabled / in aggressive mode  
Port enable operational state: Enabled / in aggressive mode  
Current bidirectional state: Bidirectional  
Current operational state: Advertisement - SINGLE NEIGHBOR  
DETECTED  
Message interval: 15  
Time out interval: 5
```

Entry 1

```
---  
Expiration time: 20  
Current neighbor state: Bidirectional  
Device ID :COM4  
Device name: com4  
Port ID: gi3  
Message interval: 7  
Time out interval: 5  
Neighbor echo 1 device: COM3  
Neighbor echo 1 port: gi11
```

35. VLAN

vlan

Syntax

```
vlan  
no vlan
```

Default

VLAN 1 created by default

Mode

Global Configuration

Usage

Use the **vlan** global configuration command to create VLAN.
Use the **no** form of this command to remove exist VLAN.
You can verify your setting by entering the **show vlan Privileged EXEC** command.

Example

The following example creates and removes a VLAN entry (100).

```
Switch# configure
Switch (config)# vlan 100
Switch# show vlan
```

VID	VLAN Name	Untagged Ports	Tagged Ports	Type
1	default	fa1-48,gi1-4,lag1-8	---	Default
100	VLAN0100	---	---	Static

Name (vlan)

Syntax

```
name NAME
```

Parameter

NAME Specify the name of the VLAN (Max. 32 chars).

Default

Default name of new vlan is VLANxxxx. Xxxx is 4-digit vlan number.

Mode

VLAN Configuration

Usage

Use the **name** vlan configuration command to set name of vlan
You can verify your setting by entering the **show vlan Privileged EXEC** command.

Example

This example sets the VLAN name of VLAN 100 to be 'VLAN-one-hundred'.

```
SwitchEF0101(config)# vlan 100
SwitchEF0101(config-vlan)# name VLAN-one-hundred
Switch# show vlan
VID | VLAN Name | Untagged Ports | Tagged Ports | Type
-----+-----+-----+-----+-----+
 1 | default | fa1-48,gi1-4,lag1-8 | --- | Default
100 | VLAN-one-hundred | --- | --- | Static
```

switchport mode

Syntax

switchport mode (access | hybrid | trunk [uplink] | tunnel)

Parameter

access	Access port.
hybrid	Hybrid port.
trunk	Trunk port.
uplink	Uplink mode.
tunnel	Tunnel port.

Default

Default is trunk mode of all interfaces

Mode

Port Configuration

Usage

The VLAN mode is used to configure the port for different port role.

Access port: Accepts only untagged frames and join an untagged VLAN.

Hybrid port: Support all functions as defined in IEEE 802.1Q specification.

Trunk port: An untagged member of one VLAN at most, and is a tagged member of zero or more VLANs. If it is an uplink port, it can recognize double tagging on this port.

Tunnel port: Port-based Q-in-Q mode.

Use the **switch mode** port configuration command to set mode of interface. You can verify your setting by entering the **show interfaces switchport Privileged EXEC** command.

Example

This example sets VLAN mode to Access port.

```
SwitchEF0101(config)# interface GigabitEthernet 12
SwitchEF0101(config-if)# switchport mode access
SwitchEF0101# show interfaces switchport GigabitEthernet 12
Port : gi12
Port Mode : Access
Gvrp Status : disabled
Ingress Filtering : enabled
Acceptable Frame Type : untagged-only
Ingress UnTagged VLAN ( NATIVE ) : 1
Trunking VLANs Enabled:
```

Port is member in:

Vlan	Name	Egress rule
1	default	Untagged

Forbidden VLANs:

Vlan	Name
-----	-----

SwitchEF0101#

switchport hybrid pvid

Syntax **switchport hybrid pvid <1-4094>**

Parameter	<1-4094> VLAN ID (e.g. 100)
------------------	--

Default Default pvid is 1.

Mode Port Configuration

Usage Use the **switch hybrid pvid** port configuration command to set pvid of interface.
You can verify your setting by entering the **show interfaces switchport Privileged EXEC** command.

Example This example sets PVID to 100.

```

SwitchEF0101(config)# interface GigabitEthernet 10
SwitchEF0101(config-if)# switchport mode hybrid
SwitchEF0101(config-if)# switchport hybrid pvid 100
SwitchEF0101# show interfaces switchport GigabitEthernet 10
Port : gi10
Port Mode : Hybrid
Gvrp Status : disabled
Ingress Filtering : enabled
Acceptable Frame Type : all
Ingress UnTagged VLAN ( NATIVE ) : 100
Trunking VLANs Enabled:

```

Port is member in:

Vlan	Name	Egress rule
1	default	Untagged

Forbidden VLANs:

Vlan Name

SwitchEF0101#

switchport hybrid ingress-filtering

Syntax

switchport hybrid ingress-filtering
no switchport hybrid ingress-filtering

Default

Default is enabled

Mode

Port Configuration

Usage

Use the **switchport hybrid ingress-filtering** port configuration command to enable vlan ingress filter.

Use the **no** form of this command to disable.

You can verify your setting by entering the **s show interfaces switchport Privileged EXEC** command.

Example

This example sets ingress-filtering to disable.

```
SwitchEF0101(config)# interface GigabitEthernet 10
SwitchEF0101(config-if)# switchport mode hybrid
SwitchEF0101(config-if)#no switchport hybrid ingress-filtering
SwitchEF0101# show interfaces switchport GigabitEthernet 10
Port : gi10
Port Mode : Hybrid
Gvrp Status : disabled
Ingress Filtering : disabled
Acceptable Frame Type : all
Ingress UnTagged VLAN ( NATIVE ) : 100
Trunking VLANs Enabled:
```

Port is member in:

Vlan	Name	Egress rule
------	------	-------------

1	default	Untagged
---	---------	----------

Forbidden VLANs:

Vlan Name

SwitchEF0101#

switchport hybrid acceptable-frame-type

Syntax	switchport hybrid acceptable-frame-type (all tagged-only untagged-only)
---------------	--

Parameter	<table border="0"> <tr> <td style="width: 15%;">all</td><td>Accept tagged and untagged frames</td></tr> <tr> <td>tagged-only</td><td>Only accept tagged frames</td></tr> <tr> <td>untagged-only</td><td>Only accept untagged and priority-tagged frames</td></tr> </table>	all	Accept tagged and untagged frames	tagged-only	Only accept tagged frames	untagged-only	Only accept untagged and priority-tagged frames
all	Accept tagged and untagged frames						
tagged-only	Only accept tagged frames						
untagged-only	Only accept untagged and priority-tagged frames						

Default	Default is accept all frames
----------------	------------------------------

Mode	Port Configuration
-------------	--------------------

Usage	Use the switchport hybrid accept-frame-type port configuration command to choose which type of frame can be accepted.
--------------	--

You can verify your setting by entering the **s show interfaces switchport Privileged EXEC** command

Example	<p>This example sets acceptable-frame-type to tagged-only.</p> <pre>SwitchEF0101(config)# interface fa10 SwitchEF0101(config-if)# switchport mode hybrid SwitchEF0101(config-if)# switchport hybrid acceptable-frame-type tagged-only SwitchEF0101# show interfaces switchport fa10 Port : gi10 Port Mode : Hybrid Gvrp Status : disabled Ingress Filtering : disabled Acceptable Frame Type : tagged-only Ingress UnTagged VLAN (NATIVE) : 100 Trunking VLANs Enabled:</pre>
----------------	---

Port is member in:

Vlan	Name	Egress rule
------	------	-------------

1	default	Untagged
---	---------	----------

Forbidden VLANs:

Vlan	Name
------	------

SwitchEF0101#

switchport hybrid allowed vlan

Syntax	switchport hybrid allowed vlan add VLAN-LIST [(tagged untagged)] switchport hybrid allowed vlan remove VLAN-LIST																							
Parameter	VLAN-LIST VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094 tagged Tagged untagged Untagged																							
Default	Only vlan 1 is untagged member by default. Default is tagged member when added.																							
Mode	Port Configuration																							
Usage	<p>Use the switchport hybrid allow vlan add port configuration command to allow vlan on interface.</p> <p>Use the switchport hybrid allow vlan remove port configuration command to remove vlan on interface.</p> <p>You can verify your setting by entering the s show interfaces switchport Privileged EXEC command.</p>																							
Example	<p>This example sets port fa10 VLAN to join the VLAN 100 as tagged member.</p> <pre>SwitchEF0101(config)# interface GigabitEthernet 10 SwitchEF0101(config-if)# switchport hybrid allowed vlan add 100-105 SwitchEF0101(config-if)# switchport hybrid allowed vlan remove 105 SwitchEF0101# show interfaces switchport GigabitEthernet 10 Port : gi10 Port Mode : Hybrid Gvrp Status : disabled Ingress Filtering : disabled Acceptable Frame Type : tagged-only Ingress UnTagged VLAN (NATIVE) : 100 Trunking VLANs Enabled:</pre> <p>Port is member in:</p> <table border="1"> <thead> <tr> <th>Vlan</th> <th>Name</th> <th>Egress rule</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>default</td> <td>Untagged</td> </tr> <tr> <td>100</td> <td>VLAN-one-hundred</td> <td>Tagged</td> </tr> <tr> <td>101</td> <td>VLAN0101</td> <td>Tagged</td> </tr> <tr> <td>102</td> <td>VLAN0102</td> <td>Tagged</td> </tr> <tr> <td>103</td> <td>VLAN0103</td> <td>Tagged</td> </tr> <tr> <td>104</td> <td>VLAN0104</td> <td>Tagged</td> </tr> </tbody> </table> <p>Forbidden VLANs:</p> <table border="1"> <thead> <tr> <th>Vlan</th> <th>Name</th> </tr> </thead> </table>	Vlan	Name	Egress rule	1	default	Untagged	100	VLAN-one-hundred	Tagged	101	VLAN0101	Tagged	102	VLAN0102	Tagged	103	VLAN0103	Tagged	104	VLAN0104	Tagged	Vlan	Name
Vlan	Name	Egress rule																						
1	default	Untagged																						
100	VLAN-one-hundred	Tagged																						
101	VLAN0101	Tagged																						
102	VLAN0102	Tagged																						
103	VLAN0103	Tagged																						
104	VLAN0104	Tagged																						
Vlan	Name																							

SwitchEF0101#

switchport access vlan

Syntax	switchport access vlan <1-4094> No switchport access vlan
Parameter	<1-4094> VLAN ID (e.g. 100)
Default	Default is vlan 1
Mode	Port Configuration
Usage	<p>Use the switchport access vlan port configuration command to set native vlan on interface. The vlan will be pvid on interface as well.</p> <p>Use the no form of this command to restore to default vlan</p> <p>You can verify your setting by entering the show interfaces switchport Privileged EXEC command.</p>
Example	<p>This example sets Access port fa10 native VLAN ID to 100.</p> <pre>SwitchEF0101(config)# interface GigabitEthernet 10 SwitchEF0101(config-if)# switchport mode access SwitchEF0101(config-if)# switchport access vlan 100 SwitchEF0101# show interfaces switchport GigabitEthernet 10 Port : gi10 Port Mode : Access Gvrp Status : disabled Ingress Filtering : enabled Acceptable Frame Type : untagged-only Ingress UnTagged VLAN (NATIVE) : 100 Trunking VLANs Enabled: Port is member in: Vlan Name Egress rule ----- 100 VLAN-one-hundred Untagged Forbidden VLANs: Vlan Name -----</pre>

switchport tunnel vlan

Syntax	switchport tunnel vlan <1-4094> no switchport tunnel vlan
Parameter	<1-4094> VLAN ID (e.g. 100)

Default	Default is vlan 1
Mode	Port Configuration
Usage	<p>Use the switchport tunnel vlan port configuration command to set dot1q tunnel vlan on interface. The vlan will be pvid on interface as well.</p> <p>Use the no form of this command to remove vlan on interface. The tunnel vlan id will set to reserve vlan 4095.</p> <p>You can verify your setting by entering the s show interfaces switchport Privileged EXEC command.</p>
Example	<p>This example sets Tunnel port gi10 native VLAN to 100.</p> <pre>SwitchEF0101(config)# interface GigabitEthernet 10 SwitchEF0101(config-if)# switchport mode tunnel SwitchEF0101(config-if)# switchport tunnel vlan 100 SwitchEF0101# show interfaces switchport GigabitEthernet 10 Port : gi10 Port Mode : Tunnel Gvrp Status : disabled Ingress Filtering : enabled Acceptable Frame Type : all Ingress UnTagged VLAN (NATIVE) : 100 Trunking VLANs Enabled: Port is member in: Vlan Name Egress rule ----- 100 VLAN-one-hundred Untagged Forbidden VLANs: Vlan Name -----</pre>

switchport trunk native vlan

Syntax	switchport trunk native vlan <1-4094> no switchport trunk native vlan
Parameter	<1-4094> VLAN ID (e.g. 100)
Default	Default is vlan 1
Mode	Port Configuration

Usage	<p>Use the switchport trunk native vlan port configuration command to set native vlan on interface.</p> <p>Use the no form of this command to restore to default vlan.</p> <p>You can verify your setting by entering the s show interfaces switchport Privileged EXEC command.</p>
--------------	--

Example	This example sets Trunk port fa10 native VLAN to 100.
----------------	---

```

SwitchEF0101(config)# interface GigabitEthernet 10
SwitchEF0101(config-if)# switchport mode trunk
SwitchEF0101(config-if)# switchport trunk native vlan 100
SwitchEF0101# show interfaces switchport GigabitEthernet 10
Port : gi10
Port Mode : Trunk
Gvrp Status : disabled
Ingress Filtering : enabled
Acceptable Frame Type : all
Ingress UnTagged VLAN ( NATIVE ) : 100
Trunking VLANs Enabled:
```

Port is member in:	
Vlan Name	Egress rule
<hr/>	
100	VLAN-one-hundred Untagged
<hr/>	
Forbidden VLANs:	
Vlan Name	
<hr/>	

switchport trunk allowed vlan

Syntax	switchport trunk allowed vlan (add remove) (VLAN-LIST all)
---------------	---

Parameter	<u>add</u> Specify which VLAN to add to the port. <u>remove</u> Specify the VLAN to remove from port <u>VLAN-LIST</u> VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094 <u>all</u>
Mode	Port Configuration

Usage	<p>Use the switchport trunk allow vlan add port configuration command to allow vlan on interface.</p> <p>Use the switchport trunk allow vlan remove port configuration command to remove vlan on interface.</p> <p>You can verify your setting by entering the s show interfaces switchport Privileged EXEC command.</p>
--------------	---

Example	This example sets Trunk port fa10 to add the allowed VLAN 100.
----------------	--

```

SwitchEF0101(config)# interface GigabitEthernet 10
SwitchEF0101(config-if)# switchport trunk allowed vlan add 100
SwitchEF0101# show interfaces switchport GigabitEthernet 10
Port : gi10
Port Mode : Trunk
Gvrp Status : disabled
Ingress Filtering : enabled
Acceptable Frame Type : all
Ingress UnTagged VLAN ( NATIVE ) : 1
Trunking VLANs Enabled: 100

Port is member in:
Vlan Name          Egress rule
-----
1 default          Untagged
100 VLAN-one-hundred Tagged

Forbidden VLANs:
Vlan   Name
-----
```

switchport default-vlan tagged

Syntax	switchport default-vlan tagged no switchport default-vlan tagged
---------------	---

Parameter	None
------------------	------

Default	Default is untagged
----------------	---------------------

Mode	Port Configuration
-------------	--------------------

Usage	Use the switchport default vlan tagged port configuration command to become default vlan tagged member. Use the no switchport default vlan tagged port configuration command to restore to default You can verify your setting by entering the s show interfaces switchport Privileged EXEC command
--------------	--

Example	This example sets Trunk port fa10 membership with the default VLAN to tag.
----------------	--

```

SwitchEF0101(config)# interface fa10
SwitchEF0101(config-if)# switchport default-vlan tagged
SwitchEF0101# show interfaces switchport fa10
Port : fa10
```

Port Mode : Hybrid
 Ingress Filtering : enabled
 Acceptable Frame Type : all
 Ingress UnTagged VLAN (NATIVE) : 1
 Trunking VLANs Enabled:

Port is member in:
 Vlan Name Egress rule

1 default Tagged

Forbidden VLANs:
 Vlan Name

switchport default-vlan tagged

Syntax

switchport default-vlan tagged
no switchport default-vlan tagged

Parameter

None

Default

Default is untagged

Mode

Port Configuration

Usage

Use the **switchport default vlan tagged** port configuration command to become default vlan tagged member.
 Use the **no switchport default vlan tagged** port configuration command to restore to default
 You can verify your setting by entering the **s show interfaces switchport Privileged EXEC** command

Example

This example sets Trunk port fa10 membership with the default VLAN to tag.

```
SwitchEF0101(config)# interface GigabitEthernet 10
SwitchEF0101(config-if)# switchport mode hybrid
SwitchEF0101(config-if)# switchport default-vlan tagged
SwitchEF0101# show interfaces switchport GigabitEthernet 10
Port : gi10
Port Mode : Hybrid
Gvrp Status : disabled
Ingress Filtering : enabled
Acceptable Frame Type : all
Ingress UnTagged VLAN ( NATIVE ) : 1
Trunking VLANs Enabled:
```

```

Port is member in:
Vlan  Name      Egress rule
-----
1   default    Tagged

Forbidden VLANs:
Vlan  Name
-----
```

switchport forbidden default-vlan

Syntax	switchport forbidden default-vlan no switchport forbidden default-vlan
Parameter	None
Default	Default is allowed
Mode	Port Configuration
Usage	<p>Use the switchport forbidden default-vlan port configuration command to forbid default-vlan on interface.</p> <p>Use the no switchport forbidden default-vlan port configuration command to restore to default</p> <p>You can verify your setting by entering the s show interfaces switchport Privileged EXEC command</p>
Example	<p>This example sets the membership of the default VLAN with port gi10 to forbidden.</p>

```

SwitchEF0101(config)# interface GigabitEthernet 10
SwitchEF0101(config-if)# switchport forbidden default-vlan
SwitchEF0101# show interfaces switchport GigabitEthernet 10
Port : gi10
Port Mode : Trunk
Gvrp Status : disabled
Ingress Filtering : enabled
Acceptable Frame Type : all
Ingress UnTagged VLAN ( NATIVE ) : 4095
Trunking VLANs Enabled:
```

```

Port is member in:
Vlan  Name      Egress rule
-----
1   default    Tagged

Forbidden VLANs:
Vlan  Name
-----
```

switchport forbidden vlan

Syntax

switchport forbidden vlan (add | remove) VLAN-LIST

Parameter

add	Specify which VLAN to add to the port.
remove	Specify the VLAN to remove from port
VLAN-LIST	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094

Default

No vlan is forbidden by default

Mode

Port Configuration

Usage

Use the **switchport forbidden vlan add** port configuration command to forbid vlan on interface.

Use the **switchport forbidden vlan remove** port configuration command to accept vlan on interface.

You can verify your setting by entering the **s show interfaces switchport Privileged EXEC** command

Example

This example sets the membership of the VLAN 100 with port gi10 to forbidden.

```
SwitchEF0101(config)# interface GigabitEthernet 10
SwitchEF0101(config-if)# switchport forbidden vlan add 100
SwitchEF0101# show interfaces switchport GigabitEthernet 10
Port : gi10
Port Mode : Trunk
Gvrp Status : disabled
Ingress Filtering : enabled
Acceptable Frame Type : all
Ingress UnTagged VLAN ( NATIVE ) : 1
Trunking VLANs Enabled: 100
```

Port is member in:

Vlan	Name	Egress rule
------	------	-------------

1	default	Untagged
---	---------	----------

Forbidden VLANs:

Vlan	Name
------	------

100	VLAN-one-hundred
-----	------------------

switchport vlan tpid

Syntax	switchport vlan tpid (0x8100 0x88a8 0x9100 0x9200)
Parameter	(0x8100 0x88a8 0x9100 0x9200) Tag-protocol-id (0x8100 0x88a8 0x9100 0x9200)
Default	Default TPID is 0x8100
Mode	Port Configuration
Usage	<p>Use the switchport vlan tpid port configuration command to set TPID on interface.</p> <p>You can verify your setting by entering the s show running-config Privileged EXEC command</p>
Example	<p>This example sets the TPID to 0x9100 on interface GigabitEthernet 10.</p> <pre>SwitchEF0101(config)# interface GigabitEthernet 10 SwitchEF0101(config-if)# switchport mode trunk uplink SwitchEF0101(config-if)# switchport vlan tpid 0x9100</pre>

management-vlan

Syntax	management-vlan vlan <1-4094> no management-vlan
Parameter	<1-4094> VLAN ID (e.g. 100)
Default	Default management vlan is 1.
Mode	Global Configuration
Usage	<p>Use the management vlan Global Configuration mode command to set management vlan id. Vlan id must be created first.</p> <p>Use the no form of this command to restore to default setting.</p> <p>You can verify your setting by entering the show management-vlan Privileged EXEC command</p>
Example	(1) The following example specifies that management vlan 2 is created Switch(config)#vlan 2

Switch(config)# management-vlan vlan 2
(2)The following example specifies that management-vlan is restored to be default VLAN.
Switch(config)# no management-vlan

show vlan

Syntax	show vlan [(VLAN-LIST dynamic static)]										
Parameter	<table border="0"> <tr> <td><u>VLAN-LIST</u></td><td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094</td></tr> <tr> <td><u>dynamic</u></td><td>Display dynamic entries</td></tr> <tr> <td><u>mac-vlan</u></td><td>MAC-based VLAN configuration</td></tr> <tr> <td><u>protocol-vlan</u></td><td>Protocol-based VLAN configuration</td></tr> <tr> <td><u>static</u></td><td>Display static entries</td></tr> </table>	<u>VLAN-LIST</u>	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094	<u>dynamic</u>	Display dynamic entries	<u>mac-vlan</u>	MAC-based VLAN configuration	<u>protocol-vlan</u>	Protocol-based VLAN configuration	<u>static</u>	Display static entries
<u>VLAN-LIST</u>	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094										
<u>dynamic</u>	Display dynamic entries										
<u>mac-vlan</u>	MAC-based VLAN configuration										
<u>protocol-vlan</u>	Protocol-based VLAN configuration										
<u>static</u>	Display static entries										
Default	Nones										
Mode	Privileged EXEC										
Usage	Display information about vlan entry										
Example	<p>The following example specifies that show vlan</p> <pre>Switch# show vlan VID VLAN Name Untagged Port Tagged Port Type -----+-----+-----+-----+-----+ 1 default fa1-8,fa10-48,lag1-8 --- ... Default 100 VLAN-one-hundred --- --- Static 101 VLAN101 --- --- Static 102 VLAN102 --- --- Static</pre>										

show vlan interface membership

Syntax	show vlan VLAN-LIST interfaces IF_PORTS membership				
Parameter	<table border="0"> <tr> <td><u>VLAN-List</u></td><td>VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094</td></tr> <tr> <td><u>IF_PORTS</u></td><td>Specify interface is to show</td></tr> </table>	<u>VLAN-List</u>	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094	<u>IF_PORTS</u>	Specify interface is to show
<u>VLAN-List</u>	VLAN List (e.g. 3,6-8): The range of VLAN ID is 1 to 4094				
<u>IF_PORTS</u>	Specify interface is to show				
Default	Nones				
Mode	Privileged EXEC				
Usage	Display information about vlan membership on interfaces.				

Example	The following example specifies that show vlan interface membership Switch# show vlan 100 interfaces GigabitEthernet 10 membership
----------------	--

```
VLAN ID : 100
VLAN Type : Static
-----
Port | Membership
-----
gi 10 | Forbidden
-----
```

show interface switchport

Syntax	show interface switchport IF_PORTS
---------------	---

Parameter	IF_PORTS Gigabit ethernet interface to configure
------------------	---

Default	None
----------------	------

Mode	Privileged EXEC
-------------	-----------------

Usage	Display information about default vlan
--------------	--

Example	The following example specifies that show interfacce switchport.
----------------	--

```
SwitchEF0101(config)# interface GigabitEthernet 10
SwitchEF0101(config-if)# switchport trunk allowed vlan add 100
SwitchEF0101# show interfaces switchport GigabitEthernet 10
Port : gi10
Port Mode : Trunk
Ingress Filtering : enabled
Acceptable Frame Type : all
Ingress UnTagged VLAN ( NATIVE ) : 1
Trunking VLANs Enabled: 100
```

Port is member in:

Vlan	Name	Egress rule
------	------	-------------

1	default	Untagged
100	VLAN-one-hundred	Tagged

Forbidden VLANs:

Vlan	Name
------	------

show management-vlan

Syntax	show management-vlan
---------------	-----------------------------

Parameter	None
------------------	------

Default	Nones
----------------	-------

Mode	Privileged EXEC
-------------	-----------------

Usage	Display information about management vlan
--------------	---

Example	The following example specifies that show management vlan Switch(config)# show management-vlan Management VLAN-ID : default(1)
----------------	--

36. Voice VLAN

voice-vlan (Global)

Syntax	voice-vlan no voice-vlan
---------------	---

Parameter	
------------------	--

Default	Voice VLAN is disabled
----------------	------------------------

Mode	Global Configuration
-------------	----------------------

Usage	Use the voice vlan global configuration command to enable the functional Voice VLAN on the device. Use the no form of this command to disable voice vlan function. You can verify your setting by entering the show voice vlan Privileged EXEC command.
--------------	--

Example	The following example shows how to enable voice vlan.
----------------	---

	Switch(config)# voice-vlan Switch# show voice-vlan Administate Voice VLAN state : enabled Voice VLAN ID : 2
--	--

Voice VLAN Aging : 1440 minutes
 Voice VLAN CoS : 6
 Voice VLAN 1p Remark: disabled

voice-vlan (Interface)

Syntax	voice-vlan no voice-vlan																																						
Parameter	N/A																																						
Default	The default all port admin-status is disabled.																																						
Mode	Interface Configuration																																						
Usage	<p>Use the voice vlan Interface configuration command to enable OUI voice VLAN configuration on an interface</p> <p>Use the no form of this command to disable voice vlan on an interfaces</p> <p>You can verify your setting by entering the show voice vlan Privileged EXEC command</p>																																						
Example	<p>The following example how to enable voice VLAN function in oui mode on an interface</p> <pre>Switch(config)#interface range GigabitEthernet 1-3 Switch(config-if)#voice-vlan Switch# show voice-vlan interfaces GigabitEthernet 1-8 Voice VLAN Aging : 1440 minutes Voice VLAN CoS : 6 Voice VLAN 1p Remark: disabled</pre> <p>OUI table</p> <table border="1"> <thead> <tr> <th>OUI MAC</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>00:E0:BB</td> <td>3COM</td> </tr> <tr> <td>00:03:6B</td> <td>Cisco</td> </tr> <tr> <td>00:E0:75</td> <td>Veritel</td> </tr> <tr> <td>00:D0:1E</td> <td>Pingtel</td> </tr> <tr> <td>00:01:E3</td> <td>Siemens</td> </tr> <tr> <td>00:60:B9</td> <td>NEC/Philips</td> </tr> <tr> <td>00:0F:E2</td> <td>H3C</td> </tr> <tr> <td>00:09:6E</td> <td>Avaya</td> </tr> </tbody> </table> <p>Port State Port Mode Cos Mode</p> <table border="1"> <thead> <tr> <th>Port</th> <th>State</th> <th>Port Mode</th> <th>Cos Mode</th> </tr> </thead> <tbody> <tr> <td>gi1</td> <td>Enabled</td> <td>Auto</td> <td>Src</td> </tr> <tr> <td>gi2</td> <td>Enabled</td> <td>Auto</td> <td>Src</td> </tr> <tr> <td>gi3</td> <td>Enabled</td> <td>Auto</td> <td>Src</td> </tr> <tr> <td>gi4</td> <td>Disabled</td> <td>Auto</td> <td>Src</td> </tr> </tbody> </table>	OUI MAC	Description	00:E0:BB	3COM	00:03:6B	Cisco	00:E0:75	Veritel	00:D0:1E	Pingtel	00:01:E3	Siemens	00:60:B9	NEC/Philips	00:0F:E2	H3C	00:09:6E	Avaya	Port	State	Port Mode	Cos Mode	gi1	Enabled	Auto	Src	gi2	Enabled	Auto	Src	gi3	Enabled	Auto	Src	gi4	Disabled	Auto	Src
OUI MAC	Description																																						
00:E0:BB	3COM																																						
00:03:6B	Cisco																																						
00:E0:75	Veritel																																						
00:D0:1E	Pingtel																																						
00:01:E3	Siemens																																						
00:60:B9	NEC/Philips																																						
00:0F:E2	H3C																																						
00:09:6E	Avaya																																						
Port	State	Port Mode	Cos Mode																																				
gi1	Enabled	Auto	Src																																				
gi2	Enabled	Auto	Src																																				
gi3	Enabled	Auto	Src																																				
gi4	Disabled	Auto	Src																																				

gi5	Disabled	Auto	Src
gi6	Disabled	Auto	Src
gi7	Disabled	Auto	Src
gi8	Disabled	Auto	Src

voice-vlan vlan

Syntax **voice-vlan vlan <2-4094>**
no voice-vlan vlan

Parameter **<2-4094>** Specify the voice vlan Identifier

Default The default Voice VLAN ID is None.

Mode Global Configuration

Usage Use the **voice vlan id** global configuration command to configure the VLAN identifier of the voice VLAN statically.
 Use the **no** form of this command to restore voice vlan id to default.
 You can verify your setting by entering the **show voice vlan Privileged EXEC** command

Example The following example shows how to set Voice vlan id. The vlan id must be created first.

```
Switch(config)# voice-vlan vlan 128
Switch# show voice-vlan
Administate Voice VLAN state : enabled
Voice VLAN ID      : 128
Voice VLAN Aging   : 1440 minutes
Voice VLAN CoS     : 6
Voice VLAN 1p Remark: disabled
```

voice-vlan oui-table

Syntax **voice-vlan oui-table A:B:C [DESCRIPTION]**
no voice-vlan oui-table [A:B:C]

Parameter **A:B:C** OUI address(xx:xx:xx)
DESCRIPTION OUI description string

Default The system default has 8 oui addresses.

Mode	Global Configuration																																								
Usage	<p>Use the voice vlan oui-table global configuration command to add oui mac address to OUI Table</p> <p>Use the no form of this command to remove all or specified oui mac address.. You can verify your setting by entering the show voice vlan Privileged EXEC command</p>																																								
Example	<p>This following example shows how to add OUI Mac.</p> <pre>Switch(config)# voice-vlan oui-table 00:01:02 "Test" Switch# show voice-vlan interfaces 1-28 Voice VLAN Aging : 1440 minutes Voice VLAN CoS : 6 Voice VLAN 1p Remark: disabled</pre> <p>OUI table</p> <table border="1"> <thead> <tr> <th>OUI MAC</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>00:E0:BB</td><td> 3COM</td></tr> <tr><td>00:03:6B</td><td> Cisco</td></tr> <tr><td>00:E0:75</td><td> Veritel</td></tr> <tr><td>00:D0:1E</td><td> Pingtel</td></tr> <tr><td>00:01:E3</td><td> Siemens</td></tr> <tr><td>00:60:B9</td><td> NEC/Philips</td></tr> <tr><td>00:0F:E2</td><td> H3C</td></tr> <tr><td>00:09:6E</td><td> Avaya</td></tr> <tr><td>00:01:02</td><td> Test</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Port</th> <th>State</th> <th>Port Mode</th> <th>Cos Mode</th> </tr> </thead> <tbody> <tr><td>gi1</td><td>Disabled</td><td>Auto</td><td>Src</td></tr> <tr><td>gi2</td><td>Disabled</td><td>Auto</td><td>Src</td></tr> <tr><td>gi3</td><td>Disabled</td><td>Auto</td><td>Src</td></tr> <tr><td>.....</td><td></td><td></td><td></td></tr> </tbody> </table>	OUI MAC	Description	00:E0:BB	3COM	00:03:6B	Cisco	00:E0:75	Veritel	00:D0:1E	Pingtel	00:01:E3	Siemens	00:60:B9	NEC/Philips	00:0F:E2	H3C	00:09:6E	Avaya	00:01:02	Test	Port	State	Port Mode	Cos Mode	gi1	Disabled	Auto	Src	gi2	Disabled	Auto	Src	gi3	Disabled	Auto	Src			
OUI MAC	Description																																								
00:E0:BB	3COM																																								
00:03:6B	Cisco																																								
00:E0:75	Veritel																																								
00:D0:1E	Pingtel																																								
00:01:E3	Siemens																																								
00:60:B9	NEC/Philips																																								
00:0F:E2	H3C																																								
00:09:6E	Avaya																																								
00:01:02	Test																																								
Port	State	Port Mode	Cos Mode																																						
gi1	Disabled	Auto	Src																																						
gi2	Disabled	Auto	Src																																						
gi3	Disabled	Auto	Src																																						
.....																																									

voice-vlan cos (Global)

Syntax	voice-vlan cos <0-7> [remark] no voice-vlan cos				
Parameter	<table border="0"> <tr> <td><0-7></td> <td>Specify the voice VLAN Class of Service</td> </tr> <tr> <td>remark</td> <td>voice VLAN Remark setting</td> </tr> </table>	<0-7>	Specify the voice VLAN Class of Service	remark	voice VLAN Remark setting
<0-7>	Specify the voice VLAN Class of Service				
remark	voice VLAN Remark setting				
Default	The default cos value is 6, remark is disabled.				
Mode	Global Configuration				

Usage	Use the voice vlan cos global configuration command to configure the voice VLAN cos value and 1p remark function Use the “ no ” form to restore to default mode. You can verify your setting by entering the show voice vlan Privileged EXEC command
--------------	---

Example	The following example show how to set cos value and enable 1p remark function Switch(config)# voice-vlan cos 7 remark Switch# show voice-vlan Administate Voice VLAN state : disabled Voice VLAN ID : 128 Voice VLAN Aging : 1440 minutes Voice VLAN CoS : 7 Voice VLAN 1p Remark: enabled
----------------	---

voice-vlan cos (Interface)

Syntax	voice-vlan cos (src all) no voice-vlan cos
---------------	---

Parameter	src QoS attributes are applied to packets from IP phones All QoS attributes are applied on all packets that are classified to the Voice VLAN.
------------------	--

Default	The default all port in Src mode.
----------------	-----------------------------------

Mode	Interface configuration
-------------	-------------------------

Usage	Use the voice vlan cos Interface configuration command to configure OUI voice VLAN cos mode configuration on an interface Use the “ no ” form to restore to default mode. You can verify your setting by entering the show voice-vlan interfaces Privileged EXEC command
--------------	---

Example	The following example how to configure voice packet QoS attributes on an interface Switch(config)# interface range GigabitEthernet 1-3 Switch(config-if)# voice-vlan cos all Switch# show voice-vlan interfaces GigabitEthernet 1-8 Voice VLAN Aging : 1440 minutes Voice VLAN CoS 7 Voice VLAN 1p Remark: enabled
----------------	---

OUI table
OUI MAC | Description

00:E0:BB 3COM
00:03:6B Cisco
00:E0:75 Veritel
00:D0:1E Pingtel
00:01:E3 Siemens
00:60:B9 NEC/Philips
00:0F:E2 H3C
00:09:6E Avaya
Port State Port Mode Cos Mode
-----+-----+-----+-----
gi1 Disabled Auto All
gi2 Disabled Auto All
gi3 Disabled Auto All
gi4 Disabled Auto Src
gi5 Disabled Auto Src
gi6 Disabled Auto Src
gi7 Disabled Auto Src
gi8 Disabled Auto Src

voice-vlan mode

Syntax

voice-vlan mode (auto|manual)
no voice-vlan mode

Parameter

auto	Voice Member Port Join Voice VLAN Automatically
manual	Voice Member Port Join Voice VLAN Manually By Administrator.

Default

The default is auto mode.

Mode

Interface Configuration

Usage

Use the **voice-vlan mode** global configuration command to configure the voice VLAN mode for interface.
Use the “**no**” form to restore to default mode.
You can verify your setting by entering the **show voice-vlan interfaces Privileged EXEC** command.

Example

```
The following example how to configure voice mode to manual
Switch(config)#interface range GigabitEthernet 1-3
Switch(config-if)#voice-vlan mode manaul
Switch# show voice-vlan interfaces GigabitEthernet 1-8
Voice VLAN Aging : 1440 minutes
Voice VLAN CoS : 7
Voice VLAN 1p Remark: enabled
```

OUI table			
OUI MAC	Description		
00:E0:BB	3COM		
00:03:6B	Cisco		
00:E0:75	Veritel		
00:D0:1E	Pingtel		
00:01:E3	Siemens		
00:60:B9	NEC/Philips		
00:0F:E2	H3C		
00:09:6E	Avaya		

Port	State	Port Mode	Cos Mode
gi1	Disabled	Manual	Src
gi2	Disabled	Manual	Src
gi3	Disabled	Manual	Src
gi4	Disabled	Auto	Src
gi5	Disabled	Auto	Src
gi6	Disabled	Auto	Src
gi7	Disabled	Auto	Src
gi8	Disabled	Auto	Src

voice-vlan aging-time

Syntax	voice-vlan aging-time <30-65536> no voice-vlan aging-time
Parameter	<30-65536> Specify the aging time in minutes
Default	The default aging-timeout value is 1440 minutes
Mode	Global Configuration
Usage	Use the voice vlan aging-time global configuration command to configure the voice VLAN aging timeout. Use the “ no ” form to restore to default time. You can verify your setting by entering the show voice vlan Privileged EXEC command
Example	The following example shows how to set aging time. Switch(config)# voice-vlan aging-time 720 Switch# show voice-vlan Administate Voice VLAN state : disabled

Voice VLAN ID	1
Voice VLAN Aging	: 720 minutes
Voice VLAN CoS	5
Voice VLAN 1p Remark: enabled	

show voice-vlan

Syntax	show voice-vlan show voice-vlan interfaces [IF_PORTS]																
Parameter	IF_PORTS Specifies interfaces to display voice VLAN settings in oui mode																
Default	N/A																
Mode	Privileged EXEC																
Usage	Use the show voice vlan command in EXEC mode to display the voice VLAN status for all interfaces or for a specific interface if the voice VLAN type is OUI																
Example	<p>The following example show how to display voice vlan oui mode settings</p> <pre>Switch# show voice-vlan</pre> <p>Administrate Voice VLAN state : disabled Voice VLAN ID : none (disable) Voice VLAN Aging : 720 minutes Voice VLAN CoS 6 Voice VLAN 1p Remark: disabled</p> <pre>Switch# show voice-vlan interfaces GigabitEthernet1-4</pre> <p>Voice VLAN Aging : 720 minutes Voice VLAN CoS 5 Voice VLAN 1p Remark: enabled</p> <p>OUI table</p> <table border="1"> <thead> <tr> <th>OUI MAC</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>00:E0:BB</td><td> 3COM</td></tr> <tr><td>00:03:6B</td><td> Cisco</td></tr> <tr><td>00:E0:75</td><td> Veritel</td></tr> <tr><td>00:D0:1E</td><td> Pingtel</td></tr> <tr><td>00:01:E3</td><td> Siemens</td></tr> <tr><td>00:60:B9</td><td> NEC/Philips</td></tr> <tr><td>00:0F:E2</td><td> H3C</td></tr> </tbody> </table>	OUI MAC	Description	00:E0:BB	3COM	00:03:6B	Cisco	00:E0:75	Veritel	00:D0:1E	Pingtel	00:01:E3	Siemens	00:60:B9	NEC/Philips	00:0F:E2	H3C
OUI MAC	Description																
00:E0:BB	3COM																
00:03:6B	Cisco																
00:E0:75	Veritel																
00:D0:1E	Pingtel																
00:01:E3	Siemens																
00:60:B9	NEC/Philips																
00:0F:E2	H3C																

00:09:6E | Avaya

Port	State	Port Mode	Cos Mode
gi1	Disabled	Auto	Src
gi2	Disabled	Auto	Src
gi3	Disabled	Auto	Src
gi4	Disabled	Auto	Src

37. PoE

PoE Status Information

Syntax **show poe interface status**

Parameter	interface	Interface specific description
------------------	-----------	--------------------------------

Default	N/A
----------------	-----

Mode	Privileged EXEC
-------------	-----------------

Usage	Use the show poe interface status command in EXEC mode to display the poe status.
--------------	--

Example	The following example show how to display poe status mode Switch# show poe interface status
----------------	--

Interface	PoE Control	PoE Detection	Limit Power	Current Power	Priority	PD Class
gi1	Enable	Disable	32W	0.0W	Low	N/A
gi2	Enable	Disable	32W	0.0W	Low	N/A
gi3	Enable	Disable	32W	0.0W	Low	N/A
gi4	Enable	Disable	32W	0.0W	Low	N/A
gi5	Enable	Disable	32W	0.0W	Low	N/A
gi6	Enable	Disable	32W	0.0W	Low	N/A
gi7	Enable	Disable	32W	0.0W	Low	N/A
gi8	Enable	Disable	32W	0.0W	Low	N/A
gi9	Enable	Disable	32W	0.0W	Low	N/A
gi10	Enable	Disable	32W	0.0W	Low	N/A
gi11	Enable	Disable	32W	0.0W	Low	N/A
gi12	Enable	Disable	32W	0.0W	Low	N/A
gi13	Enable	Disable	32W	0.0W	Low	N/A
gi14	Enable	Disable	32W	0.0W	Low	N/A

gi15	Enable	Disable	32W	0.0W	Low	N/A
gi16	Enable	Disable	32W	0.0W	Low	N/A
gi17	Enable	Disable	32W	0.0W	Low	N/A
gi18	Enable	Disable	32W	0.0W	Low	N/A
gi19	Enable	Disable	32W	0.0W	Low	N/A
gi20	Enable	Disable	32W	0.0W	Low	N/A
gi21	Enable	Disable	32W	0.0W	Low	N/A
gi22	Enable	Disable	32W	0.0W	Low	N/A
gi23	Enable	Disable	32W	0.0W	Low	N/A
gi24	Enable	Disable	32W	0.0W	Low	N/A

PoE powersupply

Syntax **show poe powersupply**

Parameter	powersupply	Power supply info
------------------	-------------	-------------------

Default	N/A
----------------	-----

Mode	Privileged EXEC
-------------	-----------------

Usage	Use the show poe powersupply command in EXEC mode to display the poe status.
--------------	---

Example	The following example show how to display poe status mode Switch# show poe powersupply
----------------	---

```

POE Work Status      : online
PoE Port Number     : 24
PoE Support Type    : 802.3af/802.3at
PoE Hardware Version : V1.0
PoE MCU Software Version : 2.0
PoE Voltage          : 54.7V
PoE Total Power      : 300W
PoE Consumption Power : 0.0W
PoE Chip Temperature Info:
-----
```

```
PoE ChipNumber Temperature
```

```

1      61
2      58
3      55
-----
```

PoE port

Syntax	poe enable																																																																																																																																												
Parameter	<table border="1"> <tr> <td>enable</td> <td>enable power on port.</td> </tr> <tr> <td>max_power</td> <td>port max power</td> </tr> <tr> <td>Priority</td> <td>PoE priority for port</td> </tr> </table>	enable	enable power on port.	max_power	port max power	Priority	PoE priority for port																																																																																																																																						
enable	enable power on port.																																																																																																																																												
max_power	port max power																																																																																																																																												
Priority	PoE priority for port																																																																																																																																												
Default	Default is enabled																																																																																																																																												
Mode	Port Configuration																																																																																																																																												
Usage	<p>Use the poe enable port configuration command to set enable power on port.</p> <p>Use the no form of this command to set disabled power on port.</p> <p>You can verify your setting by entering the show poe interface status EXEC command.</p>																																																																																																																																												
Example	<p>This example sets poe port GigabitEthernet 10 power to disabled.</p> <pre>Switch(config)# interface GigabitEthernet 10 Switch(config-if)# no poe enable Switch# show poe interface status</pre> <table border="1"> <thead> <tr> <th>Interface</th> <th>PoE Control</th> <th>PoE Detection</th> <th>Limit Power</th> <th>Current Power</th> <th>Priority</th> <th>PD Class</th> </tr> </thead> <tbody> <tr> <td>gi1</td> <td>Disable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi2</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi3</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi4</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi5</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi6</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi7</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi8</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi9</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi10</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi11</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi12</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi13</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi14</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi15</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi16</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi17</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi18</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> <tr> <td>gi19</td> <td>Enable</td> <td>Disable</td> <td>32W</td> <td>0.0W</td> <td>Low</td> <td>N/A</td> </tr> </tbody> </table>	Interface	PoE Control	PoE Detection	Limit Power	Current Power	Priority	PD Class	gi1	Disable	Disable	32W	0.0W	Low	N/A	gi2	Enable	Disable	32W	0.0W	Low	N/A	gi3	Enable	Disable	32W	0.0W	Low	N/A	gi4	Enable	Disable	32W	0.0W	Low	N/A	gi5	Enable	Disable	32W	0.0W	Low	N/A	gi6	Enable	Disable	32W	0.0W	Low	N/A	gi7	Enable	Disable	32W	0.0W	Low	N/A	gi8	Enable	Disable	32W	0.0W	Low	N/A	gi9	Enable	Disable	32W	0.0W	Low	N/A	gi10	Enable	Disable	32W	0.0W	Low	N/A	gi11	Enable	Disable	32W	0.0W	Low	N/A	gi12	Enable	Disable	32W	0.0W	Low	N/A	gi13	Enable	Disable	32W	0.0W	Low	N/A	gi14	Enable	Disable	32W	0.0W	Low	N/A	gi15	Enable	Disable	32W	0.0W	Low	N/A	gi16	Enable	Disable	32W	0.0W	Low	N/A	gi17	Enable	Disable	32W	0.0W	Low	N/A	gi18	Enable	Disable	32W	0.0W	Low	N/A	gi19	Enable	Disable	32W	0.0W	Low	N/A
Interface	PoE Control	PoE Detection	Limit Power	Current Power	Priority	PD Class																																																																																																																																							
gi1	Disable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi2	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi3	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi4	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi5	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi6	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi7	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi8	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi9	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi10	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi11	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi12	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi13	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi14	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi15	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi16	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi17	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi18	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							
gi19	Enable	Disable	32W	0.0W	Low	N/A																																																																																																																																							

gi20	Enable	Disable	32W	0.0W	Low	N/A
gi21	Enable	Disable	32W	0.0W	Low	N/A
gi22	Enable	Disable	32W	0.0W	Low	N/A
gi23	Enable	Disable	32W	0.0W	Low	N/A
gi24	Enable	Disable	32W	0.0W	Low	N/A

38. Onvif

Onvif server

Syntax	onvif server enable
Parameter	enable Enable onvif detect device
Default	Default is disabled
Mode	Privileged EXEC
Usage	Use the Onvif server enable command in EXEC mode to set the onvif server enable. You can verify your setting by entering the show onvif server EXEC Command .
Example	The following example show how to set onvif detect device enable Switch(config)# onvif server enable Switch# show onvif server Onvif server status:Enable

Onvif detect

Syntax	onvif detect enable
Parameter	enable Enable onvif detect device
Default	Default is disabled
Mode	Privileged EXEC

Command Line Interface

User Guide

Usage	Use the Onvif detect enable command in EXEC mode to set the onvif detect device enable.
	You can verify your setting by entering the show onvif detect database EXEC Command.
Example	The following example show how to set onvif detect enable Switch(config)# onvif detect enable Switch# show onvif detect database

Mac address IP address	Interface	Model	Description	Location
a4:14:37:77:41:45 192.168.19.26	gi4	DS-2DE4220IW-DE	HIKVISION%20DS-2DE4220IW-DE	city/hangzhou
4c:bd:8f:9d:1f:66 192.168.19.29	gi4	DS-7932N-K4	Network%20Video%20Recorder	country/china

Total : 2